

VTM Series

Multi-Format 3Gb/s, HD-SDI, SD-SDI Monitor Installation and Operation Handbook

Printed November 2008

Item #061778 Rev. H

Copyright © 2006 - 2008 by Harris Corporation.

All rights reserved.

Contents of this publication may not be reproduced in any form without permission of Harris Corporation.

This instrument, in whole or in part, may be protected by one or more US (US Patent 6,069,607) or foreign patents or patent applications.

Specifications subject to change without notice.

IBM is a registered trademark of International Business Machines Corporation

PS2 is a registered trademark of International Business Machines Corporation

Dolby, AC-3, Dolby E, and the double D symbol are registered trademarks of Dolby Laboratories

Videotek and the Videotek logo are registered trademarks of Harris Corporation.

CineSound is a registered trademark of Harris Corporation.

IntelliMouse is a registered trademark of Microsoft Corporation

Operator's Safety Summary



WARNING: These instructions are for use by qualified personnel only. To reduce the risk of electric shock, do not perform this installation or any servicing unless you are qualified to do so. Refer all servicing to qualified service personnel.

Ensuring Safety

- The unit should not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the unit.
- When the unit is to be permanently cabled, connect the protective ground conductor *before* making any other connections.
- Operate built-in units only when they are properly fitted into the system.
- For permanently cabled units without built-in fuses, automatic switches, or similar protective facilities, the AC supply line must be fitted with fuses rated to the units.
- Before switching on the unit, ensure that the operating voltage set at the unit matches the line voltage, if appropriate. If a different operating voltage is to be set, use a fuse with the appropriate rating. Refer to the Installation Instructions.
- Units of Protection Class I with an AC supply cable and plug that can be disconnected must be operated only from a power socket with protective ground contact:
 - Do not use an extension cable—it can render the protective ground connection ineffective.
 - Do not intentionally interrupt the protective ground conductor.
 - Do not break the protective ground conductor inside or outside the unit or loosen the protective ground connection; such actions can cause the unit to become electrically hazardous.
- Before opening the unit, isolate it from the AC supply. Then ensure that:
 - Adjustments, part replacements, maintenance, and repairs are carried out by qualified personnel only.
 - Safety regulations and rules are observed to prevent accidents.
 - Only original parts are used to replace parts relevant to safety (for example, the power on/off switches, power transformers, and fuses).
- Replaceable fuses can be hazardous when live. Before replacing a fuse, disconnect the AC power source.
- Use caution when cleaning the equipment; isopropyl alcohol or similar solvents can damage or remove the labels.
- Observe any additional safety instructions specified in this manual.

Explanation of Symbols

These symbols may appear on Harris equipment:



Read the *Operator's Handbook* or the *Service and Instruction Manual* and observe the safety symbols used.



Caution: shock hazard



Protective ground connection



Unit ground



Equipotentiality



Ground

Directives and Compliances

This section provides information concerning Harris Corporation compliance with EU Directive 2002/95/EC and EU Directive 2002/96/EC.

Restriction on Hazardous Substances (RoHS) Directive 2002/95/EC

Directive 2002/95/EC—commonly known as the European Union (EU) Restriction on Hazardous Substances (RoHS)—sets limits on the use of certain substances found in electrical and electronic equipment. The intent of this legislation is to reduce the amount of hazardous chemicals that may leach out of landfill sites or otherwise contaminate the environment during end-of-life recycling. The Directive, which took effect on July 1, 2006, refers to the following hazardous substances:

- Lead (Pb)
- Mercury (Hg)
- Cadmium (Cd)
- Hexavalent Chromium (Cr-VI)
- Polybrominated Biphenyls (PBB)
- Polybrominated Diphenyl Ethers (PBDE)

In accordance with this EU Directive, all Harris products sold in the European Union will be fully RoHS-compliant and “lead-free.” (See the Harris Premier website for more information on dates and deadlines for compliance.) Spare parts supplied for the repair and upgrade of equipment sold before July 1, 2006 are exempt from the legislation. Harris equipment that complies with the EU directive will be marked with a RoHS-compliant symbol, as shown in **Figure 1**.

Figure 1. RoHS Compliance Symbol




Waste from Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC

The European Union (EU) Directive 2002/96/EC on Waste from Electrical and Electronic Equipment (WEEE) deals with the collection, treatment, recovery, and recycling of electrical and electronic waste products. The objective of the WEEE Directive is to assign the responsibility for the disposal of associated hazardous waste to either the producers or users of these products. As of August 13, 2005, producers or users are required to recycle electrical and electronic equipment at end of its useful life, and must not dispose of the equipment in landfills or by using other unapproved methods. (Some EU member states may have different deadlines.)

In accordance with this EU Directive, Harris Corporation and other companies selling electric or electronic devices in the EU will affix labels indicating that such products must be properly recycled.

(See the Harris Premier website for more information on dates and deadlines for compliance.) Contact your local Harris sales representative for information on returning these products for recycling. Harris equipment that complies with the EU directive will be marked with a WEEE-compliant symbol, as shown in **Figure 2**.

Figure 2. WEEE Compliance Symbol

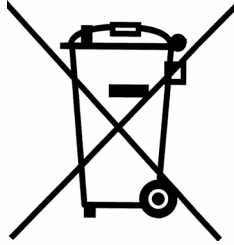

Contents

Operator's Safety Summary.....	iii
Ensuring Safety	iii
Explanation of Symbols	iv
 Directives and Compliances	 v
Restriction on Hazardous Substances (RoHS) Directive 2002/95/EC	v
Waste from Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC	v
 Section 1 ♦ Introduction	 1
Product Description	1
Standard Features.....	1
Applications.....	2
VTM Series Configuration.....	2
Console	2
Graphics Engines (requires one)	3
Audio Options (supports one).....	3
Video Input Options (supports two).....	4
Auxiliary Options	5
VTM Package Configurations.....	5
Video Standards Supported	6
Front and Back Panels	10
Service and Support.....	11
 Section 2 ♦ Installation	 13
Inspecting the Shipment	13
Rack Mounting the Unit	14
Connecting the Unit.....	15
Ethernet Setup	16
Configuring the VTM Series for Remote Control.....	18
Configuring VTM/TVM Series Units with the RCU 1000 Remote Control.....	18
Using the Bypass Feature	20
 Section 3 ♦ General Operation.....	 21
Terms.....	21
Introduction to Operating the VTM Series	21
Types of Controls	22

Contents

Front Panel Illumination.....	22
Sleep Mode.....	24
Selecting a Pane	24
Full-Screen Display Selection.....	24
Selecting an Input for a Pane.....	25
Format Mismatch Message	25
Linking Panes	25
Selecting the Function for the Pane	25
Function Not Allowed Message	25
Option Not Installed Message.....	25
Navigating the Pane Setup Menu	26
External Reference	27
External Reference	27
EXT Setup	28
Pane Overview.....	28
Main Title Bar.....	28
Icons	29
Status Bar.....	29
The Waveform Display	29
Waveform Front Panel Selections	33
Moving the Waveform using the Setup Knobs.....	33
Sweep Buttons	33
Gain Buttons.....	35
Placing the Waveform Display in Line Select Mode.....	36
Waveform Cursor Selections.....	37
Waveform Pane Menu Selections	38
Filter Selection.....	40
Parade and Overlay Selections.....	40
HD or SD Format.....	40
Blanking (SDI Signals only).....	41
Component Sequence (SDI Signals only)	41
Center Waveform.....	41
Waveform Setup.....	41
Utilizing the Eye Display (TVM-VTM-EYE-H, TVM-VTM-EYE-S, VTM4100PKG-EH, VTM4140PKG-EH, VTM4140PKG-ES).....	41
Eye Pattern Observation	43
Eye Pattern Rise Time	44
Jitter Meter and Eye Pattern Correlation.....	44
Horizontal Magnification and Zoom in Eye Pattern Mode.....	44

Contents

Eye Pattern Cursor Selections.....	44
Eye Pattern Pane Menu Selections	46
Jitter High Pass Filter (HPF) Selection.....	46
Trigger Mode.....	47
Eye Pattern Setup.....	47
Utilizing the EYE and Jitter Displays (TVM-VTM-JEM, VTM9100PKG-EJ, and VTM9140PKG-EJ only).....	47
Eye Pattern Observation	52
Eye Pattern Parameters	53
Jitter Meter and Eye Pattern Correlation	53
Horizontal Magnification and Zoom in Eye Pattern Mode	53
Eye Pattern Cursor Selections.....	54
Eye Pattern and Jitter Pane Menu Selections	55
Jitter High Pass Filter (HPF) Selection.....	56
Trigger Mode.....	56
Jitter Waveform Mode	57
Eye Pattern Setup.....	57
Utilizing the Vector Display	57
Controlling the Vector.....	62
Gain Buttons.....	62
Placing the Vector Display in Line Select Mode	63
Vector Cursor Selections.....	64
Vector Pane Menu Selections	65
Standard.....	66
Scaled to Composite (SD and HD only).....	66
Vector Position (Centering the Vector).....	66
Vector Setup.....	66
Gamut Display.....	67
Composite Gamut	68
RGB Gamut Display.....	70
Placing the Gamut Display in Line Select Mode.....	71
Gamut Zoom.....	72
Gamut Pane Menu Selections	72
Color Space.....	73
Gamut Setup.....	73
Picture Display	73
Picture Pane Menu Selections.....	74
Native Mode.....	75
Delay	75

Contents

Gamut Highlighting	76
Picture Setup	76
Closed Caption	76
Timing Display	77
Things to Remember When Using the Timing Display	79
Timing Pane Menu Selections	80
Reference Selection	80
Timing Mode	80
Alarm Display	81
Alarm Log Display	81
Alarm Status Display	83
Alarm Log and Status Pane Menu Selections	85
Display	85
Alarm Log Display	85
Mute Alarms	85
Video Alarm Analog	86
Video Alarm Digital	86
Audio Alarms	86
Audio Display	86
Audio Scales	87
Vertical Audio Displays	87
CineSound Display	93
Loudness Display	96
Expanding the Audio Display	97
Audio Menu Selections	97
Audio Input Check	98
Lissajous	98
V2A Timing Display (VTM-A3-OPT V2A only)	98
Audio Setup	98
Option Display	98
Display	99
Option Setup	99
Dolby Metadata Display (Option Dependent)	99
Video Metadata	102
XDS	104
Teletext	105
CRC	105
ASI (Option TVM-VTM-ASI only)	107

Contents

ATSC Stream Formats	108
DVB Stream Formats	109
Bandwidth and Trending Screen	109
ASI Menu Selections.....	110
Embedded Audio Data	111
Multi-Screen Display Selection	112
VTM Classic.....	112
Data Analyzer Display (SD-SDI and HD-SDI Only) (TVM-VTM-AAP or VTM-40 Option)	115
Pixel Cursor	116
Data Display Pop-up Menu.....	117
Trigger on Alarm	118
Data Display Format	118
Pixel Group Display.....	118
Navigation Mode	118
Data Search (SD-SDI and HD-SDI only).....	119
Custom Data Search.....	120
Data Analyzer Display (TVM-VTM-3GB Option).....	120
Timing Custom Display.....	123
WFM/VEC Only Display (Dual-Screen Display)	123
3Gb/s WFM/VEC Mode (with TVM-VTM-3GB only)	124
The 3 Gb/s WFM/VEC Mode Display.....	124
Using the TVM-VTM-3GB as a Monitor.....	125
Using the TVM-VTM-3GB as a Test Signal Generator	125
Presets.....	126
Storing Presets	126
Recalling Presets	127
Preset *8 (Factory Preset)	127
Preset Setup Menu.....	127
Name Preset.....	127
Capturing a Display	128
Clear Captured Frame.....	128
Capturing Display Information.....	128
Clear Captured Data	129
Freeze and Freeze + Live Mode (SD-SDI and HD-SDI only).....	129
Section 4 ♦ Global Setup Menu Functions.....	131
Navigating the Setup Menu.....	131
Setup Menu and Alarm Tables.....	132

Contents

Video Format Menu	161
Video A, B, C, or D Format.....	161
Video A, B, C, or D Structure	161
Dual Link	162
Source ID	162
Waveform Setup Menu	163
Digital Waveform Graticule.....	163
NTSC Pedestal (or 7.5 IRE Setup).....	163
PAL Waveform Scale.....	163
DC Restore (Analog Option Required)	163
Waveform Intensity	163
Waveform Contrast.....	163
Persistence.....	164
Attack	164
Error Highlighting.....	164
Eye Pattern Setup Menu	164
Jitter Display Type	164
Eye Intensity.....	164
Eye Contrast.....	164
Persistence.....	164
Attack	165
Vector Setup Menu	165
PAL Overlay (Analog Option Required).....	165
SD I/Q Lines	165
Vector Intensity.....	165
Vector Contrast.....	165
Persistence.....	165
Attack	166
Gamut Setup Menu.....	166
Gamut Intensity	166
Gamut Contrast	166
Persistence.....	166
Color Plot.....	166
Data Error Persistence.....	166
Picture Setup Menu	166
Thumbnail.....	166
Markers	167
Closed Caption Display.....	167

Contents

XDS	167
(Closed Caption) Size	168
Anamorphic.....	169
Time Code	169
Brightness.....	169
Contrast	169
(Picture) Color.....	169
Blue Gun.....	169
Red Gun	169
Green Gun.....	170
VBI MASK.....	170
Monitor Out/Generator A-B and C-D.....	170
Display Setup.....	171
Display Colors.....	171
Graticule Intensity	171
Cursor Intensity.....	171
XGA Freeze	172
Monitor	172
Communications Setup	172
RCU Port	173
IP Configuration	173
GPI Input Function and GPI Alarm Names	174
GPI Output Function	175
GPI Alarm Reporting Setup	175
Router Port	175
Unit ID	176
System Setup Menu.....	176
Panel and Preset Lockout	176
Clock Display	179
Set Time	179
Time Code Input	179
Aural Alert.....	180
Exit Bypass on Alarm	180
Control Illumination	180
Diagnostics (System Fault Log).....	180
File Navigator.....	181
Flash Update from USB.....	181
Feature Upgrade from USB	182

About.....	182
Section 5 ♦ Alarm Descriptions	183
Setting Alarms.....	183
Alarm Message Contents and Limitations.....	184
Video Alarms Digital Descriptions	184
Format Change.....	184
Payload Identifier Mismatch (TVM-VTM-3GB only).....	185
Loss of Payload Identifier (TVM-VTM-3GB only)	185
Digital Gamut.....	185
RGB Upper/Lower	185
Lum Upper/Lower	185
Peak Upper/Lower	185
EDH – SD	185
CRC HD	185
CRC Alarms.....	186
Loss of Carrier	187
Loss of Video	187
Loss of Reference.....	187
Letterbox – SD.....	187
Pillarbox – HD.....	188
Picture Shift	188
Captioning	188
CC Not Detected – 608.....	188
CC Not Updating- 608.....	188
CC Not Detected – 708.....	188
CC Not Updating – 708.....	188
Teletext Not Detected – SD.....	189
Teletext Not Updating – SD.....	189
Subtitle Not Detected - SD	189
Subtitle Not Updating – SD	189
WSS (Widescreen Signaling) Not Detected.....	189
XDS Not Detected - SD.....	189
XDS Not Updating - SD.....	189
Eye Jitter	189
Timing Alarm.....	189
Video Alarms Analog Descriptions.....	189
Loss of Signal	189
Loss of Reference.....	190

Contents

Loss of Video	190
Analog Gamut	190
Peak Upper	190
Peak Lower	190
Luma Upper	190
Luma Lower	190
Sync and Burst	190
H (Horizontal) Sync Upper	190
H (Horizontal) Sync Lower	190
Burst Upper	190
Burst Lower	191
Burst to Chroma Phase	191
Horizontal Blanking (H Blanking)	191
Vertical Blanking	191
SC/H Phase	191
VITS	191
Captioning	192
Closed Caption Not Detected - Analog	192
Closed Caption Not Updating - Analog	192
Teletext Not Detected – Analog	192
Teletext Not Updating – Analog	192
XDS Not Detected – Analog	192
XDS Not Updating – Analog	192
Time Code Alarm Descriptions	192
LTC Time Code Alarms	192
LTC Loss of Time Code	192
LTC Time Code Level	192
LTC Time Code Framing	193
LTC Time Code Continuity	193
LTC/VITC Compare (TC Sync)	193
DVITC Time Code Alarm Error Types	193
DVITC Loss of Time Code	193
DVITC Line	193
DVITC Continuity	193
DVITC CRC	193
TS Alarms Descriptions (TVM-VTM-ASI)	193
Alarm Reporting Setup	193
Loss of Signal	194

Contents

CRC Change	194
ETR 290 1 st Priority	194
TS Sync Loss	194
Sync Byte Error	194
PAT Error	194
Continuity Count Error	194
PMT Error	194
PID Error	194
ETR 290 2 nd Priority	194
Transport Error	195
CRC Error	195
PCR Error	195
PCR Accuracy	195
PTS Error	195
CAT Error	195
ETR 290 3 rd Priority	195
NIT Actual Error (DVB only)	196
NIT Other Error (DVB only)	196
SDT Actual Error (DVB only)	196
SDT Other Error (DVB only)	196
EIT Actual Error (DVB only)	196
EIT Other Error (DVB only)	196
EIT PF Error (DVB only)	197
Unreferenced PID Error	197
Repetition Error	197
Base PID Error	198
Buffer Errors	198
Empty Buffer Error	198
Data Delay Error	198
Section 6 ♦ External Control	199
Using the Keyboard Commands	199
<i>SpyderWeb II</i>	200
Browser Interface	201
Tab/Tab Details	202
Web RCU	203
SNMP Communications	204

Section 7 ♦ Troubleshooting.....	205
Cold Starting the VTM Series.....	205
Cold Start.....	205
Warm Start.....	205
Cold Start after VFlash	206
Problems, Causes, and Solutions	206
 Appendix A ♦ Specifications.....	 209
Video Input Specifications: 3Gb/s/HD-SDI/SD-SDI Option.....	209
Video Input Specifications: HD-SDI/SD-SDI Option.....	209
Video Input Specifications: SD-SDI Option.....	210
Video Input Specifications: Analog Option.....	210
Reference Input Specifications	210
EYE and Jitter/Frequency Patterns	211
DVI-I Output Specifications.....	212
Audio Options.....	212
Control	213
Display	213
Time Code.....	214
SDI Freeze	214
Data Analyzer.....	214
CRC Error Display	215
Closed Captioning Displays	215
Gamut Display.....	216
Magnification	216
Ethernet	216
External Routing Control.....	216
Remote Control	216
Power Requirements	217
Mechanical	217
Environmental	217
Standard Accessories	217
Console.....	217
Display Drivers	218
VTM Options	218

Appendix B ♦ Pinouts	221
Appendix C ♦ Open Source Software Copyright Information	227
FreeType License.....	227
LibJPEG License.....	227
CMU/UCD Copyright Notice	227
Networks Associates Technology, Inc. Copyright Notice (BSD).....	228
Cambridge Broadband Ltd. Copyright Notice (BSD).....	229
Sun Microsystems, Inc. Copyright Notice (BSD)	230
Sparta, Inc. Copyright Notice (BSD)	231
Cisco/BUPTNIC Copyright Notice (BSD)	232
Fabasoft R&D Software GmbH & Co. KG Copyright Notice (BSD)	233
The GNU v2 License	234
GNU General Public License	234
Version 2, June 1991	234
Preamble	234
GNU General Public License	235
Terms and Conditions for Copying, Distribution and Modification.....	235
No Warranty	238
GNU Lesser Public License.....	239
GNU Lesser General Public License	239
Version 2.1, February 1999.....	239
Preamble	239
GNU Lesser General Public License	241
Terms and Conditions for Copying, Distribution and Modification.....	241
No Warranty	246
Appendix D ♦ Glossary	247
Index	259
 List of Figures	
Figure 1-1. VTM Series Front and Back Panels	10
Figure 1-2. VTM Series Front and Back Panels with VTM-OPT JEM Option Installed.....	10
Figure 2-1. Mounting the VTM Series Unit in a Rack.....	14
Figure 2-2. VTM Series Back Panel Connectors	15
Figure 2-3. VTM Series Dedicated PC Connection	17
Figure 2-4. VTM Series Network PC Connection	17
Figure 2-5. Multiple VTM Series Network PC Connection	18

Figure 2-6. Connecting the RCU 1000 Remote Control Panel to Multiple VTM/TVM Series Units	19
Figure 2-7. Using the Bypass Feature	20
Figure 3-1. VTM Series Front Panel*	21
Figure 3-2. Sample Multi-Display	22
Figure 3-3. Selecting a Pane.....	24
Figure 3-4. Sample Quad Diagram	28
Figure 3-5. Full-Screen Display Diagram.....	28
Figure 3-6. Waveform Display Diagram.....	30
Figure 3-7. RGB and YCbCr Graticule	32
Figure 3-8. RGB and YCbCr Zoom 0 mV Graticule	32
Figure 3-9. RGB and YCbCr Zoom 700 mV Graticule.....	32
Figure 3-10. Moving the Waveform	33
Figure 3-11. Establishing the Sweep Scale	34
Figure 3-12. Establishing the Gain	35
Figure 3-13. Establishing Line Select.....	36
Figure 3-14. Establishing Cursor Select	37
Figure 3-15. Eye Pattern Display Diagram	42
Figure 3-16. Eye Pattern Graticule.....	43
Figure 3-17. Eye Pattern Graticule at Zoom 0V	43
Figure 3-18. Eye Pattern Graticule at Zoom 800 mV	43
Figure 3-19. Establishing Cursor Select for Eye Pattern	45
Figure 3-20. VTM Series with TVM-VTM-JEM Option Back Panel Connectors	47
Figure 3-21. Eye Pattern Display Diagram	49
Figure 3-22. Jitter Waveform Display Diagram	50
Figure 3-23. Frequency Waveform Display Diagram	51
Figure 3-24. Eye Pattern Graticule.....	52
Figure 3-25. Eye Pattern Graticule at Zoom 0V	52
Figure 3-26. Eye Pattern Graticule at Zoom 800 mV	52
Figure 3-27. Establishing Cursor Select for Eye Pattern	54
Figure 3-28. Vector Display Diagram	57
Figure 3-29. Vector NTSC Graticule.....	58
Figure 3-30. Vector NTSC Zoom Upper Left	59
Figure 3-31. Vector NTSC Zoom Upper Right	59
Figure 3-32. Vector NTSC Zoom Lower Right	60
Figure 3-33. Vector NTSC Zoom Lower Left	60
Figure 3-34. Vector PAL Zoom Center	61
Figure 3-35. Vector SD with I/Q	61
Figure 3-36. Vector HD 75% + 100% Graticule	62

Figure 3-37. Establishing the Vector Gain.....	63
Figure 3-38. Establishing Line Select.....	64
Figure 3-39. Establishing Cursor Select.....	64
Figure 3-40. Gamut Display Diagram.....	67
Figure 3-41. Composite Gamut Vector Display Graticule Markings	69
Figure 3-42. Component Gamut Vector Display Graticule Markings	71
Figure 3-43. Establishing Line Select.....	72
Figure 3-44. Picture Display Diagram	73
Figure 3-45. Aspect Ratio Source Diagram.....	74
Figure 3-46. Teletext Sample Screen.....	77
Figure 3-47. Timing Display Diagram.....	78
Figure 3-48. Alarm Log Diagram.....	81
Figure 3-49. Alarm Status Display Diagram	83
Figure 3-50. Two Bar Graph Display with Lissajous Diagram	89
Figure 3-51. Four Bar Graph with Lissajous Display Diagram	90
Figure 3-52. Six Bar Graph Diagram.....	91
Figure 3-53. Eight Bar Graph Display Diagram	92
Figure 3-54. CineSound 5.1 + Aux Display Diagram	94
Figure 3-55. CineSound 6.1 Channels Display.....	95
Figure 3-56. CineSound 7.1 Channels Display.....	95
Figure 3-57. Loudness Display Diagram VTM/TVM-A ³ -OPT 3/5-TL)	96
Figure 3-58. Dolby Metadata Display Diagram	101
Figure 3-59. Video Metadata Display Diagram	102
Figure 3-60. XDS Pane	104
Figure 3-61. CRC Display Diagram.....	105
Figure 3-62. ASI Display Diagram (ATSC Standard Selected)	108
Figure 3-63. ASI Bandwidth Display	110
Figure 3-64. VTM Classic Display Diagram.....	113
Figure 3-65. Sample Alarm Message.....	115
Figure 3-66. Data Mode Display (SD-SDI and HD-SDI Only)	116
Figure 3-67. Data Analyzer Display with TVM-VTM-3GB (Level A).....	121
Figure 3-68. Data Analyzer Display with TVM-VTM-3GB (Level B).....	121
Figure 3-69. Data Analyzer Display with TVM-VTM-3GB (Dual Link).....	122
Figure 3-70. Custom Timing Display.....	123
Figure 3-71. WFM/VEC Only Display.....	124
Figure 3-72. 3Gb/s WFM/VEC Mode Display	125
Figure 4-1. Source ID Rename Screen	163
Figure 4-2. Sample Thumbnail Screen.....	167

Figure 4-3. Display Color Selection.....	171
Figure 4-4. GPI Rename Screen.....	174
Figure 4-5. Panel and Preset Lock/Unlock Screen	176
Figure 4-6. Enter New Time Screen.....	179
Figure 4-7. System Fault Log.....	180
Figure 4-8. File Navigator Screen	181
Figure 4-9. About Screen.....	182
Figure 5-1. Sample Alarm Message (VTM Classic Mode Display)	184
Figure 6-1. Sample Web Remote Display	201
Figure B-1. ANALOG AUDIO IN/OUT 37-Pin, Male, D-Sub Connector for Audio Options	221
Figure B-2. DVI-I In/Out Connector	222
Figure B-3. LTC/GPI 26-Pin, Female, D-Sub Connector.....	223
Figure B-4. LTC/GPI Breakout Board	223
Figure B-5. Remote RJ-11 Control Connector.....	224
Figure B-6. Router RJ-11 Control Connector.....	224
Figure B-7. Ethernet RJ-45 Connector	225
Figure B-8. USB Connector	225

List of Tables

Table 1-1. Options and Supported Video Formats.....	6
Table 1-2. 3Gb/s Formats	7
Table 1-3. Dual Link Formats.....	8
Table 1-4. HD Formats	9
Table 1-5. SD Formats	9
Table 1-6. Analog Composite Formats Supported.....	9
Table 2-1. Parts Required to Rack Mount the VTM Series using the DRC-2.....	14
Table 2-2. Description of Back Panel Connectors	15
Table 3-1. Description of Front Panel Controls Illumination	23
Table 3-2. EXT menu.....	27
Table 3-3. Description of Icons	29
Table 3-4. Video Formats and Units of Measure	29
Table 3-5. Video Formats and Critical Amplitude Limits.....	30
Table 3-6. Description of Waveform Display Diagram.....	30
Table 3-7. Waveform (Analog) Menu Structure	38
Table 3-8. Waveform (SD-SDI) Menu Structure	38
Table 3-9. Waveform (3G HD-SDI) Menu Structure.....	39
Table 3-10. Input and Display Format Relationship	41
Table 3-11. Description of Eye Pattern Display Diagram	42
Table 3-12. Horizontal Magnification Conditions.....	44

Table 3-13. Eye SD-SDI Pane Menu Structure	46
Table 3-14. Eye HD-SDI Pane Menu Structure	46
Table 3-16. Description of Eye Pattern Display Diagram	49
Table 3-17. Description of Jitter Waveform Display Diagram	50
Table 3-18. Description of Frequency Waveform Display Diagram	51
Table 3-19. Horizontal Magnification Conditions	53
Table 3-20. Eye SD-SDI Pane Menu Structure	55
Table 3-21. Eye HD-SDI Pane Menu Structure	55
Table 3-22. Jitter Waveform Pane Menu Structure	56
Table 3-23. Description of Vector Display Diagram	57
Table 3-24. Vector Analog Pane Menu Structure	65
Table 3-25. Vector SD-SDI Pane Menu Structure	66
Table 3-26. Vector HD-SDI Pane Menu Structure	66
Table 3-27. Description of Gamut Display Diagram	68
Table 3-28. Description of Composite Gamut Indicators	69
Table 3-29. Description of RGB Gamut Indicators	71
Table 3-30. Gamut Menu Structure	73
Figure 3-44. Picture Display Diagram	73
Table 3-31. Description of Picture Display Diagram	74
Table 3-32. Picture Analog Menu	75
Table 3-33. Picture SD Menu	75
Table 3-34. Picture HD Menu	75
Table 3-35. Description of Timing Display Diagram	78
Table 3-36. Timing Pane Menu	80
Table 3-37. Description of Alarm Log Display Diagram	82
Table 3-38. Description of Alarm Status Display Diagram	83
Table 3-39. Alarm Status Pane Menu	85
Table 3-40. Description of Two Bar Graph Display with Lissajous Diagram	89
Table 3-41. Description of Four Bar Graph with Lissajous Display Diagram	90
Table 3-42. Description of Six Bar Graph Diagram	91
Table 3-43. Description of Eight Bar Graph Display Diagram	92
Table 3-44. CineSound® Audio Input Mapping	93
Table 3-45. Description of CineSound Display Diagram	94
Table 3-47. Audio Pane Menu	97
Table 3-48. Option Pane Menu	99
Table 3-49. Description of Dolby Metadata Display Diagram	101
Table 3-50. Description of the Video Metadata Display Diagram	102
Table 3-51. Sample Video Metadata Pane List	103

Table 3-52. Sample Video Index Pane.....	103
Table 3-54. Description of the CRC Display Diagram	106
Table 3-55. ASI Pane Menu.....	110
Table 3-56. Description of Simultaneous VTM Classic Display	113
Table 3-57. Description of Sample Alarm Message	115
Table 3-58. Description of Data Mode Display (SD-SDI and HD SDI Only).....	116
Table 3-59. Data Analyzer Setup Menu.....	117
Table 3-60. Data Analyzer Display with TVM-VTM-3GB (Level A and Level B).....	122
Table 3-61. Data Analyzer Display with TVM-VTM-3GB (Dual Link)	122
Table 3-62. Preset Setup Menu	127
Table 4-1. Setup Menu Tables.....	132
Table 4-2. Video Format Menu	133
Table 4-3. Waveform Setup Menu	137
Table 4-4. Eye Pattern Setup Menu	137
Table 4-5. Vector Setup Menu	138
Table 4-6. Gamut Setup Menu.....	138
Table 4-7. Picture Setup Menu	139
Table 4-8. Video Alarms, Digital Menu	141
Table 4-9. Video Alarms, Analog Menu.....	146
Table 4-10. Time Code Alarms Menu.....	151
Table 4-11. TS Alarms Menu (TVM-VTM-ASI)	152
Table 4-12. Monitor Out/Generator A-B.....	156
Table 4-13. Monitor Out/Generator C-D	156
Table 4-14. Display Setup Menu	157
Table 4-15. Display Colors Menu	158
Table 4-16. Communications Setup Menu	158
Table 4-17. System Setup Menu.....	160
Table 4-18. About Menu	161
Table 4-19. XDS Line Selections	168
Table 5-1. Description of Sample Alarm Message	184
Table 5-2. CRC Alarm Error Types	187
Table 6-1. Keyboard Commands	199
Table 6-2. Tab/Tab Details Description	202
Table 6-3. Web Remote Display Description	203
Table 7-1. VTM Series: Problems, Causes, and Solutions.....	206
Table B-1. Pinouts for ANALOG AUDIO IN/OUT Connector and Audio Breakout Board	221
Table B-2. Pinouts for DVI-I In/Out Connector.....	222
Table B-3. Pinouts for LTC/GPI Connector and LTC/GPI Breakout Board	223

Contents

Table B-4. Remote RJ-11 Control Connector Pinouts	224
Table B-5. Router RJ-11 Control Connector Pinouts	224
Table B-6. Ethernet RJ-45 Connector Pinouts	225
Table B-7. USB Connector Pinouts.....	225

Section 1 ♦ Introduction

Product Description

The Videotek VTM Series multi-format, 3Gb/s HD-SDI, 1.5Gb/s HD-SDI, and SD-SDI video monitoring unit is the most advanced, versatile, and intuitive 3Gb/s/HD-SDI/SD-SDI monitoring instrument available today. With 100% digital signal processing technology, the VTM Series provides an accurate and stable user customizable display of multiple Waveform, Vector, Gamut, Audio, Picture, Relative Timing, Alarm Status, and Data Analyzer functions in quadrant or full-screen views. Quick setup and parameter changes are possible with direct access to display functions and screen location, 16 presets, context sensitive pop-up menus, and an intuitive navigation system.

The VTM Series units can be completely customized. The VTM-ASX (console that contains the system board) is capable of analyzing HD, SD, and Analog formats. The VTM-OPT-10 or VTM-OPT-40 graphics display engine can be loaded into the unit. Any two of the VTM video input boards can be loaded into the unit. Any one VTM-A³ Audio Options can be loaded into the unit.

The VTM Series features extensive audio and video alarm capabilities including peak level reporting, video and Dolby[®] metadata, EIA-608 and 708 closed caption detection/alarm display, and teletext and XDS processing. All real-time signal alarms have user adjustable limits, time stamps from LTC, or DVITC and an internal clock, and logging may include an active link to a frame capture where applicable. Remote interfaces include 10/100BaseT Ethernet and plug-n-play USB port (supporting storage and recall of presets, frame-capture transfer, and keyboard integration). The VTM Series instruments are digital instruments with all-digital architecture; therefore, no periodic calibration is required.

The VTM Series seamlessly integrates into any broadcast, post-production, camera maintenance, satellite or cable facility, and is the ultimate choice for quality control, troubleshooting, or compliance checking applications.

³US Patents 6,069,607, 6,532,024, and 6,828,981. UK Patent 2,330,475. Other US and foreign patents pending.

Standard Features

- Dual HD-SDI/SD-SDI inputs with auto detection (VTM4100PKG or VTM4140PKG)
- Dual 3Gb/s HD-SDI and SD-SDI inputs with auto detection (VTM4140PKG – 3GB)
- Display multiple inputs simultaneously (VTM4140PKG) (VTM-40)
- Pixel Locator/Data Word Analyzer/Camera Maintenance (TVM-VTM-AAP) (VTM-40) or (VTM4140PKG)
- Dual Link (4:4:4) Y, Cb, Cr
- A/B Parade and Overlay

- Closed Caption detection, alarm, and display (608 and 708)
- Customizable function display screen location, multiple displays
- Alarms with Peak Level Report
- Multiple reference inputs
- Two USB ports for control and data transfer
- XGA, High Resolution, output for 4:3 or 16:9 display (DVI-I)
- Patented Video Relative Timing display
- Patented Gamut display
- 16 user presets
- Illuminated controls and indicators
- Compact 1RU configuration
- Ethernet with SNMP agent
- Router control port
- Input standards: SMPTE 424M, SMPTE 372M, SMPTE 292M, SMPTE 259M-C, NTSC, and PAL

Applications

The VTM Series is the perfect solution for the unattended signal quality monitoring of multiple sites:

- Satellite uplinks and downlinks
- Remote transmitter sites
- Tape-to-tape or tape-to-server transfers
- NLE digitizing and rendering
- Network and/or remote feeds
- STL
- Any HDTV node that requires quality analysis of video, audio, and time code parameters

VTM Series Configuration

VTM Series Configurations are shown in the following subsections (Console, Graphics Engines, Audio Options, Video Input Options, Auxiliary Options, and VTM Package Configurations).

Console

- **VTM-ASX:** VTM Console that includes chassis, power supply, cooling system fans, system controller, front panel controls with USB port, and back panel connections for Ethernet, USB port, one router, one remote control port, and

LTC/GPI interface. Supports one graphics display engine, one or two video boards, and one audio board. A graphics display engine module (VTM-10 or VTM-40) and at least one input module are required to operate the console.

Graphics Engines (requires one)

- **VTM-10:** Graphics display engine that affords 100% digital signal processing and instrument display capability of one input source at a time.
- **VTM-40:** Graphics display engine that affords 100% digital signal processing and instrument display capability of four input sources simultaneously. Advanced Analysis Package that adds data analyzer functions in quadrant or full-screen views.

Audio Options (supports one)

- **VTM-A³-OPT 2:** Advanced Audio Analysis Option. Bargraphs and CineSound[®]. View up to eight audio channels. Includes four analog stereo inputs, four AES/EBU shared input/output pairs, and 16 channels of embedded audio. Analog monitoring outputs of up to eight channels simultaneously.
- **VTM-A³-OPT 3:** Advanced Audio Analysis Option. Bargraphs and CineSound[®]. View up to eight audio channels. Includes four analog stereo inputs, eight AES/EBU inputs with four-shared outputs and 16 channels of embedded audio. Analog monitoring outputs of up to eight channels simultaneously. Channel-mapping, meter labels, and peak value reporting included.
- **VTM-A³-OPT 5:** Advanced Audio Analysis Option. Bargraphs and CineSound[®]. View up to eight audio channels. Includes four analog stereo inputs, eight AES/EBU inputs with four-shared outputs and 16 channels of embedded audio. Analog monitoring outputs of up to eight channels simultaneously. Channel-mapping, meter labels, and peak value reporting included. Full Dolby decoding with up to eight analog outputs.
- **VTM-A³-4004:** Audio Expansion module. Adds four AES/EBU input pairs. Only available with A³-OPT 2.
- **VTM-A³-OPT 3-TL:** Advanced Audio Analysis Option with 5x oversampling for enhanced True Peak detection. Bargraphs and CineSound[®]. View up to eight audio channels. Includes four analog stereo inputs, eight AES/EBU inputs with four-shared outputs and 16 channels of embedded audio. Analog monitoring outputs of up to eight channels simultaneously. Channel-mapping, loudness, meter labels, and peak value reporting included. All AES inputs are sample rate converted to 48 kHz.
- **VTM-A³-OPT 5-TL:** Advanced Audio Analysis Option with 5x oversampling for enhanced True Peak detection and Dolby. Bargraphs and CineSound[®]. View up to eight audio channels. Includes four analog stereo inputs, eight AES/EBU inputs with four-shared outputs and 16 channels of embedded audio. Analog monitoring outputs of up to eight channels simultaneously. Channel-mapping, loudness, meter labels, and peak value reporting included. All AES inputs are sample rate converted to 48 kHz. It also adds full Dolby decoding to the analog output. The Dolby Output is selectable from any 1 of the 8 pairs of the assigned input type (AES or

Embedded). Further, selection of an AES or embedded pair for the AUX meters is available in an eight-channel display.

- **VTM-A3-OPT V2A:** Adds Lip Sync to the VTM-A3-OPT3-TL or VTM-A3-OPT5-TL option
- **VTM-A³-OPT 3TO5:** Adds Dolby decoding to existing VTM-A3-OPT3 and VTM-A3-OPT 3-TL

Video Input Options (supports two)

- **TVM-VTM-AAP:** Advanced Analysis Package that adds data analyzer functions in quadrant or full-screen views to the VTM-10. Included in VTM-40.
- **TVM-VTM-ASI:** Two passive-looping DVB-ASI and SMPTE310 inputs. It accepts two independent MPEG streams and analyzes one selected stream for compliance to measurement guidelines of ETSI TR-101-290 (ETR-290) first, second, and third priority standards.
- **TVM-VTM-SDI-H:** Two passive looping SMPTE 292M (HD-SDI) and SMPTE 259M-C (SD-SDI) inputs, auto detect, line select, internal, blackburst or tri-level references.
- **TVM-VTM-SDI-S-F:** Two passive looping SMPTE 259M-C (SD-SDI) inputs, auto detect, and line select.
- **TVM-VTM-SDI-2H-F:** Adds SMPTE 292M (HD-SDI) to the TVM-VTM-SDI-S module.
- **TVM-VTM-ES2H-F:** Adds SMPTE 292M (HD-SDI) to the TVM-VTM-EYE-S module.
- **TVM-VTM-ACV-2:** Dual composite analog input module. Adds two composite analog passive looping inputs (NTSC or PAL) with auto-detection and line select. Must be used as inputs C and D.
- **TVM-VTM-EYE-S:** Two active looping SMPTE 259M-C (SD-SDI) inputs, auto detect with EYE pattern and monitor output. Must be used as inputs A and B.
- **TVM-VTM-EYE-H:** Two active looping SMPTE 292M (HD-SDI) and SMPTE 259M-C (SD-SDI) inputs, auto detect with EYE pattern and monitor output. Must be used as inputs A and B.
- **TVM-VTM JEM:** Two active looping SMPTE 292M (HD-SDI) and SMPTE 259M-C (SD-SDI) inputs, auto detect with EYE pattern with advanced Jitter Analysis and monitor output. Must be used as inputs A and B.
- **TVM-VTM-DLK:** Expands the Dual link capability of the TVM-VTM-EYE-H, TVM-VTM-JEM, and TVM-VTM-SDI-H to include 10-bit RGB (4:4:4) and RGB+A (4:4:4:4) formats. Requires VTM-40.
- **TVM-VTM-3GB:** Input module for the VTM-4140 PKG (and VTM-4140 PKG-E) that accepts two active-looping triple-rate (2.97 Gb/s, 1.485 Gb/s, and 270 Mb/s) 3Gb/s HD-SDI, HD-SDI or SD-SDI input signals for display and analysis. It also supplies additional support for dual-link HD-SDI 12-bit YCbCr and RGB video formats. One triple-rate SDI monitor output follows the selected SDI video input,

or an internal Test Signal Generator can be selected. The internal Test Signal Generator can display color bars, pathological checkfield, or color bars with motion, and is free-running (no genlock capability). Embedded audio and Video Payload ID per SMPTE 352M-2002 ancillary data insertion is also supported.

Auxiliary Options

- **RCU-1000:** Remote control panel for the VTM Series and TVM series instruments. Replicates all of the front panel controls. RS-422 connection; includes 50 ft (15 m) straight-through cable with RJ-11 connectors. One RU in height.
- **TVM-WRTY2:** Adds three years to the standard two-year warranty.

VTM Package Configurations

- **VTM4100PKG:** VTM package that includes the VTM-ASX (console), VTM-10 (one input source), and one TVM-VTM-SDI-H (SD/HD) input module. It displays one source input at a time and one instance of each function (Waveform, Vector, Picture, Gamut etc.). There is no Data Analysis. The package is limited to SD/HD formats, but can be upgraded. (Data Analysis upgrade is TVM-VTM-AAP)
- **VTM4100PKG-A:** VTM package that includes the VTM-ASX (console), VTM-10 (one input source), and one TVM-VTM-ACV-2 dual composite analog input module. It displays one source input at a time and one instance of each function (Waveform, Vector, Picture, Gamut etc.). There is no Data Analysis. The package is limited to Analog formats, but can be upgraded. (Data Analysis upgrade is TVM-VTM-AAP)
- **VTM4100PKG-EH:** VTM package that includes the VTM-ASX (console), VTM-10 (one input source), and one TVM-VTM-EYE-H (SD/HD EYE) input module. There is no Data Analysis. The package is limited to SD/HD formats, but can be upgraded. (Data Analysis upgrade is TVM-VTM-AAP)
- **VTM4100PKG-EJ:** VTM package that includes the VTM-ASX (console), VTM-10 (one input source), and one TVM-VTM-JEM (SD/HD EYE Advanced Jitter Analysis) input module. There is no Data Analysis. The package is limited to SD/HD formats, but can be upgraded. (Data Analysis upgrade is TVM-VTM-AAP)
- **VTM4100PKG-ES:** VTM package that includes the VTM-ASX (console), VTM-10 (one input source), and one TVM-VTM-EYE-S (SD EYE) input module. There is no Data Analysis. The package is limited to SD formats, but can be upgraded. (HD upgrade is TVM-VTM-ES2H-F) (Data Analysis upgrade is TVM-VTM-AAP)
- **VTM4100PKG-SD:** VTM package that includes the VTM-ASX (console), VTM-10 (one input source), and one TVM-VTM-SDI-S (SD) input module. There is no Data Analysis. The package is limited to SD formats, but can be upgraded. (Data Analysis upgrade is TVM-VTM-AAP)
- **VTM4140PKG:** VTM package that includes the VTM-ASX (console), VTM-40 (affords the ability for four source inputs simultaneously and Data Analysis), and one TVM-VTM-SDI-H (SD/HD) input module. The package is limited to SD/HD formats, but can be upgraded.

- **VTM4140PKG-3GB:** VTM package that includes the VTM-ASX (console), VTM-40 (affords the ability for four source inputs simultaneously and Data Analysis), and one TVM-VTM-3GB input module. There are no format limitations on the VTM-4140 PKG-3GB.
- **VTM4140PKG-A:** TVM Series package that includes the VTM-ASX (console), VTM-40 (affords the ability for four source inputs simultaneously and Data Analysis) and TVM-VTM-ACV-2 dual composite analog input module. The package is limited to Analog formats, but can be upgraded.
- **VTM4140PKG-EH:** VTM package that includes the VTM-ASX (console), VTM-40 (affords the ability for four source inputs simultaneously and Data Analysis), and one TVM-VTM-EYE-H (SD/HD EYE) input module. The package is limited to SD/HD formats, but can be upgraded.
- **VTM4140PKG-EJ:** VTM package that includes the VTM-ASX (console), VTM-40 (affords the ability for four source inputs simultaneously and Data Analysis), and one TVM-VTM-JEM (SD/HD EYE Advanced Jitter Analysis) input module. The package is limited to SD/HD formats, but can be upgraded.
- **VTM4140PKG-ES:** VTM package that includes the VTM-ASX (console), VTM-40 (affords the ability for four source inputs simultaneously and Data Analysis), and one TVM-VTM-EYE-S (SD EYE) input module. The package is limited to SD formats, but can be upgraded. (HD upgrade is TVM-VTM-ES2H-F)
- **VTM4140PKG-SD:** VTM package that includes the VTM-ASX (console), VTM-40 (affords the ability for four source inputs simultaneously and Data Analysis), and one TVM-VTM-SDI-S (SD) input module. The package is limited to SD formats, but can be upgraded.

Video Standards Supported

The VTM Series supports the following video standards:

Table 1-1. Options and Supported Video Formats

Video Formats	ASI	ACV-2	SDI-S	SDI-H	EYE-S	EYE-H	JEM	3GB
DVB-ASI and SMPTE-310	X							
Analog Composite		X						
SD-SDI			X	X	X	X	X	X
HD-SDI				X		X	X	X
3 Gbs-SDI								X
Dual Link - YCbCr 10 Bit 4:4:4				X		X	X	X
Dual Link –RGB and RGB+A, 10 Bit 4:4:4 and 4:4:4:4				With OPT DLK		With OPT DLK	With OPT DLK	X
Dual Link – YCbCr and RGB 12 Bit 4:4:4								X

Table 1-2. 3Gb/s Formats

	10 bit 4:2:2 YCbCr	10 bit 4:4:4 YCbCr	10 bit 4:4:4:4 YCbCr +A	10 bit 4:4:4 RGB	10 bit 4:4:4:4 RGB+A	12 bit 4:2:2 YCbCr	12 bit 4:4:4 YCbCr	12 bit 4:4:4 RGB
1080i								
1080i/60		X	X	X	X	X	X	X
1080i/59.94		X	X	X	X	X	X	X
1080i/50		X	X	X	X	X	X	X
1080p								
1080p/60	X							
1080p/59.94	X							
1080p/50	X							
1080p/30		X	X	X	X	X	X	X
1080p/29.97		X	X	X	X	X	X	X
1080p/25		X	X	X	X	X	X	X
1080p/24		X	X	X	X	X	X	X
1080p/23.98		X	X	X	X	X	X	X
720p								
720p/60		X	X	X	X	X	X	X
720p/59.94		X	X	X	X	X	X	X
720p/50		X	X	X	X	X	X	X
720p/30		X	X	X	X	X	X	X
720p/29.97		X	X	X	X	X	X	X
720p/24		X	X	X	X	X	X	X
720p/23.98		X	X	X	X	X	X	X

Table 1-3. Dual Link Formats

	10 bit 4:4:4 YCbCr	10 bit 4:4:4:4 YCbCr +A	10 bit 4:4:4 RGB	10 bit 4:4:4:4 RGB+A
1080I/60	X	X	X	X
1080I/59.94	X	X	X	X
1080I/50	X	X	X	X
1080P/30	X	X	X	X
1080P/29.97	X	X	X	X
1080P/25	X	X	X	X
1080P/24	X	X	X	X
1080P/23.98	X	X	X	X
1080PsF/60	X	X	X	X
1080PsF /59.94	X	X	X	X
1080PsF /50	X	X	X	X
1080PsF /30	X	X	X	X
1080PsF /29.97	X	X	X	X
1080PsF /24	X	X	X	X
1080PsF /23.98	X	X	X	X

Table 1-4. HD Formats

	10 bit 4:2:2 YCbCr
1080i	
1080i/60	X
1080i/59.94	X
1080i/50	X
1080p	
1080p/30	x
1080p/29.97	x
1080p/25	x
1080p/24	x
1080p/23.98	x
720p	
720p/60	x
720p/59.94	x
720p/50	x
720p/30	x
720p/29.97	x
720p/24	X
720p/23.98	X
Segmented Frame	
1080P/30sF	X
1080P/29.97sF	X
1080P/25sF	X
1080P/24sF	X
1080P/23.98sF	X

Table 1-5. SD Formats

	10 bit 4:2:2 YCbCr
525/59.94	X
625/50	X

Table 1-6. Analog
Composite Formats
Supported

NTSC	X
PAL	X

Front and Back Panels

The VTM Series front and back panels are illustrated in **Figure 1-1** and **Figure 1-2**.

Figure 1-1. VTM Series Front and Back Panels


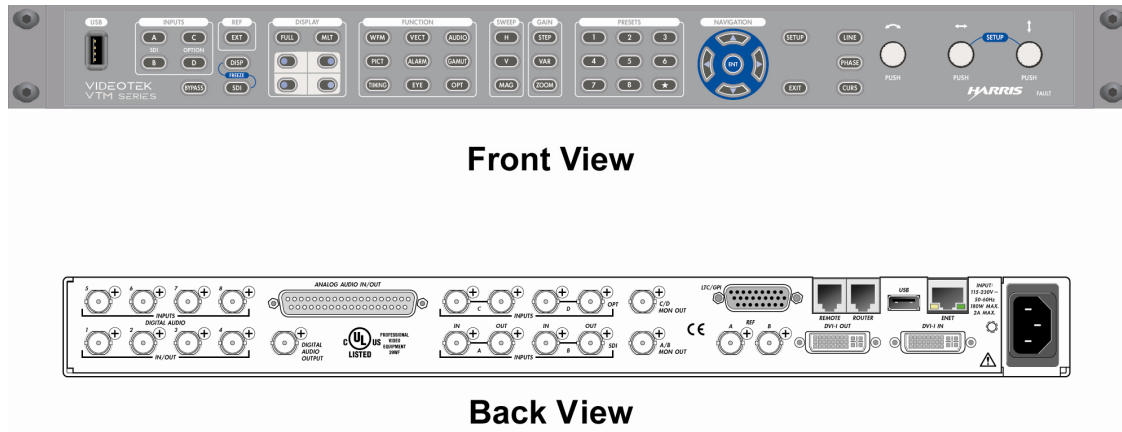


Figure 1-2. VTM Series Front and Back Panels with VTM-OPT JEM Option Installed

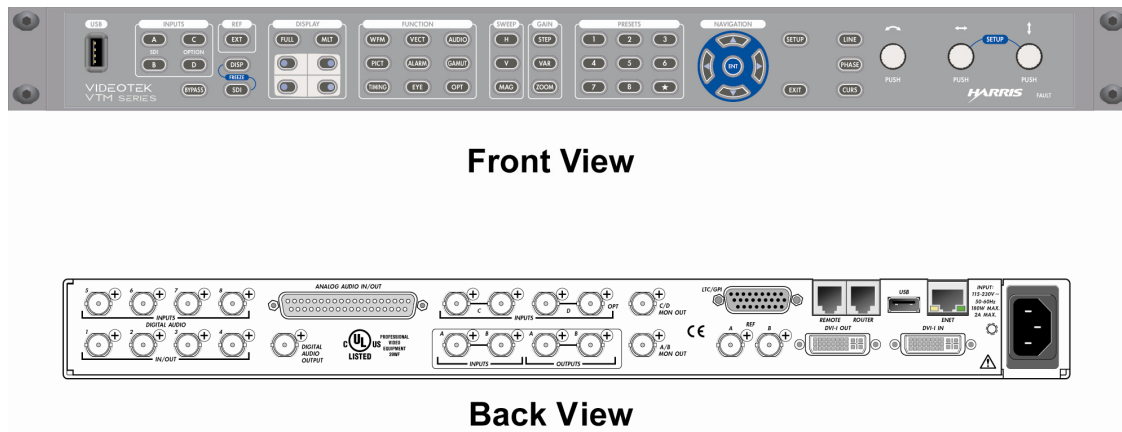

Service and Support

For service and support, telephone the Harris Customer Service Department at **1-888-534-8246**. If the problem cannot be resolved over the telephone and the instrument must be shipped to Harris for service or repair:

- Obtain a Return Authorization (RA) number from the Harris Customer Service Department.
- Attach a tag to the unit with:
 - Your company name, address, and telephone number
 - The name of the contact person at your company
 - The RA number
 - The unit serial number
 - An explanation of the problem
- To prevent shipping damage, pack the unit the same way Harris had packed it. If possible, use the original packing materials in the original shipping container.
- Ship the unit to:

Harris Corporation
Videotek Test and Measurement
243 Shoemaker Road
Pottstown, PA 19464-6433
Attn: RA xxxx (where x is the RA number)

Email: BCDSERVICE@harris.com

This page is intentionally blank.

Section 2 ♦ Installation

This section provides information about inspecting, installing, and configuring the VTM Series.

Inspecting the Shipment

Before installing the VTM Series unit, inspect the box and the contents. Report any damage to the shipper and telephone the Harris Corporation Customer Service Department for service and support (see Section 1, “Service Support”).

NOTE: Refer to the enclosed packing sheet for the latest list of items that are supplied with the unit.

The box contains the following:

One VTM Series multi-format monitor

- One VTM Series CD containing the *VTM Series Installation and Operation Handbook*
- One 75Ω terminator
- One detachable power cord
- One breakout connector (for LTC/GPI)
- DVI to VGA adaptor
- SpyderWeb II Installation CD (includes SpyderWeb II Installation Guide)
- SNMP Support CD
- If the audio option has been purchased, one additional breakout connector or 37-pin connector is also supplied

Save the box and packing material for any future shipping requirements.

Rack Mounting the Unit

When selecting the permanent mounting location for the VTM Series unit, ensure that the flow of air to the ventilation holes on the sides of the chassis is not obstructed.

Rack mounting the VTM Series is illustrated in **Figure 2-1**. The parts required to rack mount the VTM Series are listed in **Table 2-1**.

Figure 2-1. Mounting the VTM Series Unit in a Rack

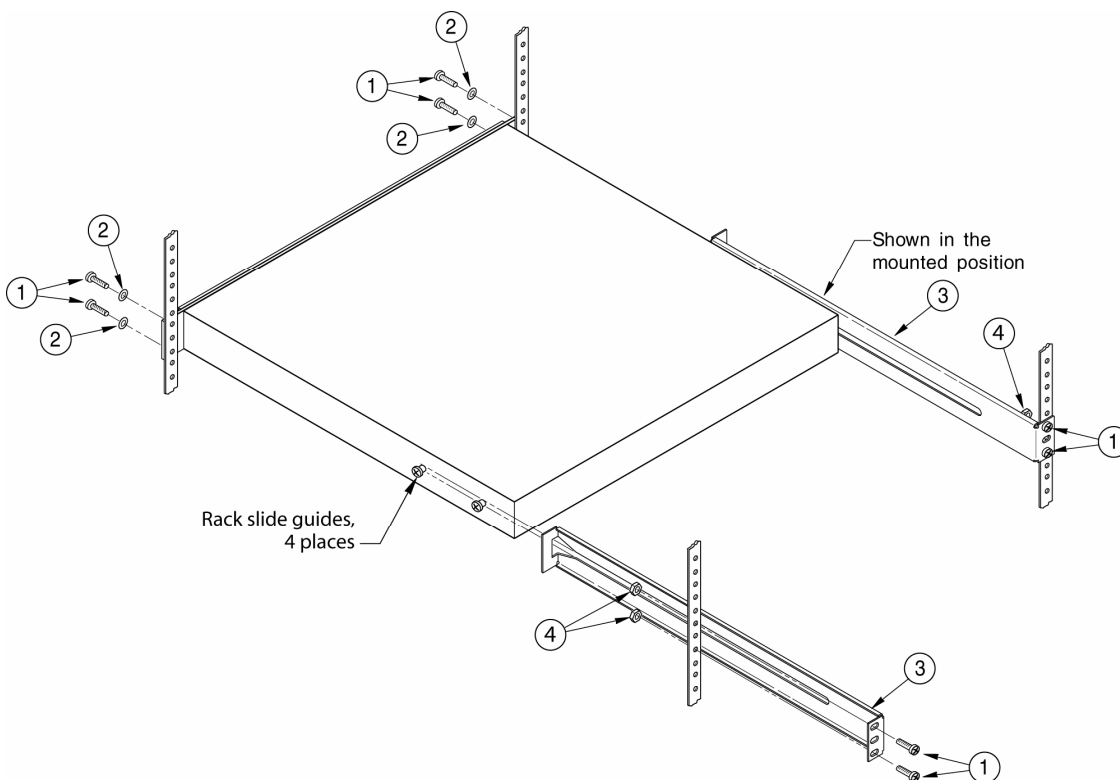


Table 2-1. Parts Required to Rack Mount the VTM Series using the DRC-2

Key	Item Number	Quantity	Description
1	831030	8 (4 for each side)	Hardware screw, 10-32×3/4 PP black
2	831019	4 (2 for each side)	Hardware washer, nylon, 0.437×0.195×0.032
3	832076	2 (1 for each side)	Metal rack extension bracket
4	831060	4 (2 for each side)	#10-32 kep nuts

Attach the rack extension brackets to the back of the rack. Once the extension brackets are in place, guides on the VTM Series unit enable it to slide in and out of rack extension brackets for easy access and removal.

Connecting the Unit

The back panel connectors are illustrated in **Figure 2-2**, and the function of each connector is described in **Table 2-2**.

Figure 2-2. VTM Series Back Panel Connectors

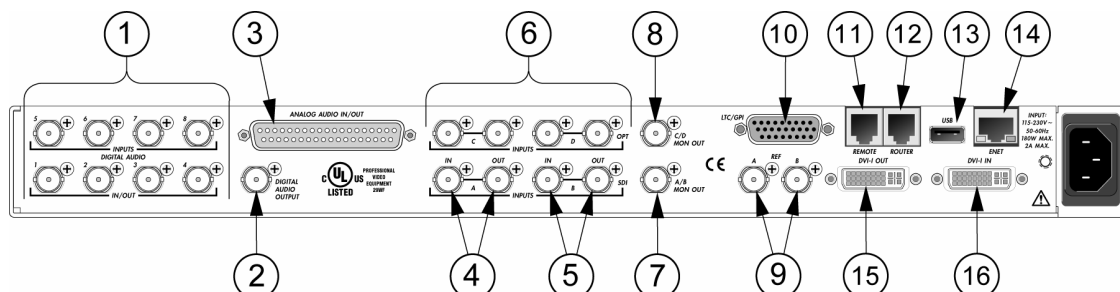


Table 2-2. Description of Back Panel Connectors

Key	Label	Description
1	DIGITAL AUDIO IN/OUT 1, 2, 3, 4 (IN/OUT), 5, 6, 7, 8 (IN ONLY)	Optional female BNC connectors for AES/EBU and Dolby Digital audio input and shared AES outputs
2	DIGITAL AUDIO OUTPUT	Female BNC connector for Dolby audio output
3	ANALOG AUDIO IN/OUT	37-pin, D-sub, male connector for analog audio inputs and outputs; the supplied breakout board can be used for solderless connections*
4	INPUT A (IN, OUT)	Female BNC looping HD or SD SDI input and output connector; termination required for passive loop-thru inputs
5	INPUT B (IN, OUT)	Female BNC looping HD or SD SDI input and output connector; termination required for passive loop-thru inputs
6	INPUTS C, D	Female BNC connectors for optional inputs (holes are plugged if option is not installed)
7	A/B MON OUT	Female BNC connector for monitoring of the selected A or B input; if both digital A + B inputs are selected, then the output is input A (this output is a source monitor only and does not include the waveform, vector, audio, or alarm on-screen information) NOTE 1: With VTM-OPT ASI, Inputs A and B cannot be selected simultaneously NOTE 2: With VTM-OPT-3GB , A/B MON OUT can be used as a test generator output (when selected)
8	C/D MON OUT (not available with TVM- VTM-ACV-2)	Female BNC connector for monitoring of the selected C or D input (SDI only); if both C + D inputs are selected, then the output is input C (this output is a source monitor only and does not include the waveform, vector, audio, or alarm on-screen information) NOTE 1: With VTM-OPT ASI, Inputs C and D cannot be selected simultaneously NOTE 2: With VTM-OPT-3GB , C/D MON OUT can be used as a test generator output (when selected)

Table 2-2. Description of Back Panel Connectors

Key	Label	Description
9	REF (A, B)	External reference input accepting blackburst and tri-level sync; termination required for loop mode
10	LTC/GPI	26-pin, high-density, female, D-sub connector for LTC, Clock, GPI, and TALLY input*
11	REMOTE	RJ11 socket to connect to the remote control panel*
12	ROUTER	RJ11 socket to control routing switchers*
13	USB	USB 1.1 port to support memory device for recall and storage of presets, DISP freezes, and SDI data freezes; it also supports flash updates and keyboard functionality
14	ENET	RJ45, female, 10/100BaseT connection*
15	DVI-I OUT	DVI-I output used to connect to a monitor with a digital video interface (an adaptor is supplied with the VTM Series to connect a standard XGA monitor to the DVI output)
16	DVI-I IN	DVI-I connector for a digital video interface source

*See Appendix B, "Pinouts," for the connections.

Ethernet Setup

1. Prior to the VTM Series Network configuration, obtain Transmission Control Protocol/Internet Protocol (TCP/IP) addresses from the System Administrator or from the Internet Service Provider (ISP).

These addresses are:

- A static IP address (unless Dynamic Host Configuration Protocol (DHCP) will be used)
- A Subnet Mask
- An optional Gateway IP


Be sure to record all addresses in the spaces provided below. The Gateway address is only needed if the VTM Series is routed to an outside network.

Record the addresses:

VTM Series Interface Static IP Address	
VTM Series Interface Subnet Mask	
Gateway IP Address	


2. Identify a host PC to configure and test the VTM Series.
- 3a. For a dedicated PC connection, connect the host PC with a network card to the "ENET" connection on the back panel of the VTM Series unit, using a CAT5 crossover cable (not included). See **Figure 2-3**.

Figure 2-3. VTM Series Dedicated PC Connection

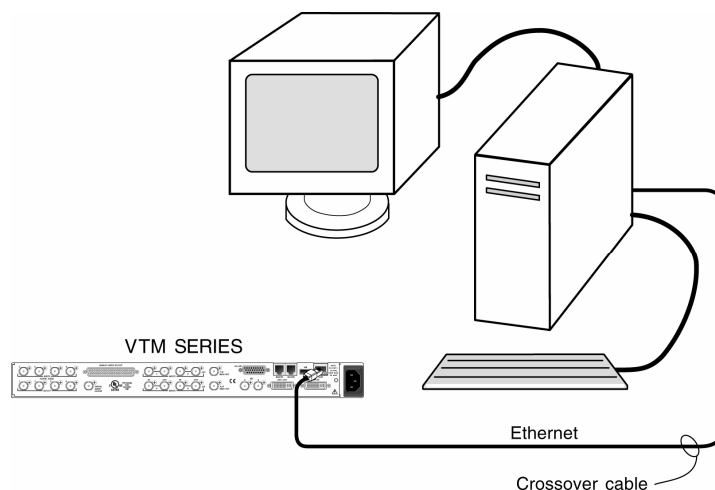

3b. For a network connection, connect the network hub to the back panel of the VTM Series unit, using a CAT5 network cable (not included). See **Figure 2-4**.

Figure 2-4. VTM Series Network PC Connection

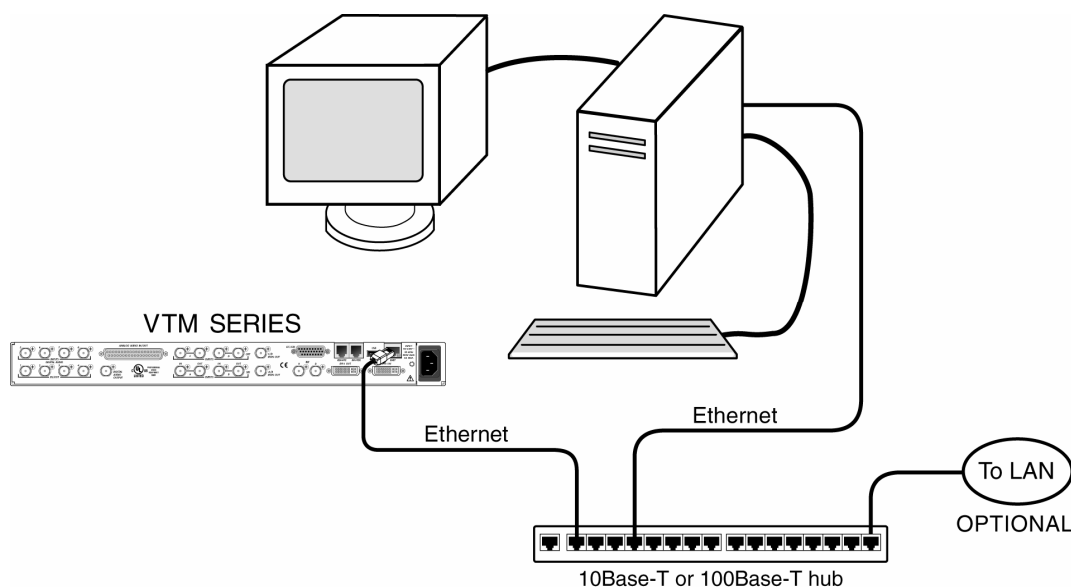

4. Ethernet Configuration

- a) Press the SETUP button on the VTM front panel.
- b) Press the UP/DOWN button to highlight the COMMUNICATIONS menu, and then press the ENTER button to enter the submenu.
- c) Press the UP/DOWN button until the IP CONFIGURATION submenu is highlighted.
- d) Press the ENTER button or LEFT/RIGHT knob to enter the IP CONFIGURATION submenu.
- e) (If using DHCP) Press the LEFT/RIGHT button to highlight DHCP. When DHCP is highlighted, press the UP/DOWN button to toggle the state to ON.

Press the RIGHT or LEFT buttons to highlight ACCEPT, and then press ENT. The IP Address is retrieved from the DHCP server and placed under the appropriate submenu.


(If not using DHCP) Press the LEFT/RIGHT button to select IP ADDRESS. Press the UP/DOWN button to change the value selected, and press the LEFT/RIGHT button to highlight the next value. Repeat for the remainder of the IP Address, Subnet Mask, and Gateway. To avoid conflicts, the static IP Address, Subnet Mask, and Gateway should be obtained from the System Administrator.

- f) Press LEFT/RIGHT to highlight ACCEPT, and press ENT to accept the entered values.
- g) Press the EXIT button to exit the submenu.

Configuring the VTM Series for Remote Control

The configuration shown in **Figure 2-5** is for one PC running multi-connection software and equipped with a Network Interface Card (NIC) connected to multiple VTMs. The interconnecting cables can be extended using electronic distribution.

Figure 2-5. Multiple VTM Series Network PC Connection

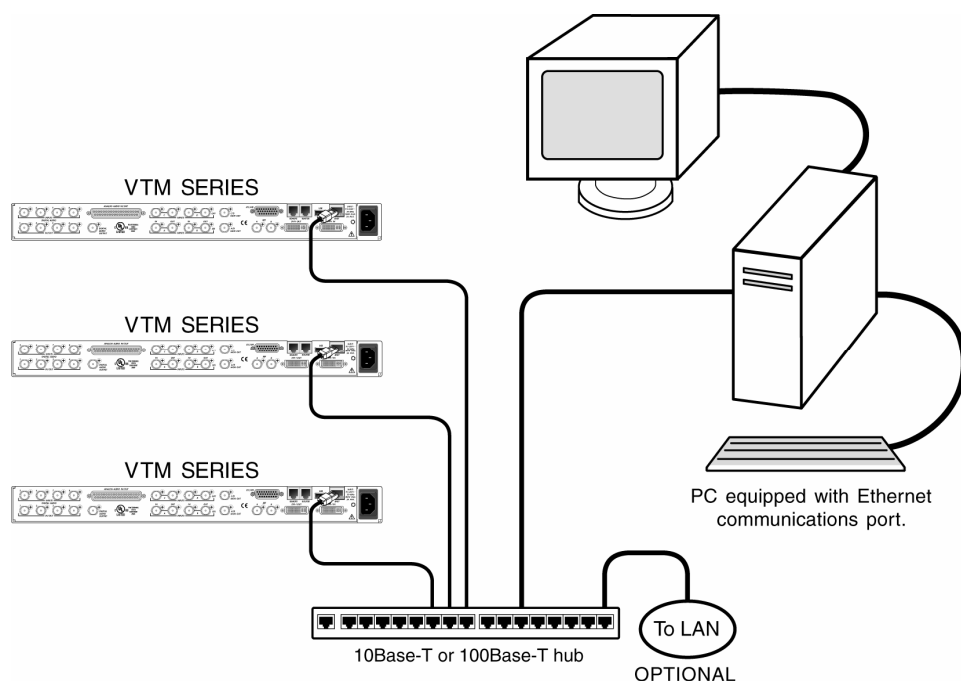


Configuring VTM/TVM Series Units with the RCU 1000 Remote Control

For the following configurations, the interconnecting cables can be extended using electronic distribution. There are two ways to configure VTM/TVM Series units with the RCU 1000 remote control:

- One RCU 1000 connected to one VTM/TVM Series unit using the REMOTE port.

- One RCU 1000 connected to multiple VTM/TVM Series units using a multidrop cabling adaptor and straight through cable using RJ-11 connectors (not a standard telephone wire) that connects to the REMOTE ports on the back of the VTM/TVM Series units and to the TO MAIN UNIT connector on the back of the RCU.
- All VTM/TVM Series units must have unique unit IDs. The unit ID is the identification number of the VTM/TVM Series units, and can be set to any number within a range of 1 to 99 via the COMMUNICATIONS menu. The unit IDs should be different than the identification numbers of other units in the same system configuration. The REMOTE port must be terminated on the last VTM/TVM Series unit, as shown in **Figure 2-6**. The flat cable shown in **Figure 2-6** is a straight through cable. See the *RCU 1000 Installation and Operation Handbook* for more information on the RCU 1000.


Figure 2-6. Connecting the RCU 1000 Remote Control Panel to Multiple VTM/TVM Series Units

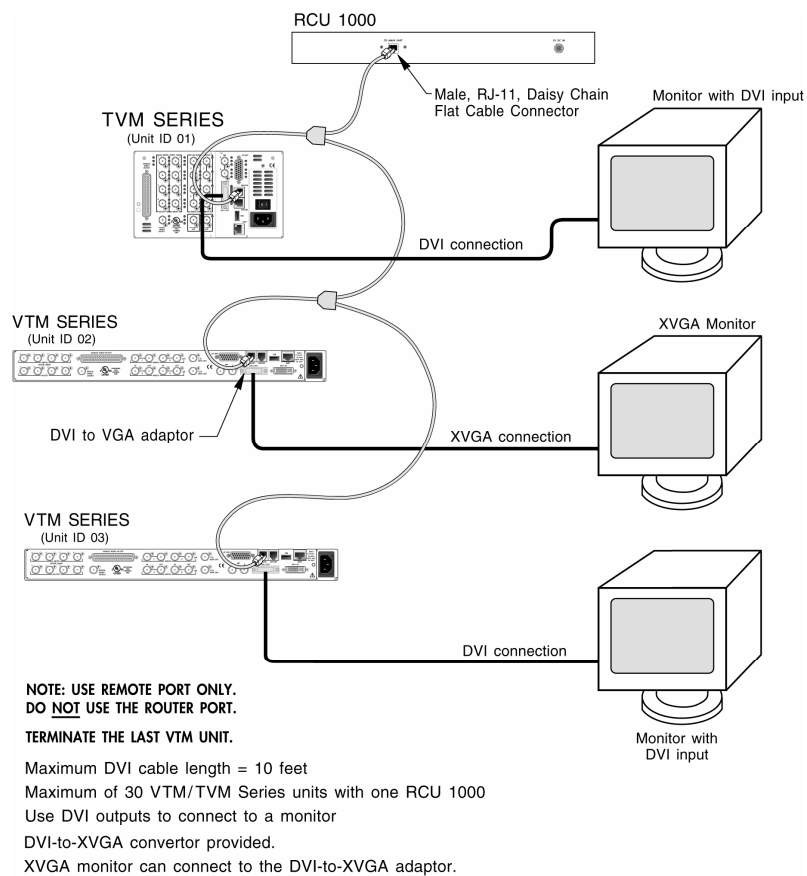

Using the Bypass Feature

The Bypass feature can be used in conjunction with an existing PC and monitor to save space and improve system efficiency, as illustrated in **Figure 2-7**. For the appropriate connectors, see **Figure 2-2** on page 15.

Figure 2-7. Using the Bypass Feature

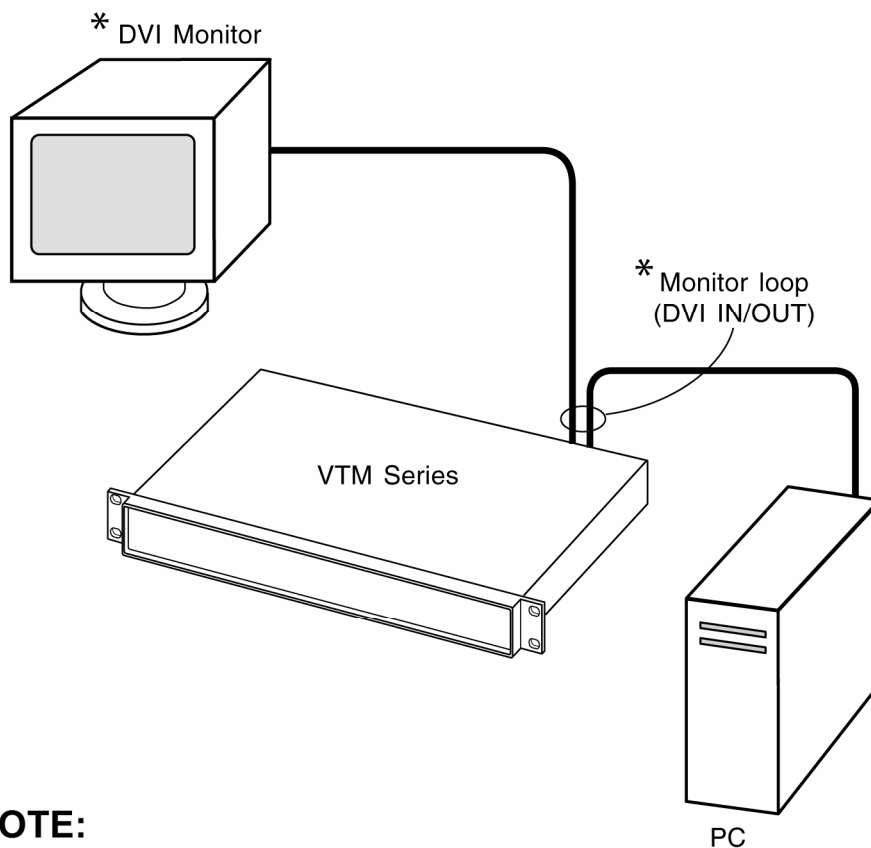

*** NOTE:**

DVI-to-XVGA adaptor provided.

XVGA monitor output can connect to the DVI-to-XVGA adaptor.

BYPASS can be used to switch the monitor display from the PC output to the VTM Series output.

Section 3 ♦ General Operation

Terms

Display: Output that appears on the DVI/XGA monitor

Full: Full-screen display of the selected pane (non quad or multi display)

Multi: A multi-quadrant display that contains preconfigured screens (for VTM Classic, Data Analyzer, Custom Timing, and Waveform-Vector screens only) , and 3GB/s WFM/VEC (with TVM-VTM-3GB only)

Pane: One quadrant in a multi-quadrant screen (Quad or Multi)


Quad: Screen that contains four panes

Introduction to Operating the VTM Series

The VTM Series, shown and described in **Figure 3-1**, can contain up to four selectable panes on the screen, in standard quad mode. Each pane provides a user-selectable customized display of waveform, vector, gamut, audio, picture, relative timing, alarm status, or data analyzer functions. A sample quad screen with the upper-left pane selected is shown in **Figure 3-2**.

Certain buttons function differently according to the selected pane. Once the pane and function for the pane is determined, more detailed settings can be configured. This section focuses on the operation of the VTM Series according to the selected display.


Figure 3-1. VTM Series Front Panel*

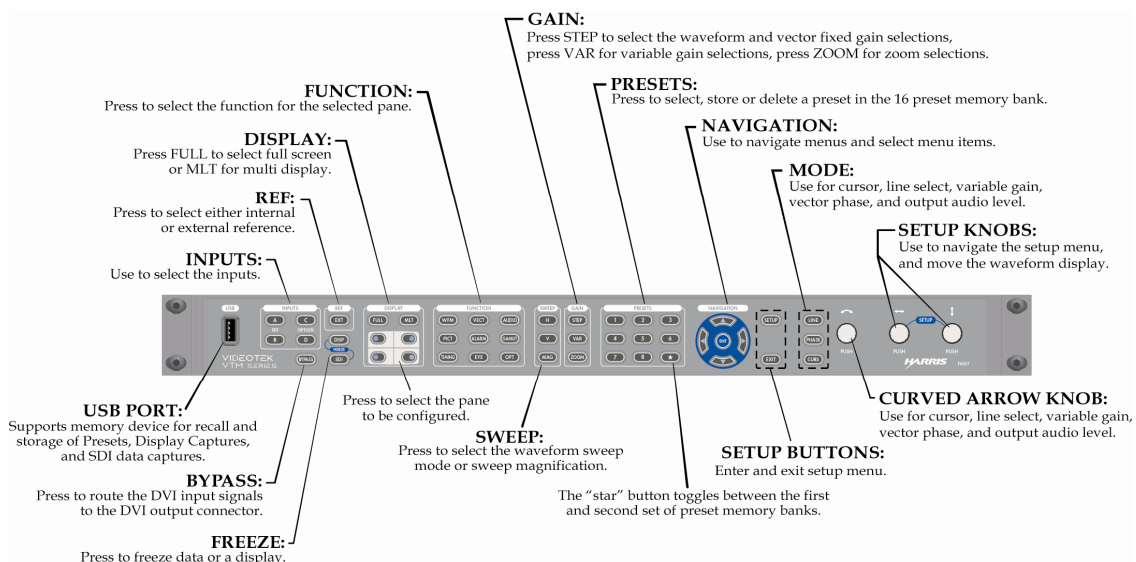

* Pressing and holding certain buttons will activate menus for additional functionality.

NOTE: In the inputs groups, press the A and B (or C and D) buttons at the same time to display inputs A-B (or C-D) simultaneously if they are the same format.

Figure 3-2. Sample Multi-Display

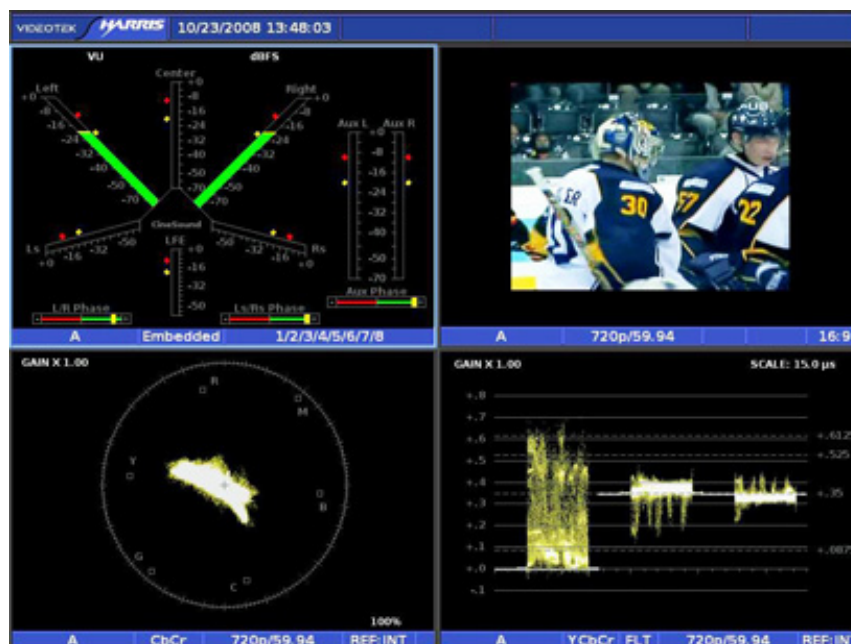

Types of Controls

The VTM Series is controlled in three ways:

- **Quick Controls:** Controls on the front panel that adjust the parameters that are frequently used.
- **Pane Menu Settings:** Pop-up menus within a pane that are used to control the parameters for the individual pane.
- **Global Setup Menu Settings:** Setup menu parameters that affect the entire unit (not pane specific). The Setup menu is accessed by pressing the SETUP button.

Front Panel Illumination

The front panel controls are illustrated in Figure 3-1. Most buttons and text are in a low tally (low illumination) state; under certain conditions, however, some buttons and text reach a high-tally (high illumination) state, as described in **Table 3-1**. If an option is not installed, the associated button illumination is OFF. The high and low tally illumination level can be set in the SYSTEM > CONTROL ILLUMINATION menu.

NOTE: Multiple buttons may be high tally for a pane at the same time. The last control selected that uses the curved arrow knob in the pane is the active control for that pane.

Table 3-1. Description of Front Panel Controls Illumination

Heading (Group)	Description
BYPASS	Press to toggle BYPASS on and off: - When BYPASS is off (the BYPASS button is low tally), the DVI output is the VTM Series. - When BYPASS is on (the BYPASS button is high tally), the DVI input signals are routed to the DVI Out connector. If EXIT BYPASS ON ALARM is enabled in the SYSTEM Setup menu, BYPASS is disabled when an active alarm occurs.
INPUTS	- The button is high tally when the input is selected and displayed in a pane. The button is low tally when the input is not selected for the selected pane. For C and D, the button does not illuminate when the option is not installed. - When the input buttons are pressed simultaneously, both buttons (A and B or C and D) are high tally.
FREEZE	DISP: The button is high tally when the entire XGA display is frozen. The button is low tally when the XGA display is in live mode. SDI: The button is high tally when one frame of raw data is stored and displayed. The button is low tally when the XGA display is in live mode.
GAIN	STEP: When the button is high tally, X2.5, X5, or X15 is active. When the button is low tally, X1 gain is active. VAR: The button is high tally when variable adjustment can occur. The button is low tally when variable adjustment is not available. ZOOM: The button is high tally in any zoom mode (indicated with zoom at the top of the pane). The button is low tally when not in zoom mode.
SWEEP	H: The button is high tally when the waveform pane is active and in horizontal sweep mode; otherwise, the button is low tally. V: The button is high tally when the waveform pane is active and in vertical sweep mode; otherwise, the button is low tally. MAG: The button is high tally when the MAG function is enabled in the selected waveform pane; otherwise, the button is low tally.
DISPLAY	FULL: The button is high tally when a full-screen is displayed. MLT: The button is high tally when multi-screen mode is selected. Pane Select buttons: The button is high tally to indicate which pane is selected.
FUNCTIONS	A function button is high tally to indicate the active function for the selected pane.
SETUP	SETUP: The Setup button is high tally whenever a Setup or pane menu is displayed. EXIT: The button is high tally when in a setup menu.
NAVIGATION	All buttons are high tally when in a setup menu.
SETUP KNOBS	RIGHT/LEFT Arrows: The arrows are high tally whenever the Pane or Setup menu is enabled. UP/DOWN Arrows: The arrows are high tally whenever the Pane or Setup menu is enabled.
CURVED ARROW KNOB	The curved arrow symbol is high tally whenever the knob has a directed function for Cursor, Line Select, Variable Gain, Vector Phase, Audio Output Level, or Setup or Pane menu control. The last control selected that uses the curved arrow knob is the active control for that pane.
MODE	LINE: The button is high tally when Line Select mode is enabled. PHASE: The button is high tally when phase control mode is enabled. CURS: The button is high tally when cursor mode is enabled.

Table 3-1. Description of Front Panel Controls Illumination

Heading (Group)	Description
PRESETS	▪ 1 – 8: The selected preset is high tally when stored or recalled except for preset *8, which is the factory default. A preset must contain settings in order to be selected for recall. ▪ *: The button is high tally when the second bank of presets is active (presets *1 through *8). The button is low tally for the first bank of presets when active (presets 1 through 8). *8 is the factory default preset.


Sleep Mode

Press and hold the ENT and DOWN NAVIGATION buttons to enter and exit Sleep mode. When entering Sleep mode, the instrument will turn off all LEDs and the display. The instrument is still active (i.e. alarms still triggered, etc.). When exiting Sleep mode, the instrument returns to an illuminated state.

Selecting a Pane

When multiple panes are displayed, only one pane can be selected at a time. The active pane is highlighted with a bright colored border. Press the desired DISPLAY button to select the active pane to be configured, as shown in **Figure 3-3**.

Figure 3-3. Selecting a Pane

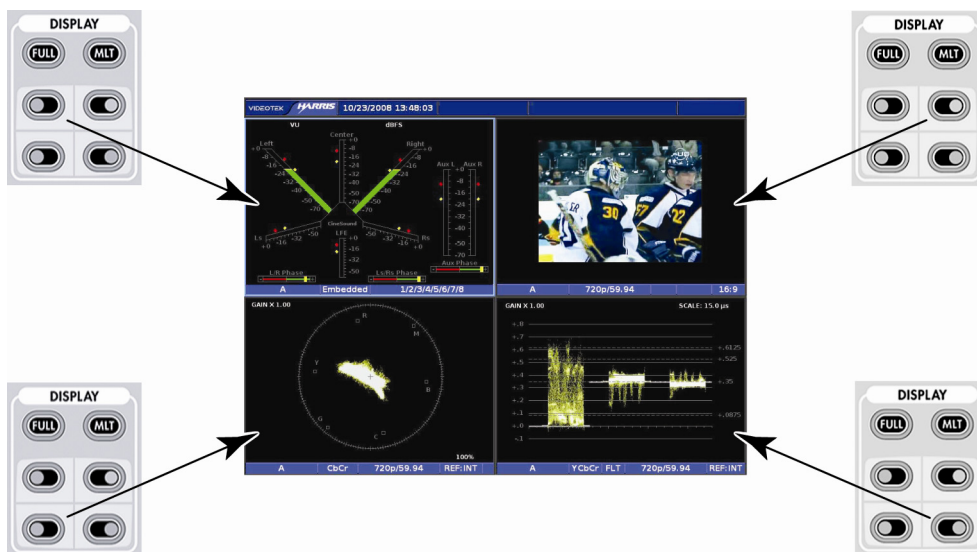

Full-Screen Display Selection




Press the **FULL** button in the display group to show a full-screen view of a selected pane. The full-screen display encompasses the entire screen (no other pane is displayed). Press the **FULL** button again to return to the Quad view.



Press the MLT button to access the multi-screen display. The Multi-Screen Display Selection information is found on page 112.

Selecting an Input for a Pane

NOTE: Input C and D buttons will not function if an option is not installed.

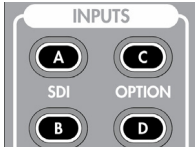

Press the Input buttons to select input A, B, A+B, C, D, or C+D. Press the two input buttons (A and B, or C and D) simultaneously to produce A+B or C+D overlay if they are the same format. When an input is selected, pressing another input button will change to the new input from the previous input.

There are two modes for selecting inputs: Linked and unlinked mode.

- When Linked: All panes change when a new INPUT button is pressed.
- When Unlinked: Only the selected pane changes the input when a new input is selected.

Format Mismatch Message

When selecting A+B or C+D while the inputs are in different formats, the message FORMAT MISMATCH is displayed. The inputs must be changed to the same video format if both inputs are to function simultaneously.

Linking Panes

Hold the A, B, C, or D input button for two seconds to enable the Link inputs pop-up menu selection. When the LINK INPUTS menu box appears, press the ENT button to toggle the selection. When linked, all the panes change to the selected input. If the panes are not linked to an input, the broken link icon appears on top of the menu bar.

Selecting the Function for the Pane



Once a pane is selected, press the function button to select Waveform, Vector, Audio, Picture, Alarm, Gamut, Timing, Eye (only works with Inputs A and B), or Option for the pane. Press and hold the function button to display the pane menu.

Function Not Allowed Message

When a button is pressed that cannot be utilized with the selected Function (Waveform, Vector, etc.), the message FUNCTION NOT ALLOWED briefly appears over the center of the screen.

Option Not Installed Message

When a button is pressed for an option that is not installed, the message OPTION NOT INSTALLED briefly appears over the center of the screen.

Navigating the Pane Setup Menu

NOTE: A function button can be pressed to exit from the menu. If a different function than the displayed function is pressed, the display will change to the newly selected function.

Use the NAVIGATION buttons or the SETUP POSITION knobs to navigate the Pane menu. The SETUP POSITION knobs and Navigation buttons are described below:



Press to exit the menu.



Press to exit the pane menu.



Press to select a menu item or open a menu or submenu.



Press to move up in the menu or submenu.



 
Press to move right to the next submenu.



Press to move out of the submenu.




Press to move down in the menu or submenu.




Rotate the knob to move the menu cursor up and down or to change a value or condition in a menu.

 Press the knob to exit the menu.



Rotate the knob to enter or exit the submenus.

Press the knob to select a menu item or move to the submenu.

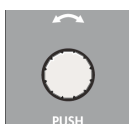

Rotate the knob to move the menu cursor up and down.

External Reference



Press to select the external reference selection INT or EXT. The INTERNAL reference is the built in reference. The EXT modes are:

- Input B or A = BB (Blackburst) or TRI (Tri-level sync) (when LOOP is selected in the EXT menu). If used, terminate with a 75 Ω terminator.
- Input A = BB (when SPLIT BB is selected in the EXT menu)
- Input B = TRI (when SPLIT TRI is selected in the EXT menu)

The default reference selection is INT. To change the external reference selection:

1. Press and hold the EXT button to access the External Reference menu. **Table 3-2** shows the EXT menu selections.

Table 3-2. EXT menu

Selection	Selection Option
EXTERNAL REFERENCE	LOOP (Default)
	SPLIT – FOLLOW
	SPLIT – BB
	SPLIT – TRI
SETUP	Press ENT

2. When EXTERNAL REFERENCE is highlighted, press the RIGHT NAVIGATION button to open the menu selections.
3. Press the UP or DOWN NAVIGATION to highlight the reference, and press the ENT button to select the reference.
4. Press EXIT to exit the menu.

External Reference

NOTE: 1080P 50/59.94/60 Hz tri-level Sync is not supported.

The External Reference submenu is used to set the external reference input as a looping input (one input) or a split input (two inputs). The selections are:

- If LOOP is selected, the external reference connectors are tied together.
- If SPLIT - FOLLOW is selected while in split-mode, the external reference will be Blackburst for SD and Tri-level for HD.
- If SPLIT- BB is selected in split mode, then external reference A is used.
- If SPLIT- TRI is selected in split mode, then external reference B is used.

When in External Reference (REF:EXT) and in a cross reference condition (e.g. HD referenced to BB, or SD referenced to TRI), the waveform will not roll if the frame rates match. A horizontal offset shows the timing difference between the External Reference and the input signal at the start of the frame.

EXT Setup

Press the ENT button to access the global Setup menu. For more information on the global Setup menu see Section 4, “Global Setup Menu Functions.”

Pane Overview

There are various screens for the VTM Series: full-screen display, Quad (4 display panes), and multi (2 to 4 display panes). Even if the screen is full screen, quad, or multi screen, the pane contains the Main Title Bar, the display, and the status bar. A diagram of the quad display is shown in **Figure 3-4**. A diagram of the full-screen display is shown in **Figure 3-5**.

Figure 3-4. Sample Quad Diagram


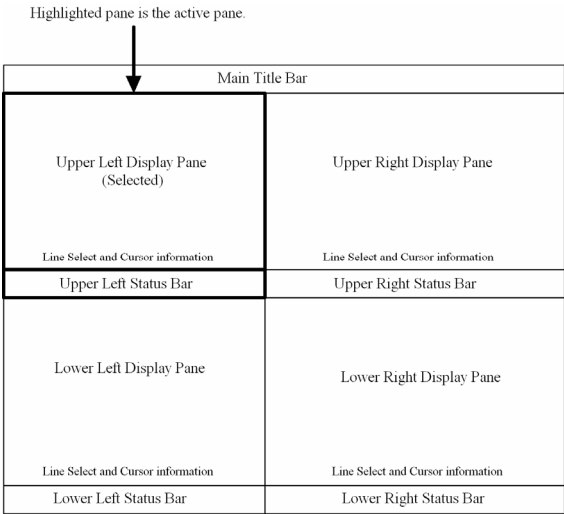


Figure 3-5. Full-Screen Display Diagram

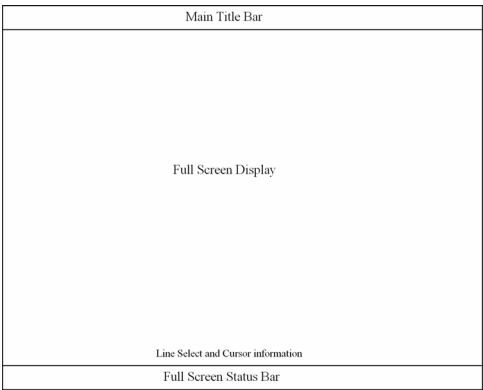

Main Title Bar

The main title bar is displayed at the top of the screen, and contains the company name, date and time, icon indicators, most current alarm (alarm background color is yellow when active), and the model name.

Icons

Icons appear in the main title bar and are shown in a specified order (left to right).

Table 3-3 shows the icons and the condition for the appearance:

Table 3-3. Description of Icons

Icon	Condition
	Panel Lock engaged
	Aural Alert silenced (No Sound)
	RCU connected and active. The RCU icon replaces the Alarm condition active icon when the RCU is connected and active.
	External USB device connected
	Inputs not linked (broken link)
	Alarm condition active
	DISP or SDI data is frozen in memory. If a display is captured and in memory, DISP overlays the icon. If SDI is captured and in memory, SDI overlays the icon. If both DISP and SDI are captured and in memory, DISP and SDI overlay the icon.

Status Bar

A status bar is located at the bottom of each pane. The status bar for each pane displays information based on the function selected and configuration applied. See the specific pane function section (Waveform, Vector, Audio, Picture, Alarm, Gamut, Timing, Eye, and Option) for more detailed information on the status bar that is displayed.

The Waveform Display

Pressing the WFM function button accesses the Waveform display for the selected pane. The waveform graticule scales, units of measure, and critical amplitude limits change according to the video format displayed. Table 3-4 shows the Units of Measure that appear for a video format. **Table 3-5** lists the critical amplitude limits, which are indicated on the screen by special dashed lines for the video formats that can be displayed.


Table 3-4. Video Formats and Units of Measure

Video Format	Unit of Measure
High Definition and Standard Definition 525 and 625	Volts or Percent (Selectable)
Composite or Standard Definition 525 displayed as composite (NTSC)	IRE
Composite or Standard Definition 625 displayed as composite (PAL)	Units or Volts (Selectable)

Table 3-5. Video Formats and Critical Amplitude Limits

Video Format	Critical Amplitude Limits
High Definition and Standard Definition	0.6125 V = upper 75% chroma limit 0.525 V = 75% luminance limit 0.350 V = 50% point; black for color difference channels 0.0875 V = lower 75% chroma limit
Standard Definition 525 as Composite (NTSC)	7.5 IRE – black level

A waveform display is shown in **Figure 3-6** and described in **Table 3-6**. The figure shows the location for the various waveform display fields.

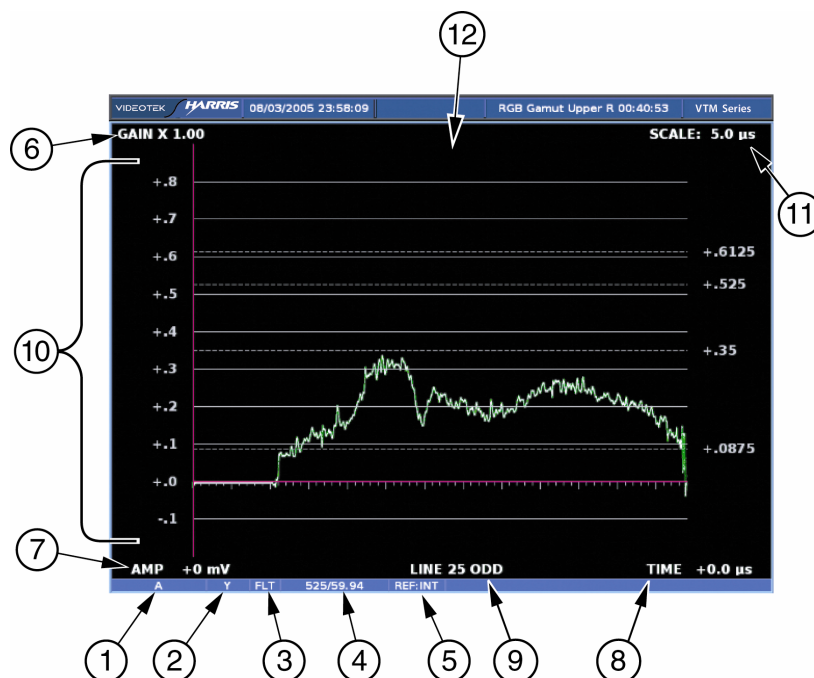Figure 3-6. Waveform Display Diagram**Table 3-6. Description of Waveform Display Diagram**

Field Identifier	Field Information	Nomenclature
1	Input	Displays user-configurable source IDs for input and routers
2	Format	Displayed as YCbCr, RGB, YRGB, or Composite (CMPST). This can be selected in the HD FORMAT or SD FORMAT submenu of the WFM Pane menu.
3	Filter	- Displayed as FLT, LP, CHR, BOW (Bowtie), R-Y - This can be selected in the COMPOSITE or COMPONENT FILTER submenu of the WFM Pane menu.

Table 3-6. Description of Waveform Display Diagram

Field Identifier	Field Information	Nomenclature
4	Standard	Displays the Line Rate/Frame Rate [1080i/59.94]. This is selected in the VIDEO FORMAT > VIDEO A though D CONFIGURE menu.
5	Reference	Displays the reference as INT, EXT. Toggled by pressing the EXT button.
6	Gain	Displays the selected gain. The Gain ranges are 0.5 to 15.0. Change by pressing the STEP or VAR button.
7	Amplitude cursor readout	Displays the amplitude cursor as AMP and the selected numerical value followed by the unit or measure (mV, units, or IRE).
8	Time cursor readout	Displays the time cursor as TIME and the selected numerical value followed by the unit or measure (μ s).
9	Line select information	Line select is shown as Line number with the ODD or EVEN field (odd or even field will only show for interlaced Video Formats).
10	WFM graticule	Shows the WFM RGB, YCbCr, or Composite graticule. The graticule is dependent upon the Video format, Zoom, and scale selections.
11	Scale	Indicates the major graticule indications for time.
12	Zoom	▪ Displays Zoom when enabled ▪ Blank when Zoom is disabled ▪ Press the ZOOM button to cycle through ZOOM modes

Graticules are configured by selecting the Video Input Format along with the appropriate Waveform Setup scale adjustment (Units, %, or Volts). The scales can also change when ZOOM is pressed.

Figure 3-7 to Figure 3-9 illustrate some waveform graticules with the critical amplitude limits for the video formats that can be displayed by the VTM Series. The critical amplitude limits are indicated on the screen by special dashed lines.

NOTE: When in VAR mode for all waveform scales, the graticule scale and numeric identifiers will not be shown. Only the graticule lines will be displayed.

Figure 3-7. RGB and YCbCr Graticule

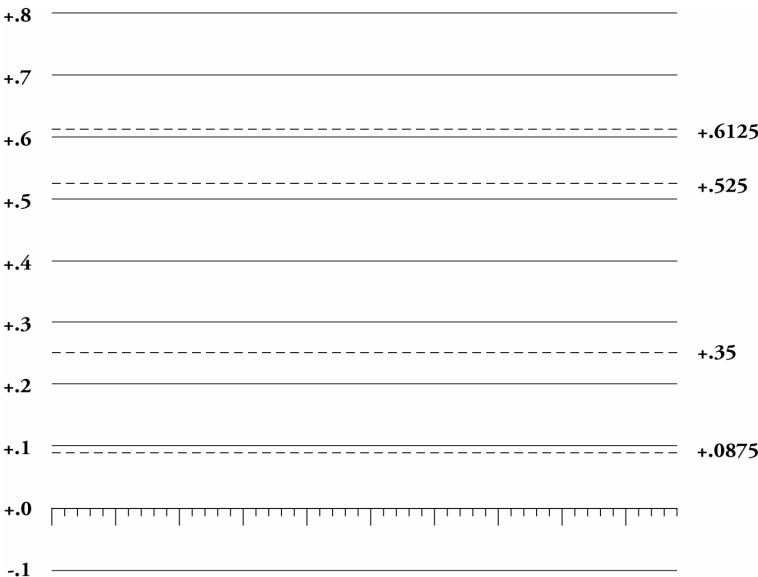


Figure 3-8. RGB and YCbCr Zoom 0 mV Graticule


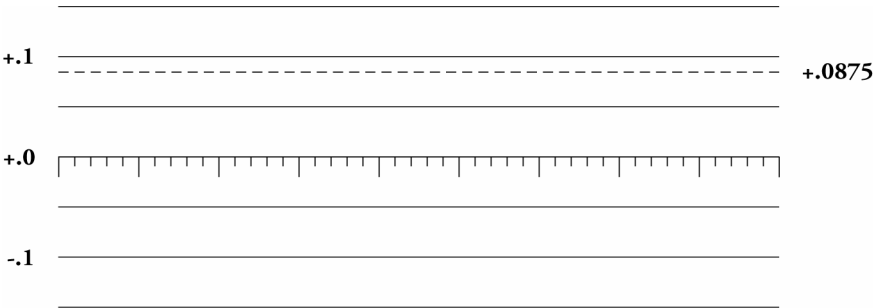


Figure 3-9. RGB and YCbCr Zoom 700 mV Graticule

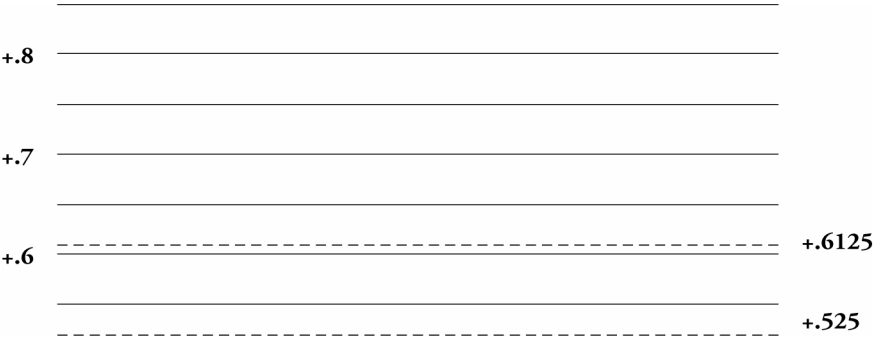


Waveform Front Panel Selections

The following buttons directly affect the waveform display.

Moving the Waveform using the Setup Knobs

Move the Waveform display relative to the graticule by using the LEFT and RIGHT arrow Knob (for horizontal movement) and the UP and DOWN arrow knob (for vertical movement), as shown in **Figure 3-10**. Press the LEFT/RIGHT (horizontal direction) or UP/DOWN (vertical direction) arrow knob to center the waveform in the particular direction. Centering the waveform can also be performed by using the Waveform pane menu (by pressing and holding the WFM button).


Figure 3-10. Moving the Waveform

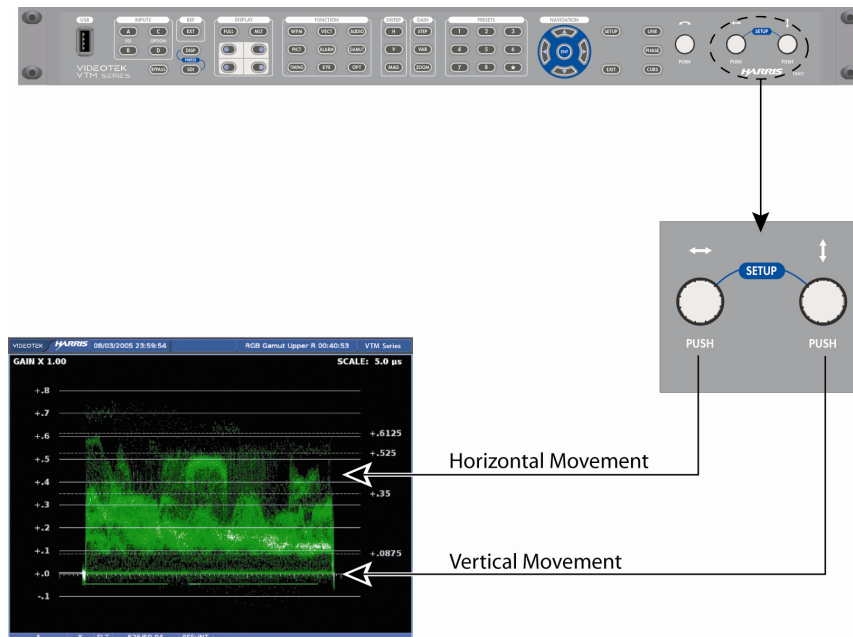

Sweep Buttons

The Sweep buttons are used to determine the sweep rate scale. The scale is displayed in the upper-right area of the waveform pane, as shown in **Figure 3-11**.

Figure 3-11. Establishing the Sweep Scale

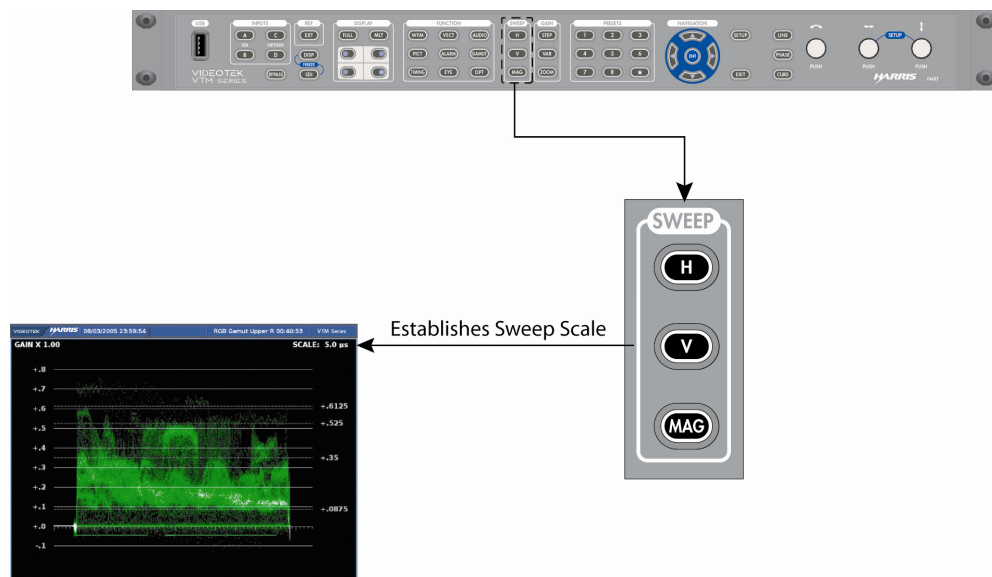

NOTE: A menu selection is available to produce a 4H or 4V waveform.

H In the SWEEP group, press the H button to select one of the horizontal sweep modes. Also, press the H button to step through each component in a signal. The Components that are utilized with the H button can be selected and deselected in the COMPONENT SEQUENCE pane menu. When one to four components are selected, press the H button to view 1H (1 Horizontal or 5.0 μs when one component is shown). With one component selected, press the H button to toggle between viewing one single component H waveform and multiple component H waveforms (with blanking turned off two simultaneous component H waveforms are used to view any ancillary data).

When two components are selected in the COMPONENT SEQUENCE pane menu, press the H button to view 1H or 2H (2 Horizontal or 10.0 μs when two simultaneous components are shown). When three components are selected in the COMPONENT SEQUENCE pane, press the H button to view 1H or 3H (3 Horizontal or 15.0 μs when three simultaneous components are shown). When four components are selected in the COMPONENT SEQUENCE pane, press the H button to view 1H or 4H (4 Horizontal or 20.0 μs when four simultaneous components are shown in YRGB).

NOTE: Vertical Sweep is disabled when in R-Y mode (ACV only).

V Also in the SWEEP group, press the V button to select one of the vertical sweep modes. The Components that are utilized with the V button can be selected and deselected in the COMPONENT SEQUENCE pane menu. A/B mode will show only one component from the selection of R, G, or B when in 2V mode. When one to three components are selected, press the V button to view 1V (1 Vertical when one component is shown). With one component selected, press the V button to toggle between viewing one single component V waveform and two multiple component V waveforms (with blanking turned off two simultaneous component V waveforms are used to view any ancillary data).

When two components are selected in the COMPONENT SEQUENCE pane menu, press the V button to view 1V or 2V (two Vertical when two simultaneous components are shown). When three components are selected in the COMPONENT SEQUENCE

pane menu, press the V button to view 1V or 3V (three Vertical for SDI when three simultaneous components are shown). When four components are selected in the COMPONENT SEQUENCE pane menu, press the V button to view 1V or 4V (4 Vertical for SDI when four simultaneous components are shown).




Press the MAG button to change the horizontal magnification or to turn the magnification OFF.

Gain Buttons

Gain is used to set the range of the vertical amplification in the video signal. The standard gain in the video signal is x1. The VTM Series can be used to set the gain amplification in the video signal using the Gain group of buttons. The gain setting appears in the upper-left portion of the waveform pane, as shown in **Figure 3-12**.

Figure 3-12. Establishing the Gain

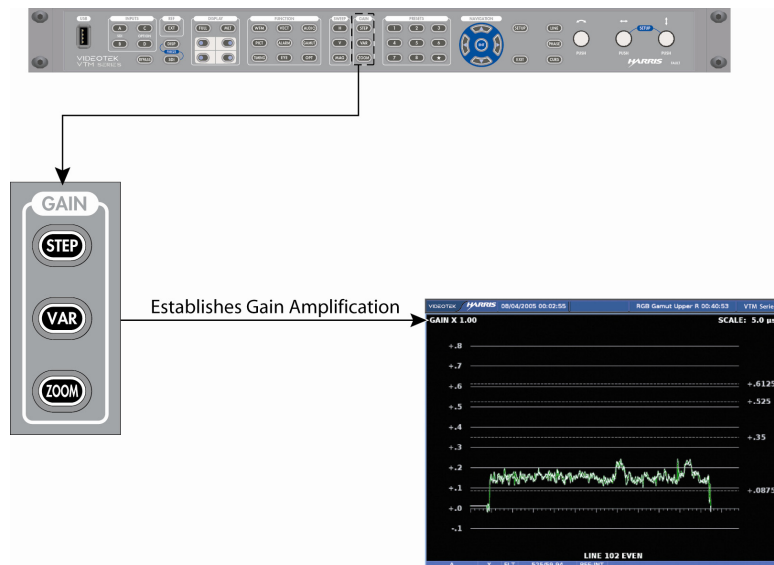

Press the STEP button to step through the available gain selections x1.0, x2.5, x5.0, x15.0. Press and hold the STEP button to select the GAIN pane menu. STEP button functionality is modified in the step pop-up menu. Selections are:

- Allow all
- x1 and x2.5 (only)
- x1 and x5 (only)
- x1 and x15 (only)



Press VAR to access Waveform Variable Gain. Once the VAR button is illuminated, the Waveform Variable Gain can be adjusted using the CURVED ARROW KNOB. The gain is adjusted in increments of 0.01. The Variable Gain range for a waveform will be x0.50 to x15.00.

Press the VAR button to exit variable gain mode.

If Variable Gain mode is selected while already in a fixed gain (such as x2.5 or x5) the gain is set to the variable gain selected. When VAR is pressed to exit variable gain, the

gain returns to the previously fixed gain. Pressing the STEP button while in variable gain returns the gain to x1.00.

Press the ZOOM button to cycle through one of three display options:



- ZOOM positioned on the 0 IRE, 0 mV, or 0% graticule line
- ZOOM positioned on the 100 IRE or 700 mV (or 800 mV for Eye Pattern), or 100% graticule line
- Normal

At each zoom position, the graticule scale and waveform displays expand to provide more resolution around the zoom point.

Placing the Waveform Display in Line Select Mode


NOTE: When inputs A and B are selected simultaneously within the same pane, the Line Select function is not available.



Pressing the LINE button enables the selected pane to monitor a single line of a video signal. This enables Line Select to monitor individual areas of the entire image. To view a line in Line Select mode:

1. Press the LINE button to place the selected waveform display pane in Line Select mode. At the bottom-center of the display, the pane displays the Line number and Odd or Even field, as shown in **Figure 3-13**.

Figure 3-13. Establishing Line Select

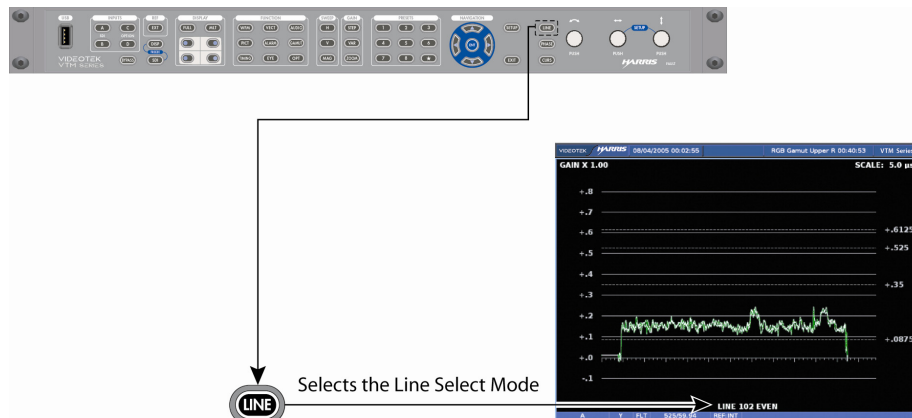

NOTE: In a Progressive (p) format. Odd and even selection is not available.

2. Press the CURVED ARROW knob to alternate between the ODD and EVEN fields.
3. Rotate the CURVED ARROW knob to select the line to be displayed.


When the panes are linked by the INPUT button, all WFM, VECT, and GAMUT panes are selected when the LINE button is pressed. When a picture is displayed in one of the panes, a marker across the picture approximates the displayed line position (+/- 1 line).

Waveform Cursor Selections



Cursors are available for precise measurement of waveform voltage and waveform time. The Time Cursor indication is in the lower-right of the pane, and the amplitude cursor indication is in the lower-left of the pane as shown in **Figure 3-14**.

Figure 3-14. Establishing Cursor Select

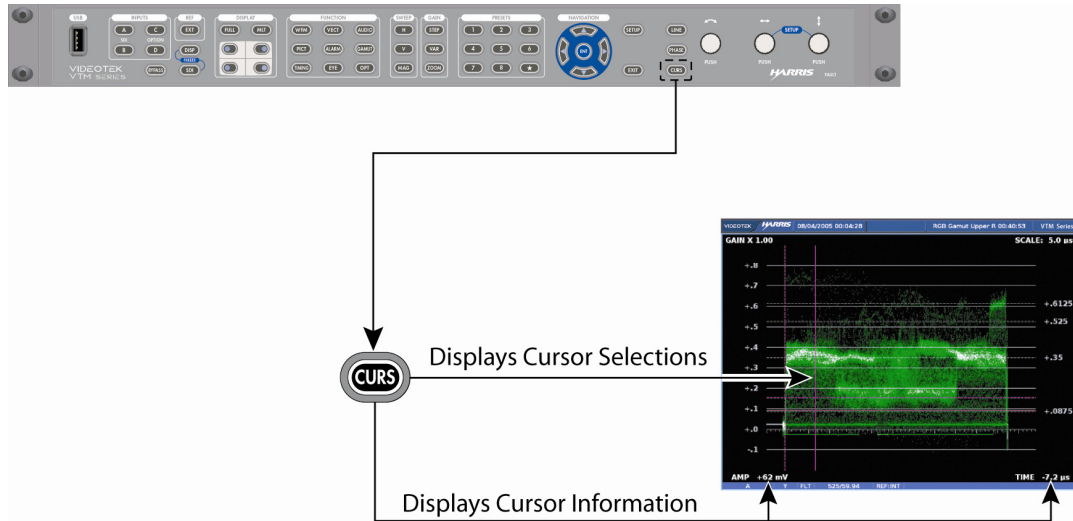

To enable the time and/or amplitude cursors, press and hold the CURS button. Use the NAVIGATION buttons or knobs to highlight Amplitude or Time. Once selected, press the ENT button to enable it. Once one or both cursors are selected, press the EXIT button to exit the CURS pane menu.

When the cursor is selected, a readout will appear at the bottom of the display. The horizontal cursor is AMPLITUDE. The vertical cursor is TIME.

If both TIME and AMP are displayed, pressing the CURS button will select which cursor to control. In all cases, the TIME or AMP numeric readout at the bottom of the display indicates the difference between the REF and DELTA cursors. The active cursor (REF, DELTA, or both) is shown with small arrows at both ends of the cursor.

Once a cursor is selected for control:

1. Press the CURVED ARROW knob to select the REF or DELTA cursor to control. The REF line is the solid line, and the DELTA cursor is the dotted line.
2. Rotate the knob to move the REF or DELTA cursor to the desired location.
3. Press the knob for the next line. Rotate the knob to move the other line to the desired location.
4. Press the knob a third time to control both the REF and DELTA cursors.
5. Repeat as necessary.

To exit the cursor function while leaving the cursors active, just select another mode in the pane (i.e. Line Select, Variable Gain, etc.).

Waveform Pane Menu Selections

Pressing and holding the WFM or DISPLAY PANE buttons in the active waveform pane enables the pane menu. The Waveform Pane menu is described in **Table 3-7** for analog waveform monitoring, in **Table 3-8** for SD-SDI waveform monitoring, and **Table 3-9** for HD-SDI waveform monitoring. The submenus are different for each format. **Table 3-7** through **Table 3-9** indicate the menu items that are available with the selected formats.

NOTE: The component sequence selections are dynamically dependent on the SD or HD format selection. The component selections will only be shown when the component formats are selected.

Table 3-7. Waveform (Analog) Menu Structure

Selection	Selection Option
COMPOSITE FILTER	FLT (FLAT)
	LP (LOW PASS)
	CHR (CHROMA)
	F/LP (FLAT & LOW PASS)
	R-Y (TVM-VTM-ACV-2 only)
PARADE/OVERLAY	PARADE
	OVERLAY
COMPONENT SEQUENCE	NOT AVAILABLE
CENTER WAVEFORM	ENTER
WAVEFORM SETUP	Press ENT

Table 3-8. Waveform (SD-SDI) Menu Structure

Selection	Selection Option	Selection Option
COMPOSITE FILTER (for digital formats)	FLAT (FLT)	-
	LOW PASS (LP)	-
	CHROMA (CHR)	-
	F/LP (FLAT & LOW PASS)	-
COMPONENT FILTER	FLAT	-
	LOW PASS	-
	BOW (BOWTIE)	-
PARADE/OVERLAY	PARADE	-
	OVERLAY	-
SD FORMAT	CMPST (COMPOSITE)	-
	YCbCr	-
	RGB	-
	YRGB	-

Table 3-8. Waveform (SD-SDI) Menu Structure

Selection	Selection Option	Selection Option
BLANKING	BLANK ALL	-
	SHOW SAV/EAV	-
	SHOW ALL	-
COMPONENT SEQUENCE (related to SD FORMAT selection)	If CMPST is selected - Not Available	-
	If YCbCr is selected (Y, Cb, Cr)	ON
		OFF
	If RGB is selected (R, G, B)	ON
		OFF
	If YRGB is selected (Y, R G B)	ON
		OFF
CENTER WAVEFORM	Press ENT	-
WAVEFORM SETUP	Press ENT	-

Table 3-9. Waveform (3G HD-SDI) Menu Structure

Selection	Selection Option	Selection Option
COMPOSITE FILTER (for digital formats)	FLAT (FLT)	-
	LOW PASS (LP)	-
	CHROMA (CHR)	-
	F/LP (FLAT & LOW PASS)	-
COMPONENT FILTER	FLT (FLAT)	-
	LP (LOW PASS)	-
	BOW (BOWTIE)	-
PARADE/OVERLAY	PARADE	-
	OVERLAY	-
HD FORMAT	COMP (COMPOSITE)	-
	YCbCr	-
	RGB	-
	YRGB	-
	YCbCr + Alpha	-
	RGB + Alpha (TVM-VTM-DLK only)	-
BLANKING	BLANK ALL	-
	SHOW SAV/EAV	-
	SHOW ALL	-

Table 3-9. Waveform (3G HD-SDI) Menu Structure

Selection	Selection Option	Selection Option
COMPONENT SEQUENCE (related to HD FORMAT selection)	If CMPST is selected – Not Available	-
	If YCbCr is selected (Y, Cb, Cr)	ON
		OFF
	If RGB is selected (R, G, B)	ON
		OFF
	If YRGB is selected (Y, R G B)	ON
		OFF
CENTER WAVEFORM	Press ENT	-
WAVEFORM SETUP	Press ENT	-

Filter Selection

The filters available are dependent upon the input format. The filters available are as follows:

- **Flat:** No filtering
- **Low Pass:** Selects the Low Pass filter
- **Chroma:** Selects the Chroma filter
- **F/LP:** Selects Flat and Low Pass filtering
- **R-Y:** Selects the R-Y filter (selection available with TVM-VTM-ACV-2 option only)
- **Bowtie:** The bowtie filter is used to check the timing relationships between the digital components. A bowtie test signal is required.

Parade and Overlay Selections

Multiple inputs can be displayed in a single pane.

- When PARADE is selected, the components of the same input are shown next to one another (i.e., Inputs Y, then Cb, then Cr in a YCbCr signal).
- When OVERLAY is selected for a single input, the components of the input signal are displayed over each other (i.e., R over G over B in an RGB signal). When OVERLAY is selected for A & B, like components of each input are over each other (i.e., R over R, G over G, and B over B). A & B cannot be displayed in parade mode.

HD or SD Format

When in the Format menu, select one of the display formats: (Y)RGB, YCbCr, or CMPST (Composite). The selected (Y) RGB, YCbCr, or CMPST text is indicated with a check mark. **Table 3-10** lists the relationships between the input and display formats.

Table 3-10. Input and Display Format Relationship

Input Format	RGB	YCbCr	YRGB	COMP	YCbCr + Alpha (10 bit only)	RGB + Alpha (TVM-VTM- DLK) (TVM-VTM- 3GB 10 bit only)
3Gb/s	Yes	Yes	Yes	Yes	Yes	Yes
HD	Yes	Yes	Yes	Yes	Yes	Yes
SD	Yes	Yes	Yes	Yes	No	No
Analog composite (option)	No	No	No	Yes	No	No

Blanking (SDI Signals only)

The blanking selections are Blank All, EAV/SAV, and Show All.

- “Blank All” displays only the active video of the input signal.
- “Show EAV/SAV” displays the active video and the EAV/SAV headers of the input signal.
- “Show All” displays the ancillary data, EAV/SAV, and active video.

Component Sequence (SDI Signals only)

Select to enable the component Y, Cb, and Cr when YCbCr is selected in the SD or HD Format menu; Y, R, G, and B, when YRGB is selected in the SD or HD FORMAT menu.

Center Waveform

Press the ENT button to activate the Center Waveform selection. Once ENT is pressed, the waveform returns to the center of the waveform graticule.

Waveform Setup

Press the ENT button to access the global Waveform setup menu. For more information on the global Waveform Setup menu see Section 4.

Utilizing the Eye Display (TVM-VTM-EYE-H, TVM-VTM-EYE-S, VTM4100PKG-EH, VTM4140PKG-EH, VTM4140PKG-ES)

NOTE: Available for Inputs A and B only.

The Eye Pattern display is created by sampling the serial digital signal with the recovered serial clock. The Eye Pattern display is used to measure signal amplitude, jitter, rise time, and other irregularities. Measurement of the transition widths is done by manually setting the cursors on the transition limits of the display and reading the offset in picoseconds (ps). The amount of jitter can also be estimated from the bar display above the Eye Pattern display. Amplitude is similarly measured using cursors.

To access the Eye Pattern display, press the EYE function button on the front panel. The Eye Pattern Display Diagram is displayed in **Figure 3-15** and described in **Table 3-11**.

Figure 3-15. Eye Pattern Display Diagram



Table 3-11. Description of Eye Pattern Display Diagram

Field Identifier	Field Information	Nomenclature
1	Amplitude cursor readout	Displays the amplitude cursor as AMP and the number in mV
2	Input	Displays user-configurable source IDs for input and routers
3	Standard	Line rate/Frame rate
4	Zoom	- Displays the Zoom when enabled - Blank when Zoom is disabled - Press the ZOOM button cycle through Zoom modes
5	High pass filter	Displays the selected Eye Filter
6	Scale	Displayed in ps
7	Time cursor readout	Displays the time cursor as Time and the number in ps
8	EYE graticule	Displays the Eye Pattern graticule
9	Jitter display	Displays the Jitter display. Jitter display changes according to the EYE PATTERN > JITTER DISPLAY TYPE menu in the Global Setup menu

Figure 3-16 to Figure 3-18 display the Eye Pattern graticules.

Figure 3-16. Eye Pattern Graticule

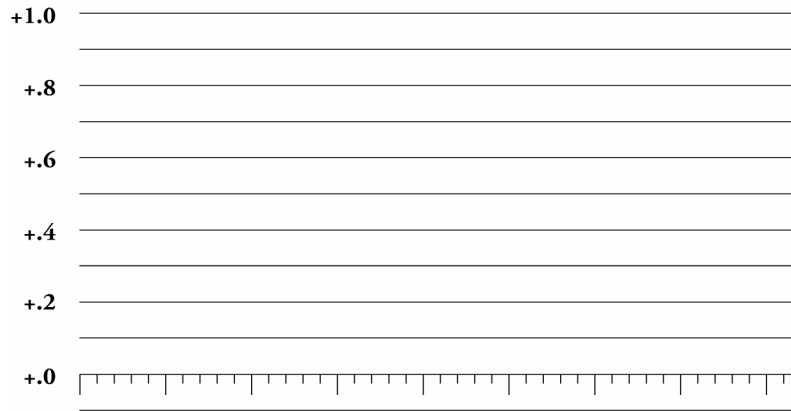


Figure 3-17. Eye Pattern Graticule at Zoom 0V

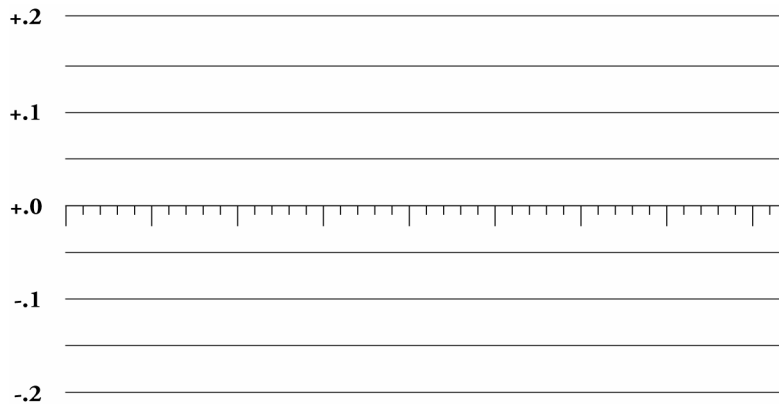


Figure 3-18. Eye Pattern Graticule at Zoom 800 mV



Eye Pattern Observation

The waveform displayed can show both amplitude variations and timing variations. The combination of these “closes” the decision window for determining whether a bit received is “1” or “0”. Common errors including overshoot, bandwidth limitations, and ringing are easily observed with the Eye Pattern display and provide indications of the general quality of the transmission channel and source.

Eye Pattern Rise Time

Rise times of the waveform can be calculated by measuring the 20% to 80% rise time points with the time cursors.

Jitter Meter and Eye Pattern Correlation

The jitter meter located just above the Eye pattern display is intended to display the maximum value of jitter over time. The correlation of values derived by using measurement cursors versus the jitter meter could differ unless the eye pattern is displayed using the maximum persistence setting. A normal persistence setting will make it more difficult to view pixels near the widest sample points, which forces the placement of the measurement cursors to a lower (narrower) jitter value. Jitter can only be selected when the Eye Pattern is enabled.

Horizontal Magnification and Zoom in Eye Pattern Mode

Gain is used to set the range of amplification in the video signal. The standard gain in the video signal is x1. The VTM Series can be used to set the gain amplification in the video signal using the Gain group of buttons. The gain setting appears in the upper-left portion of the waveform pane, as shown in **Figure 3-12**.



Press the MAG button to step through the available Horizontal Magnifications of x1, x5, and x10: 1 ns, 0.20 ns, and 0.10 ns for SD or 250 ps, 50 ps, and 25 ps for HD. The type of magnification along with the format displayed determines how many “Eyes” are displayed. **Table 3-12** describes the Horizontal Magnification Conditions.

Table 3-12. Horizontal Magnification Conditions

Horizontal Mag	Format Displayed	Number of Eyes Displayed
x1 (1 ns or 250 ps)	SD/HD	3 eyes displayed
	SD	10 eyes displayed
	HD	20 eyes displayed
x5 (0.20 ns or 50 ps)	SD/HD	3/5 eyes displayed
	SD	2 eyes displayed
	HD	4 eyes displayed
x10 (0.10 ns or 25 ps)	SD/HD	3/10 eyes displayed
	SD	1 eye displayed
	HD	2 eyes displayed



Press the ZOOM button to zoom around the reference graticule. At each zoom position, the graticule scale and eye pattern displays expand to provide more resolution around the zoom point.


Eye Pattern Cursor Selections



Cursors are available for precise measurement of waveform voltage and waveform time. Press the CURS button on the front panel to enable the

cursors for the selected pane. The Time Cursor indication is in the lower-right portion and the amplitude cursor indication is in the lower-left of the screen, as shown in **Figure 3-19**.

Figure 3-19. Establishing Cursor Select for Eye Pattern

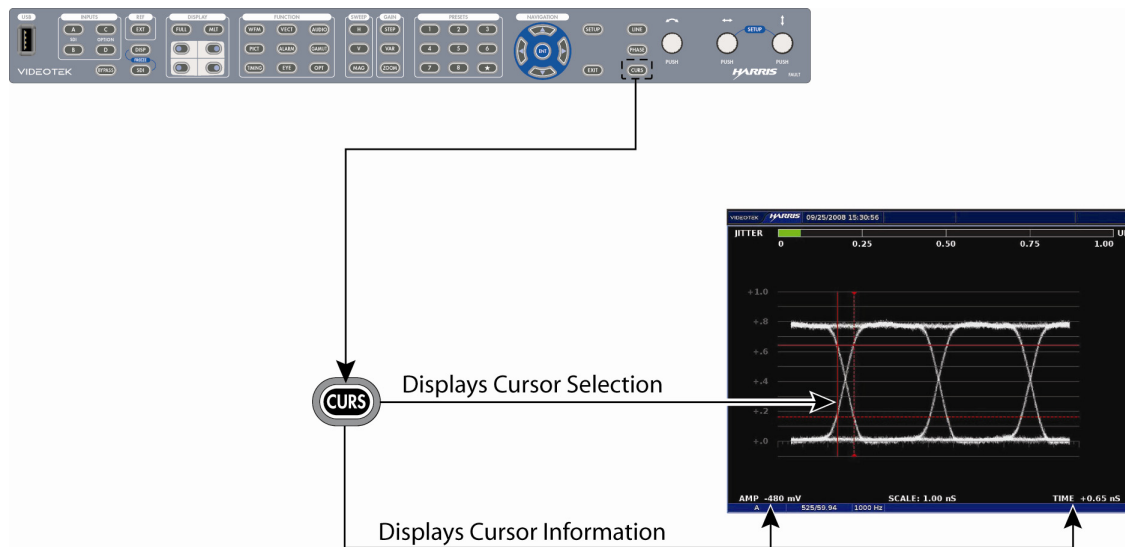

To enable the time and/or amplitude cursors, press and hold the CURS button. Use the NAVIGATION buttons or knobs to select Amplitude or Time. Once selected, press the ENT button to enable it. Once one or both cursors are selected, press the EXIT button to exit the CURS pane menu.

When the cursor is selected, the indication will appear at the bottom of the display along with the cursor line. The horizontal cursor line is the AMPLITUDE line. The vertical line is the TIME line.

If both TIME and AMP are displayed, pressing the CURS button will select which cursor to control. In all cases, the TIME or AMP numeric readout at the bottom of the display indicates the difference between the REF and DELTA lines. The active line (REF, DELTA, or both) is shown with small arrows at both ends of the line.

Once a cursor is selected for control:

1. Press the CURVED ARROW knob to select the REF or DELTA line to control. The REF line is the solid line, and the DELTA line is the dotted line.
2. Rotate the knob to move the REF or DELTA line to the desired location.
3. Press the knob for the next line. Rotate the knob to move the other line to the desired location.
4. Press the knob a third time to control both the REF and DELTA lines.
5. Repeat as necessary.

Once the cursors are no longer necessary, press and hold the CURS button to return to the Cursor menu and disable the cursor selection submenus. The check mark indicates the cursor is enabled, and no check marks indicate the cursor is disabled.

To exit the cursor function while leaving the cursors active, just select another mode in the pane (i.e., Line Select, Variable Gain, etc.).

Eye Pattern Pane Menu Selections

Pressing and holding the EYE function button or the DISPLAY PANE button in the active Eye Pattern pane selects the pane menu. Use the SETUP POSITION knobs or the NAVIGATION buttons to navigate the Pane menu.

The Eye Pattern Pane menu is described in **Table 3-13** for SD-SDI monitoring, and **Table 3-14** for HD-SDI monitoring. The difference between the two menus is the Trigger Mode selections of 10 EYE and 20 EYE.

Table 3-13. Eye SD-SDI Pane Menu Structure

Selection	Selection Option
JITTER HPF	10 Hz
	100 Hz
	1000 Hz
TRIGGER MODE	OVERLAY
	10 EYE
EYE PATTERN SETUP	Press ENT

Table 3-14. Eye HD-SDI Pane Menu Structure

Selection	Selection Option
JITTER HPF	10 Hz
	100 Hz
	1000 Hz
TRIGGER MODE	OVERLAY
	20 EYE
EYE PATTERN SETUP	Press ENT

Jitter High Pass Filter (HPF) Selection

Because jitter on the data can develop from many sources and have a unique frequency distribution, the bandwidth of the sampling clock recovery circuit will affect the displayed jitter if the frequency of the jitter is within the bandwidth of the clock recovery circuits. Above the loop bandwidth, the loop has no effect on the jitter. While within the bandwidth, the apparent jitter displayed will be satisfied by the loop response.

To access the jitter high pass filter selections, press the EYE button until Eye Pattern pane menu appears. Select between 10 Hz, 100 Hz, or 1 kHz in high tally. When 10 Hz, 100 Hz, or 1 kHz is selected, the –3 dB response points only allow jitter above the selected filter frequency. This is useful with estimating the effects of jitter on clock recovery circuits of similar bandwidths in receivers and inferring the sources of the observed jitter based on frequency components present.

Common filter selections are forced between the Jitter pane and the Eye Pattern pane based upon menu selection choices. Menu selections made in the Jitter pane at 1 kHz, 10 kHz or 100 kHz will result in an Eye Pattern display of only 1 kHz as the Eye Pattern is limited to the three selections of 10 Hz, 100 Hz and 1 kHz.

Trigger Mode

The TRIGGER MODE submenu is located in the EYE PATTERN SETUP menu. Within the TRIGGER MODE submenu, two modes of operation are available:

- OVERLAY
- 10/20 EYE (10 Eye and Overlay for SD/20 Eye and Overlay for HD)

Distortions in Overlay mode are all displayed in the visible eye locations of the Eye Pattern display, giving a more easily observed display of the total jitter. Overlay displays three eye openings.

Eye Pattern Setup

Press the ENT button to access the global Eye Pattern setup menu. For more information on the global Eye Pattern Setup menu see Section 4.

Utilizing the EYE and Jitter Displays (TVM-VTM-JEM, VTM9100PKG-EJ, and VTM9140PKG-EJ only)

The TVM-VTM-JEM is an Eye Pattern Option with an advanced Jitter and signal automeasure feature. When this option is purchased, the back panel of the VTM changes. The back panel is shown in **Figure 3-20**, and the function of each changed connector is described in **Table 3-15**.

Figure 3-20. VTM Series with TVM-VTM-JEM Option Back Panel Connectors

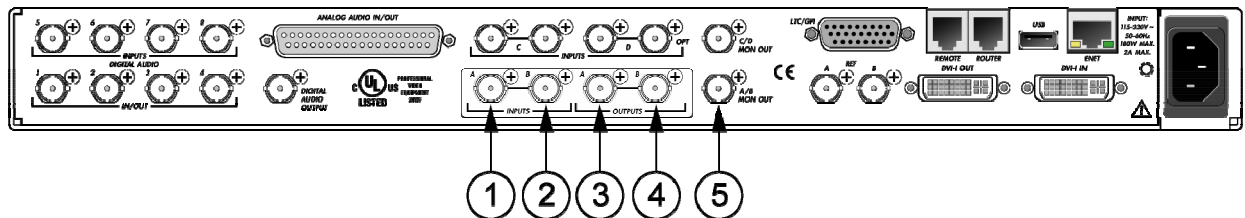


Table 3-15. Description of VTM Series with VTM-OPT JEM Option Back Panel Connectors

Key	Label	Description
1	A (IN)	Female BNC HD or SD SDI input connector
2	B (IN)	Female BNC HD or SD SDI input connector
3	A (OUT)	Female BNC looping HD or SD SDI output connector
4	B (OUT)	Female BNC looping HD or SD SDI output connector
5	A/B MON OUT	Female BNC connector for monitoring of the selected A or B input; if both digital A + B inputs are selected, then the output is input A (this output is a source monitor only and does not include the waveform, vector, audio, or alarm on-screen information)

NOTE: This option is only available for Inputs A and B only. Only one Eye Pattern and one Jitter screen can be displayed at a time.

- VTM-40 displays Eye waveform or jitter/spectrum waveform in one or two separate panes.
- VTM-10 displays Eye waveform or jitter/spectrum waveform one pane at a time.

The Eye Pattern display is created by sampling the serial digital signal with the recovered serial clock. The Eye Pattern display is used to measure signal amplitude, jitter, rise time, and other irregularities. Measured parameters are shown at the top of the EYE display, or they can be manually measured by setting the cursors on the transition limits of the display and reading the offset in picoseconds (ps) for HD or nanoseconds (ns) for SD. The amount of jitter can also be estimated from the bar display above the Eye Pattern display. Amplitude is similarly measured using cursors.

To access the Eye Pattern display, press the EYE function button on the front panel. The Eye Pattern display appears in the selected pane, as shown in **Figure 3-21** and described in **Table 3-16**.

- VTM-40
Select another pane (a pane that does not contain the Eye pattern display), and press the EYE button again. The Jitter is displayed in the selected pane, as shown in **Figure 3-22** and described in **Table 3-17**. The time bases are 1H, 2H, 1V, and 2V.
- VTM-10
Press the EYE button again to toggle between the Eye Pattern display and the Jitter Waveform display, as shown in **Figure 3-22** and described in **Table 3-17**. The time bases are 1H, 2H, 1V, and 2V.

Pressing and releasing the EYE button continuously without changing the pane will toggle between the Eye pattern and Jitter Waveform display.

In the Jitter display, press and hold the EYE button to select the JITTER WAVEFORM MODE menu. Selectable modes are Waveform Sweep (jitter vs. time) **Figure 3-22** or Frequency Sweep (jitter vs. frequency) **Figure 3-23** and described in **Table 3-18**. These displays show the relative amplitude of the jitter verses time or verses the frequency at which it occurs. The Jitter Frequency display is useful to determine the frequency of major jitter components.

Simply pressing the EYE button in the Jitter display changes the display to eye pattern. Any other pane that contained the Eye pattern display will change to a blank screen containing the instruction "SELECT NEW FUNCTION."

Figure 3-21. Eye Pattern Display Diagram

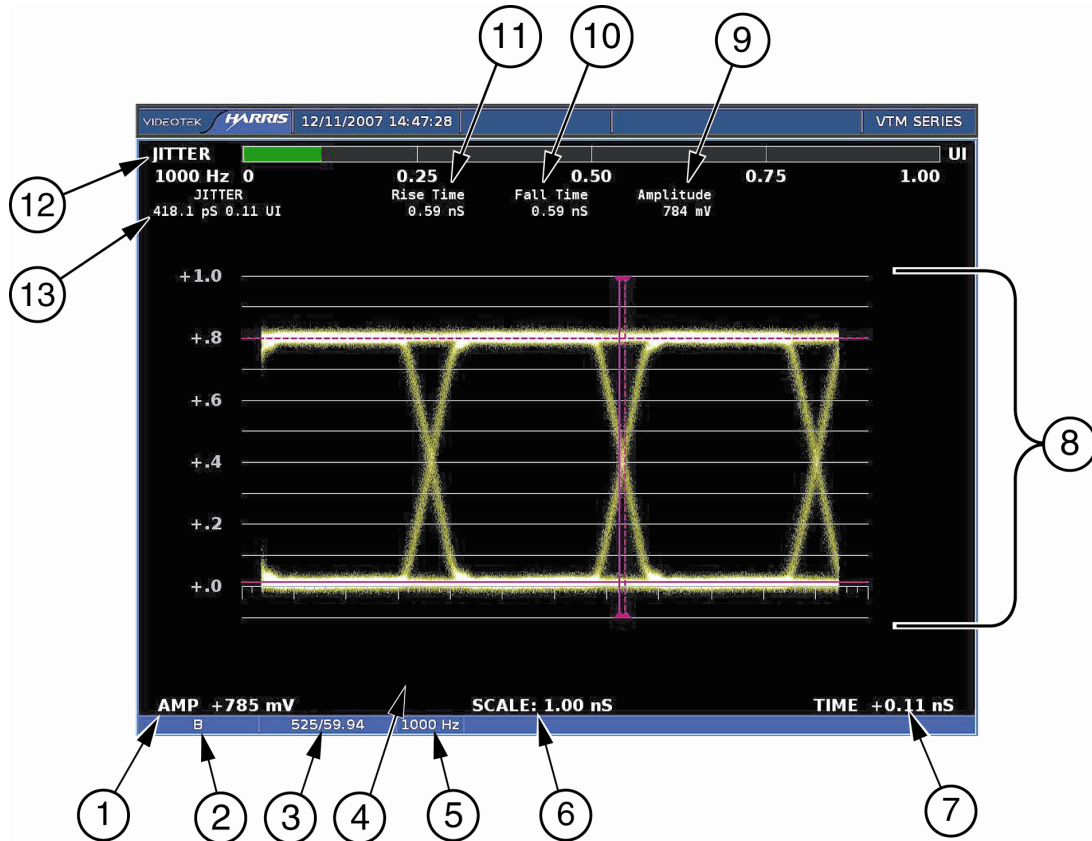


Table 3-16. Description of Eye Pattern Display Diagram

Field Identifier	Field Information	Nomenclature
1	Amplitude cursor readout	Displays the amplitude cursor as AMP and the number in mV
2	Input	Displays user-configurable source IDs for input and routers
3	Standard	Line rate/Frame rate
4	Zoom	- Displays the Zoom when enabled - Blank when Zoom is disabled - Press the ZOOM button cycle through Zoom modes
5	High pass filter	Displays the selected eye filter
6	Scale	Displayed in ps for HD or ns for SD
7	Time cursor readout	Displays the time cursor as Time and the number in ps
8	EYE graticule	Displays the Eye Pattern graticule
9	Amplitude value	Displays a numeric value for Eye Amplitude
10	Fall time	Displays a numeric value for fall time
11	Rise time	Displays a numeric value for rise time
12	Jitter display bar	Displays the Jitter display. Jitter display changes according to the EYE PATTERN > JITTER DISPLAY TYPE menu in the Global Setup menu
13	Jitter value	Display a numeric value for the jitter on the signal

Figure 3-22. Jitter Waveform Display Diagram

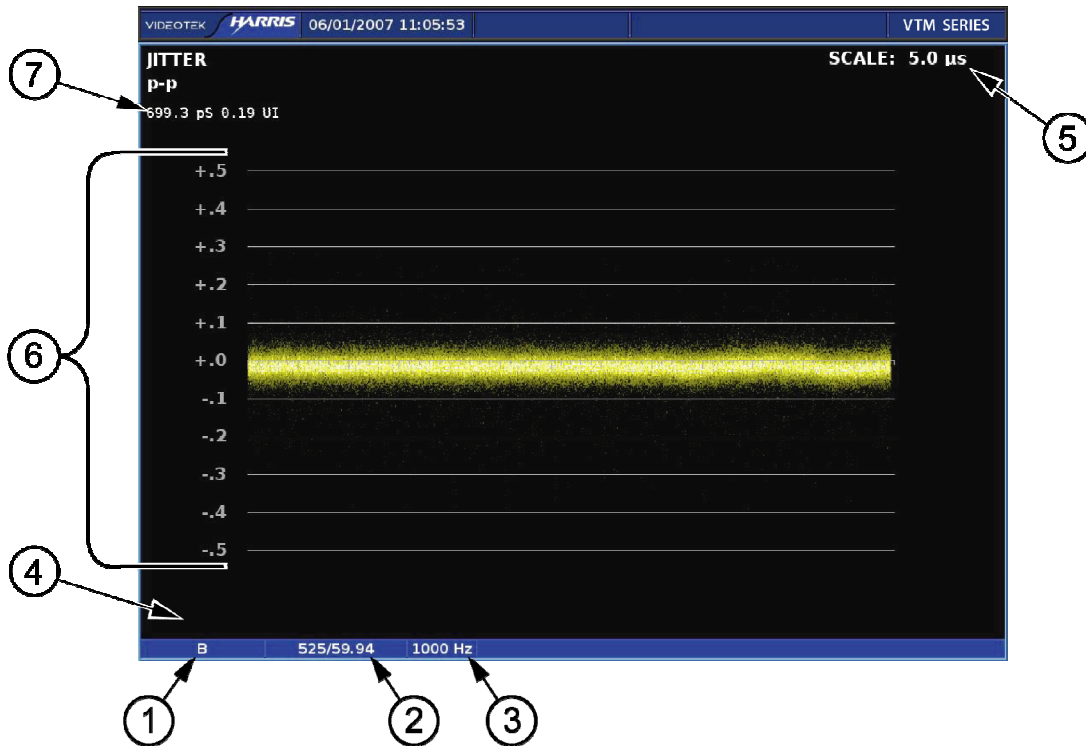


Table 3-17. Description of Jitter Waveform Display Diagram

Field Identifier	Field Information	Nomenclature
1	Input	Displays user-configurable source IDs for input and routers
2	Standard	Line rate/Frame rate
3	High pass filter	Displays the selected eye filter
4	Amplitude cursor readout	Displays the amplitude cursor as AMP and the number in mV
5	Horizontal jitter scale	Displayed in μs
6	Jitter graticule	Displays the jitter graticule shown in UI
7	Jitter p-p value	Displays a numeric value for the jitter on the signal

Figure 3-23. Frequency Waveform Display Diagram

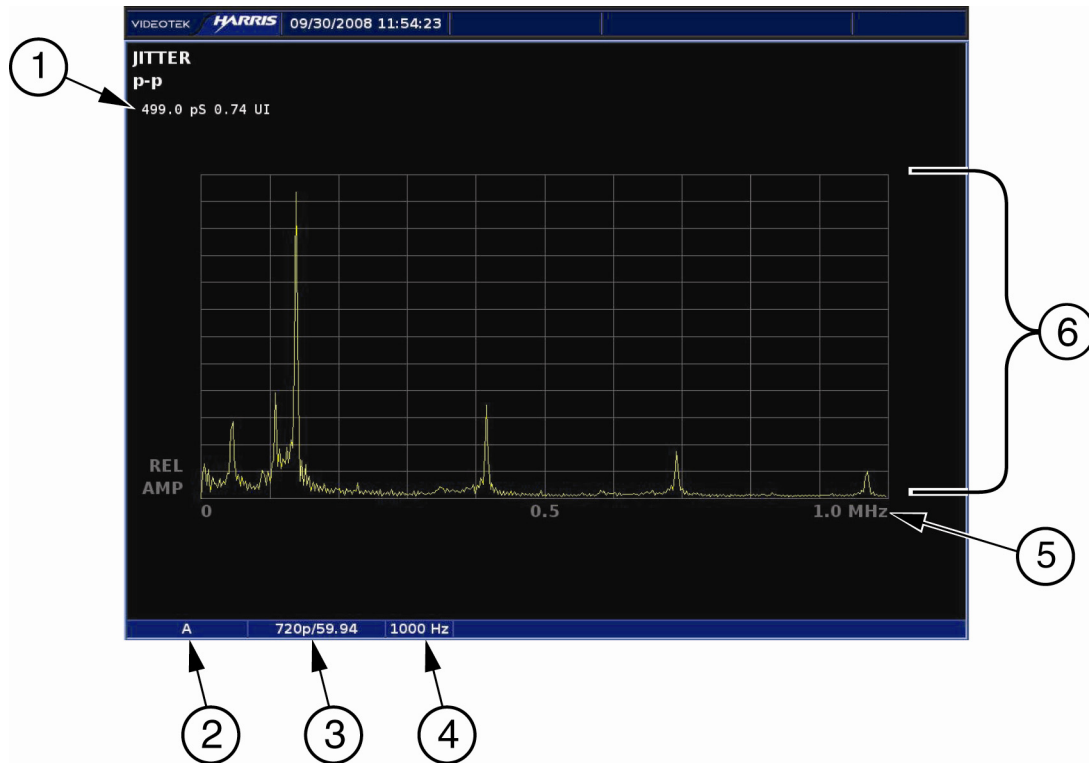


Table 3-18. Description of Frequency Waveform Display Diagram

Field Identifier	Field Information	Nomenclature
1	Jitter p-p value	Display a numeric value for the jitter on the signal
2	Input	Displays user-configurable source IDs for input and routers
3	Standard	Line rate/Frame rate
4	High pass filter	Displays selected jitter filter
5	Horizontal frequency scale	Displays Jitter graticule shown relative to frequency
6	Jitter graticule	Displays Frequency Sweep graticule shown in p-p

Figure 3-24 to Figure 3-26 display the Eye pattern graticules.

Figure 3-24. Eye Pattern Graticule

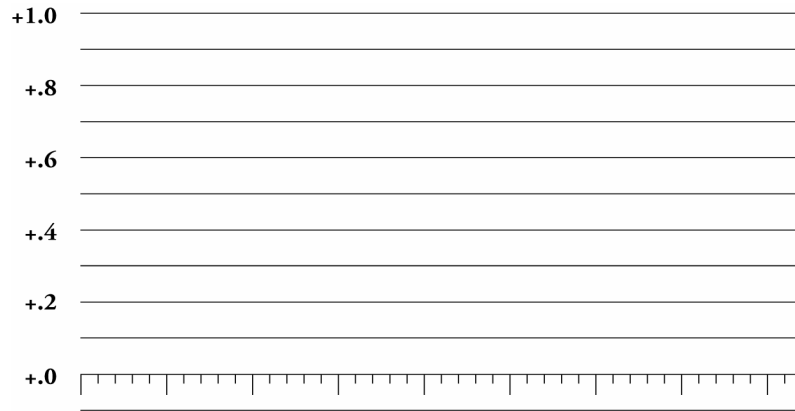


Figure 3-25. Eye Pattern Graticule at Zoom 0V

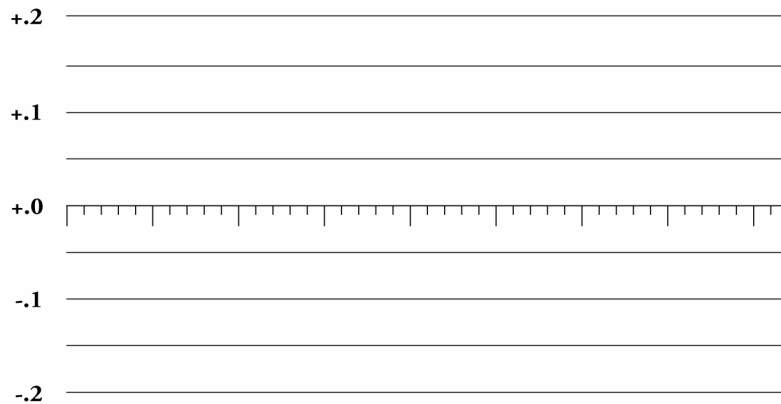


Figure 3-26. Eye Pattern Graticule at Zoom 800 mV



Eye Pattern Observation

The waveform displayed can show both amplitude variations and timing variations. The combination of these “closes” the decision window for determining whether a bit received is “1” or “0.” Common errors including overshoot, bandwidth limitations, and ringing are easily observed with the Eye Pattern display and provide indications of the general quality of the transmission channel and source.

Eye Pattern Parameters

The display will show rise time, fall time, and amplitude. Rise and fall times are displayed in ps for HD and ns for SD. Amplitude is displayed in mV.

Jitter Meter and Eye Pattern Correlation

The jitter meter is intended to display the maximum value of jitter over time. The correlation of values derived by using measurement cursors versus the jitter meter could differ unless the eye pattern is displayed using the maximum persistence setting. A normal persistence setting will make it more difficult to view pixels near the widest sample points, which forces the placement of the measurement cursors to a lower (narrower) jitter value.

Horizontal Magnification and Zoom in Eye Pattern Mode

Gain is used to set the range of amplification in the video signal. The standard gain in the video signal is x1. The VTM Series can be used to set the gain amplification in the video signal using the Gain group of buttons. The gain setting appears in the upper-left portion of the waveform pane.



Press the MAG button to step through the available Horizontal Magnifications of x1, x5, and x10: 1 ns, 0.20 ns, and 0.10 ns for SD or 250 ps, 50 ps, and 25 ps for HD. The type of magnification along with the format displayed determines how many “Eyes” are displayed. **Table 3-19** describes the Horizontal Magnification Conditions.

Table 3-19. Horizontal Magnification Conditions

Horizontal Mag	Format Displayed	Number of Eyes Displayed
x1 (1 ns or 250 ps)	SD/HD	3 eyes displayed
	SD	10 eyes displayed
	HD	20 eyes displayed
x5 (0.20 ns or 50 ps)	SD/HD	3/5 eyes displayed
	SD	2 eyes displayed
	HD	4 eyes displayed
x10 (0.10 ns or 25 ps)	SD/HD	3/10 eyes displayed
	SD	1 eye displayed
	HD	2 eyes displayed



Press the ZOOM button to zoom around the reference graticule. At each zoom position, the graticule scale and eye pattern displays expand to provide more resolution around the zoom point.

For the Jitter Waveform display, press the ZOOM button to toggle the Jitter gain from OFF (2 UI p-p) to ON (1 UI p-p).


For the Jitter Frequency display, press the ZOOM button to toggle the Frequency Sweep between 0 – 5 MHz or 0 – 1 MHz.

Eye Pattern Cursor Selections



Cursors are available for precise measurement of waveform voltage and waveform time. Press the CURS button on the front panel to enable the cursors for the selected pane. The Time Cursor indication is in the lower-right portion, and the amplitude cursor indication is in the lower-left of the screen as shown in **Figure 3-27**.

Figure 3-27. Establishing Cursor Select for Eye Pattern

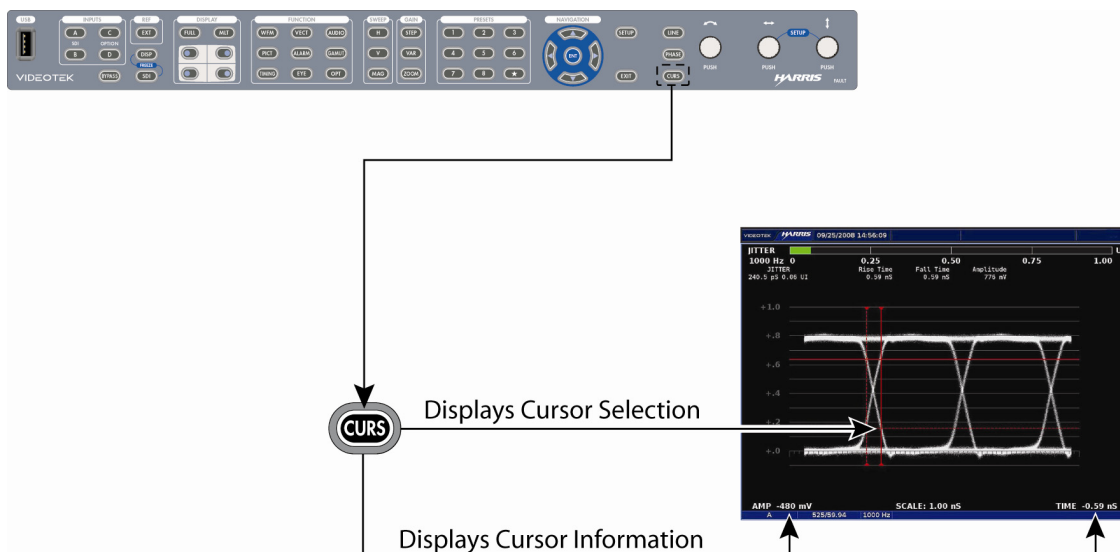

To enable the time and/or amplitude cursors, press and hold the CURS button. Use the NAVIGATION buttons or knobs to select Amplitude or Time. Once selected, press the ENT button to enable it. Once one or both cursors are selected, press the EXIT button to exit the CURS pane menu.

When the cursor is selected, the indication will appear at the bottom of the display along with the cursor line. The horizontal cursor line is the AMPLITUDE line. The vertical line is the TIME line.

If both TIME and AMP are displayed, pressing the CURS button will select which cursor to control. In all cases, the TIME or AMP numeric readout at the bottom of the display indicates the difference between the REF and DELTA lines. The active line (REF, DELTA, or both) is shown with small arrows at both ends of the line.

Once a cursor is selected for control:

1. Press the CURVED ARROW knob to select the REF or DELTA line to control. The REF line is the solid line, and the DELTA line is the dotted line.
2. Rotate the knob to move the REF or DELTA line to the desired location.
3. Press the knob for the next line. Rotate the knob to move the other line to the desired location.
4. Press the knob a third time to control both the REF and DELTA lines.
5. Repeat as necessary.

Once the cursors are no longer necessary, press and hold the CURS button to return to the Cursor menu and disable the cursor selection submenus. The check mark indicates the cursor is enabled, and no check marks indicate the cursor is disabled.

To exit the cursor function while leaving the cursors active, just select another mode in the pane (i.e., Line Select, Variable Gain, etc.).

Eye Pattern and Jitter Pane Menu Selections

Pressing and holding the EYE function button or the DISPLAY PANE button in the active Eye Pattern pane or Jitter Waveform pane selects the pane menu. Use the SETUP POSITION knobs or the NAVIGATION buttons to navigate the Pane menu.

The Eye Pattern Pane menu is described in **Table 3-20** for SD-SDI monitoring, and **Table 3-21** for HD-SDI monitoring. The Jitter Waveform pane menu is described in **Table 3-22**. The difference between the two eye menus is the Trigger Mode selections of 10 EYE and 20 EYE.

Table 3-20. Eye SD-SDI Pane Menu Structure

Selection	Selection Option
JITTER HPF	10 Hz
	100 Hz
	1000 Hz
TRIGGER MODE	OVERLAY
	10 EYE
EYE PATTERN SETUP	Press ENT

Table 3-21. Eye HD-SDI Pane Menu Structure

Selection	Selection Option
JITTER HPF	10 Hz
	100 Hz
	1000 Hz
TRIGGER MODE	OVERLAY
	20 EYE
EYE PATTERN SETUP	Press ENT

Table 3-22. Jitter Waveform Pane Menu Structure

Selection	Selection Option
JITTER HPF	10 Hz
	100 Hz
	1000 Hz
	10 kHz
	100 kHz
JITTER WAVEFORM MODE	Waveform Sweep
	Frequency Sweep
EYE PATTERN SETUP	Press ENT

Jitter High Pass Filter (HPF) Selection

Because jitter on the data can develop from many sources and have a unique frequency distribution, the bandwidth of the sampling clock recovery circuit will affect the displayed jitter if the frequency of the jitter is within the bandwidth of the clock recovery circuits. Above the loop bandwidth, the loop has no effect on the jitter. While within the bandwidth, the apparent jitter displayed will be satisfied by the loop response.

To access the jitter high pass filter selections, press and hold the EYE button until the Eye Pattern pane menu appears. Select between 10 Hz, 100 Hz, or 1000 Hz is high tally. When 10 Hz, 100 Hz, or 1000 Hz is selected, the -3 dB response points only allow jitter above the selected filter frequency. This is useful with estimating the effects of jitter on clock recovery circuits of similar bandwidths in receivers and inferring the sources of the observed jitter based on frequency components present. Changing this selection in the Eye Pane will change the Jitter selection in the Jitter pane (just as changing the selection in the Jitter pane will change the selection in the Eye Pane) unless 10 kHz or 100 kHz is selected in the Jitter pane.

Common filter selections are forced between the Jitter pane and the Eye Pattern pane based upon menu selection choices. Menu selections made in the Jitter pane at 1 kHz, 10 kHz or 100 kHz will result in an Eye Pattern display of only 1 kHz as the Eye Pattern is limited to the three selections of 10 Hz, 100 Hz and 1 kHz.

Trigger Mode

The TRIGGER MODE submenu is located in the EYE PATTERN SETUP menu. Within the TRIGGER MODE submenu, two modes of operation are available:

- OVERLAY (3 Eye SD/HD)
- 10/20 EYE (10 Eye for SD/20 Eye for HD)

Distortions in Overlay mode are all displayed in the visible eye locations of the Eye Pattern display, giving a more easily observed display of the total jitter. Overlay displays three eye openings.

Jitter Waveform Mode

When the Jitter Waveform pane is first displayed in the selected pane, the Jitter is shown as the plot of the eye jitter vs. time. The Jitter Waveform Mode is used to change the display from the plot of the eye jitter vs. time to the plot of the jitter vs. frequency.

Eye Pattern Setup

Press the ENT button to access the global Eye Pattern setup menu. For more information on the global Eye Pattern Setup menu see Section 4.

Utilizing the Vector Display

Pressing the VECT button accesses the Vector display for the selected pane. A vector display is shown in **Figure 3-28** and described in **Table 3-23**. This illustrates the general location for the various vector fields.

Figure 3-28. Vector Display Diagram

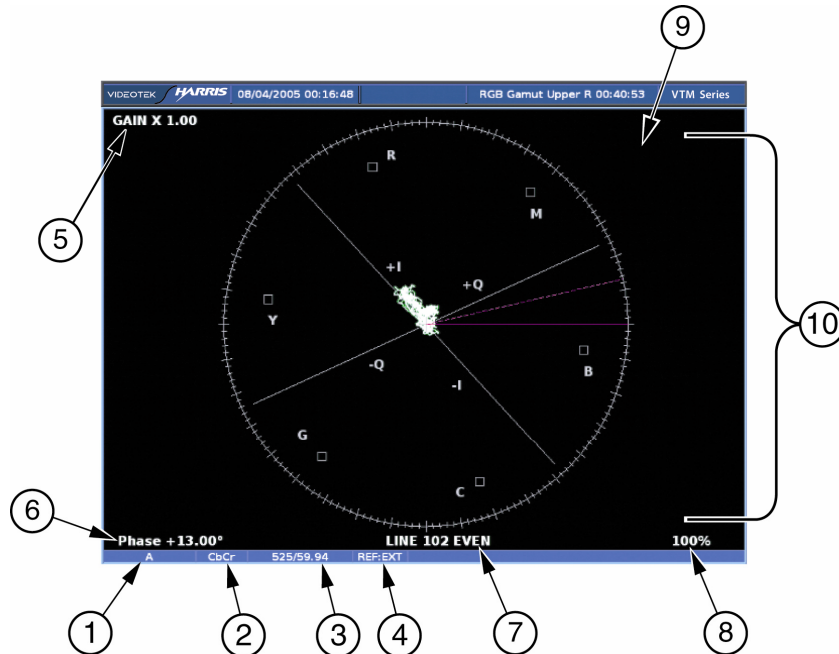


Table 3-23. Description of Vector Display Diagram

Field Identifier	Field Information	Nomenclature
1	Input	Displays user-configurable source IDs for input and routers
2	Format	Displayed as Composite and C _B C _R ; this can be selected in the HD FORMAT or SD FORMAT submenu of the VECTOR Pane menu
3	Standard	Displays the Line Rate/Frame Rate [1080i/59.94]; this is selected in the VIDEO FORMAT > VIDEO A THRU D CONFIGURE menu

Table 3-23. Description of Vector Display Diagram

Field Identifier	Field Information	Nomenclature
4	Reference	Displays the reference as INT, EXT; this is toggled by pressing the EXT button
5	Gain	Displays the gain where Gain is 1.00, 2.50, 5.00, or 15.00. This is changed by pressing the STEP or VAR button.
6	Phase cursor readout	Displays the Phase cursor as PHASE and the number in degrees
7	Line select information	Line select is shown as Line and the number with the ODD or EVEN field (odd or even field will only show for certain video formats)
8	Vector standard	Displayed as 75%, 100%, or 75% + 100% (HD only); this is selected in the Vector Pane setup submenu called Analog standard, SD standard, or HD standard
9	Zoom	- Zoom (when enabled) - Blank when disabled - Press the ZOOM button to cycle through Zoom modes
10	Vector graticule	Shows the Vector graticule

Graticules are configured by selecting the Video Input Format along with the appropriate Vector Setup standard.

Some graticule scales are illustrated in **Figure 3-29** to **Figure 3-36**.

Figure 3-29. Vector NTSC Graticule

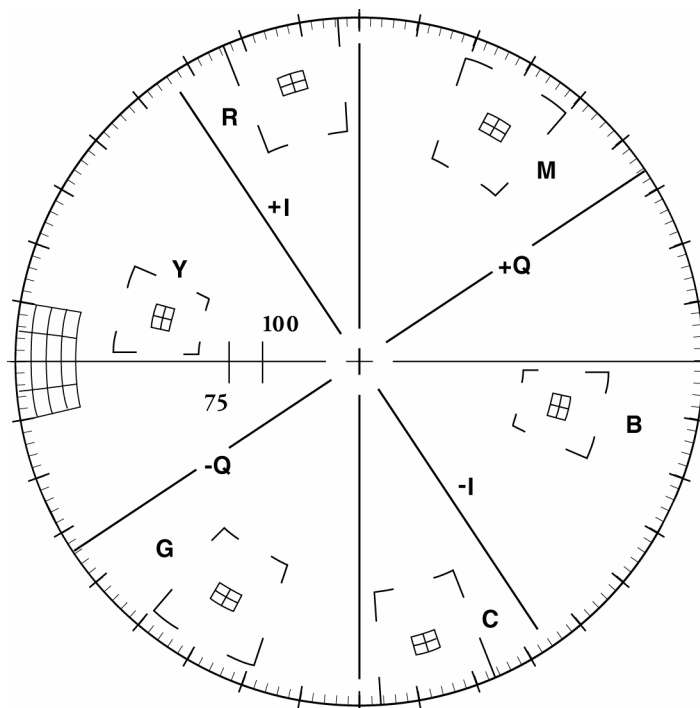


Figure 3-30. Vector NTSC Zoom Upper Left

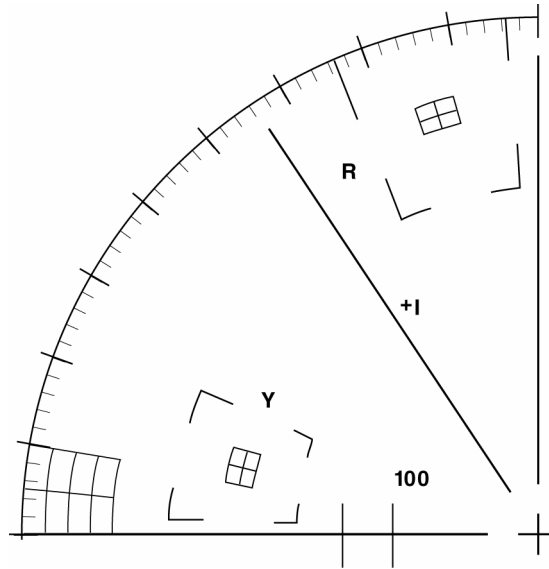


Figure 3-31. Vector NTSC Zoom Upper Right

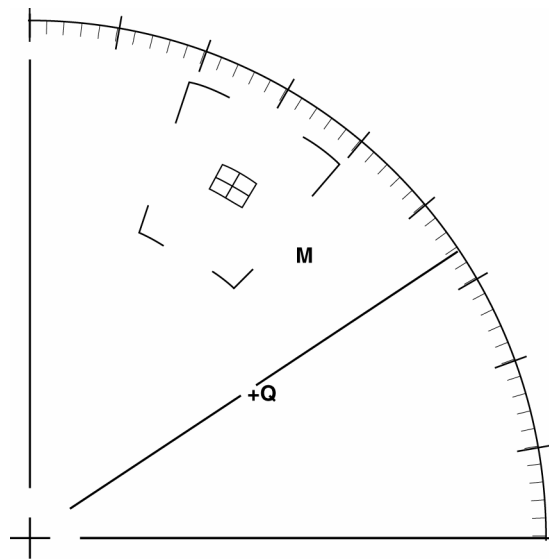


Figure 3-32. Vector NTSC Zoom Lower Right

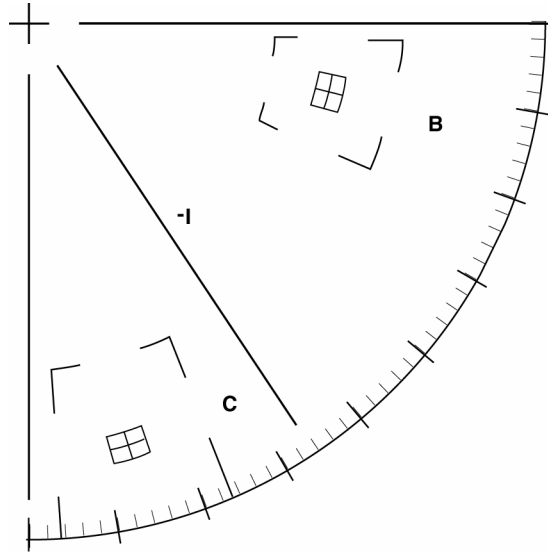


Figure 3-33. Vector NTSC Zoom Lower Left

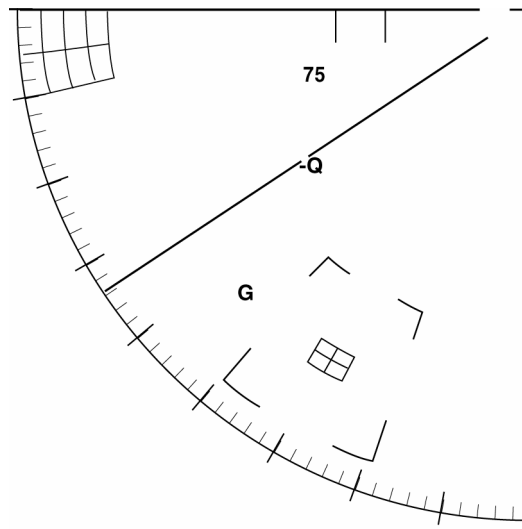


Figure 3-34. Vector PAL Zoom Center

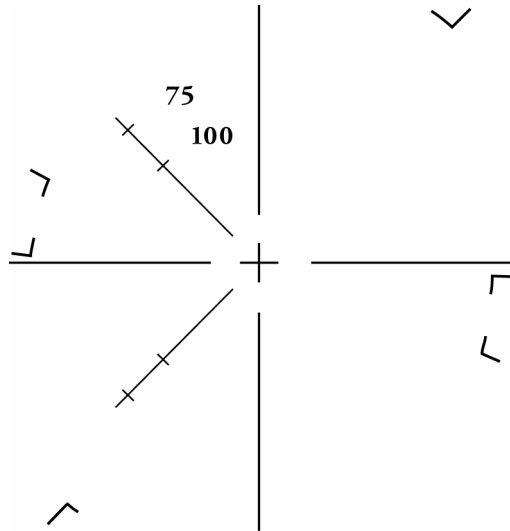


Figure 3-35. Vector SD with I/Q


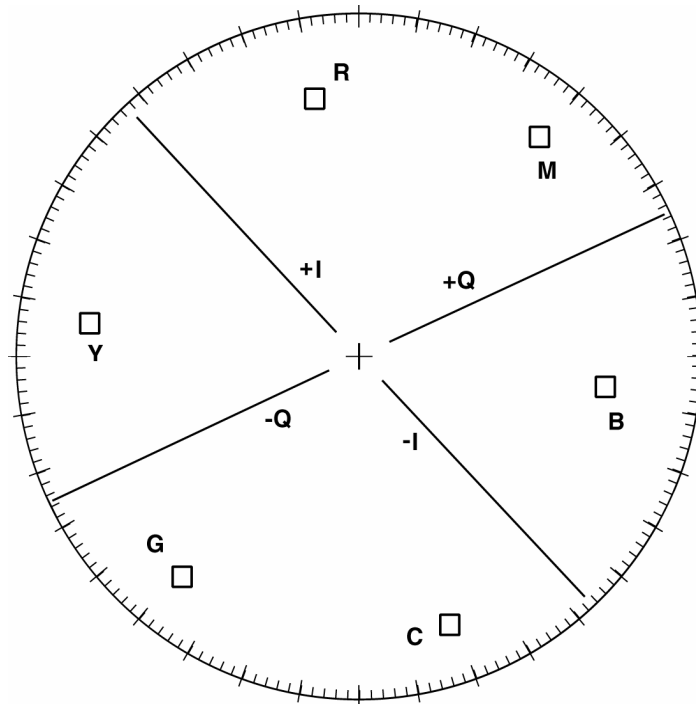


Figure 3-36. Vector HD 75% + 100% Graticule



Controlling the Vector

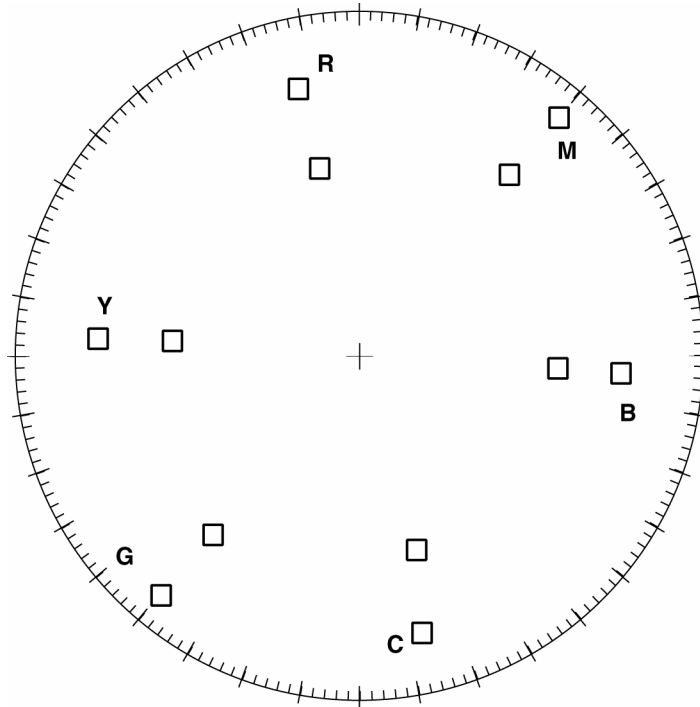

(For Composite analog video input only) A vector display has two individual properties: phase and magnitude. To control the phase of the vector, press the PHASE button and turn the CURVED ARROW knob.




The magnitude is controlled by the Variable Gain. Press the VAR button and then use the CURVED ARROW knob. Variable gain can be used in all formats.

Gain Buttons

The standard gain in the vector is x1.0. The VTM Series can be used to set the gain amplification in the video signal using the Gain group of buttons. The gain setting appears in the upper-left portion of the vector pane, as shown in **Figure 3-37**.

Figure 3-37. Establishing the Vector Gain

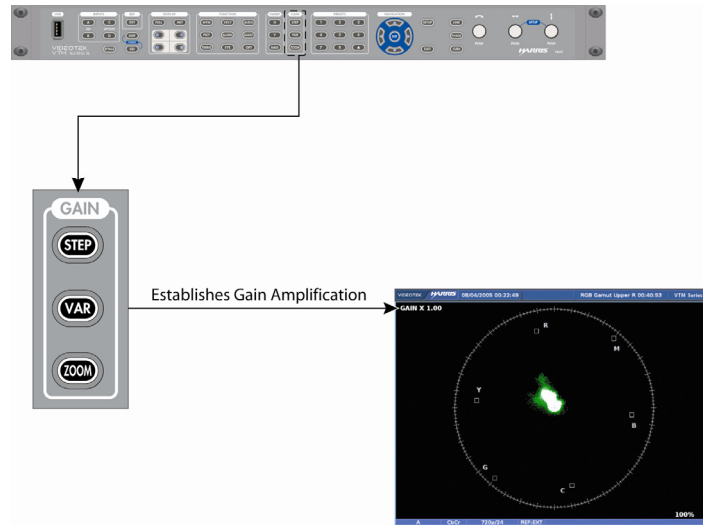

Press the STEP button to step through the available gain selections x1.0, x2.5, x5.0, x15.0.



Press VAR to access Vector Variable Gain. Once the Waveform Variable Gain is displayed on the screen, the Vector Variable Gain can be adjusted using the CURVED ARROW KNOB. The gain is adjusted in increments of 0.01. The Variable Gain range is x0.50 to x50.00.



Press ZOOM to cycle through one of six displays:

- Expand the center
- Expand the upper-left quadrant
- Expand the upper-right quadrant
- Expand the lower-right quadrant
- Expand the lower-left quadrant
- Normal

Vector Zoom is helpful when an increased resolution of phase or saturation is required. Press and hold ZOOM to enable the zoom pop-up menu. This is used to modify the functionality of the ZOOM button. Once selected, press ZOOM to toggle between the selected zoom screen and the normal screen. If normal is selected in the Zoom menu, then pressing ZOOM will step through each zoom display.

Placing the Vector Display in Line Select Mode


NOTE: When inputs A and B are selected simultaneously, the Line Select function is not available.



Pressing the LINE button enables the selected pane to monitor a single line of a video signal. This enables Line Select to monitor individual areas of the entire image. To view a line in Line Select mode:

1. Press the LINE button to place the selected vector display pane in Line Select mode. At the bottom-center of the display, the pane displays the Line number and Odd or Even field, as shown in **Figure 3-38**.

Figure 3-38. Establishing Line Select

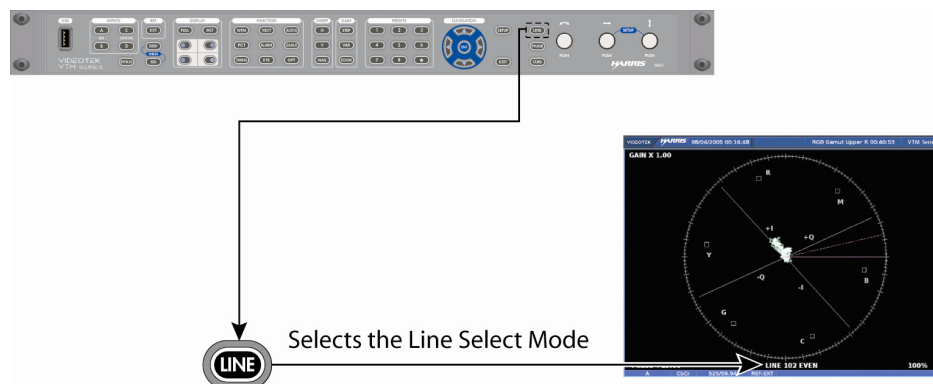

NOTE: In a Progressive (p) format odd and even selection is not available.

2. Press the CURVED ARROW knob to alternate between the ODD and EVEN fields.
3. Rotate the CURVED ARROW knob to select the line to be displayed.


When the inputs are linked, Line Select is a global setting. When the inputs are not linked, Line Select is pane specific. When a picture is displayed in one of the panes, a marker on the edge of the picture approximates the displayed line position (+/- 1 line).

Vector Cursor Selections



Cursors are available for precise measurement of vector phase (in degrees). Press the CURS button on the front panel to enable the cursors for the selected pane. The Phase Cursor indications are in the lower-left portion of the screen as shown in **Figure 3-39**.

Figure 3-39. Establishing Cursor Select

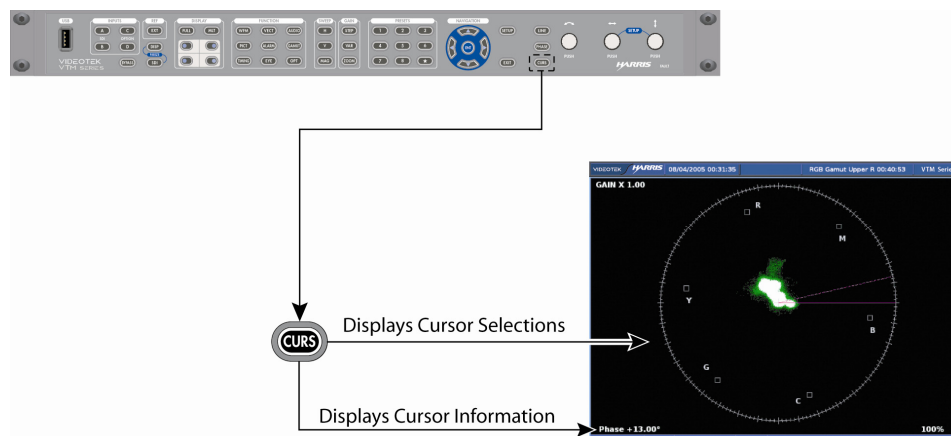

To enable the Phase cursors, press and hold the CURS button. Once the PHASE pop-up menu appears on the screen, press the ENT button to enable it. Once the cursor is selected, press the EXIT button to exit the CURS pane menu.

When the cursor is selected, the Phase indication appears. Beside the Phase indication is a numeric readout that indicates the difference between the REF and DELTA lines. The active line (REF, DELTA, or both) is shown with small arrows at the outer end of the line.

Once a line is selected for control:

1. Press the CURVED ARROW knob to select the REF or DELTA line to control. The REF line is the solid line, and the DELTA line is the dotted line.
2. Rotate the knob to move the REF or DELTA line to the desired location.
3. Press the knob for the next line. Rotate the knob to move the other line to the desired location.
4. Press the knob a third time to control both the REF and DELTA lines.
5. Repeat as necessary.

Once the cursors are no longer necessary, press and hold the CURS button to return to the Cursor menu and disable the Phase cursor selection. The check mark indicates the cursor is enabled, and no check mark indicates the cursor is disabled.

To exit the cursor function while leaving the cursor active, just select another mode in the pane (i.e. Line Select, Variable Gain, etc.)

Vector Pane Menu Selections

Pressing and holding the VECT function button or the DISPLAY PANE button in the active vector pane selects the pane menu. Use the SETUP POSITION knobs or the NAVIGATION buttons to navigate the Pane menu.

The Vector Pane menu is described in **Table 3-24** for analog, **Table 3-25** for SD-SDI monitoring, and **Table 3-26** for HD-SDI monitoring. The tables below indicate what will function with the selected formats.

Table 3-24. Vector Analog Pane Menu Structure

Selection	Selection Option
ANALOG STANDARD	75%
	100%
POSITION	Use H POS and V POS knobs; press KNOB for center
SETUP	Press ENT

Table 3-25. Vector SD-SDI Pane Menu Structure

Selection	Selection Option
SD STANDARD	75%
	100%
SCALE SD TO COMPOSITE	OFF
	ON
POSITION	Use H POS and V POS KNOBS; press knob for center
SETUP	Press ENT

Table 3-26. Vector HD-SDI Pane Menu Structure

Selection	Selection Option
HD STANDARD	75%
	100%
	75% + 100%
SCALE HD TO COMPOSITE	OFF
	ON
POSITION	Use H POS and V POS knobs; press KNOB for center
VECTOR SETUP	Press ENT

Standard

NOTE: This selection also is reflected in the Gamut display for the selected pane.

Standard is used to set the marks on the vector display. The marks on the vector help to visualize the minimum/maximum value of a video signal. The position of the excursion marks are 75% or 100% for analog, SD, and HD. Also, the HD standard can be selected as 75% and 100% simultaneously.

Scaled to Composite (SD and HD only)

Also, with an HD or SD signal, the Scaled to Composite menu can be used to scale the SD or HD vector to reflect a composite format.

Vector Position (Centering the Vector)

Centering the vector should be a one-time calibration and can be done in composite format. Centering of the vector can be accomplished by adjusting the Vector V position and Vector H position in the VECTOR PANE menu.

Vector Setup

Press the ENT button to access the global Vector setup menu. For more information on the global Vector Setup menu see Section 4.

Gamut Display

A constant setback in video production is the difference between the allowable ranges of dissimilar component and composite color spaces. Combinations of values that are within the range of a color difference component video system produce signal amplitudes outside the ranges when the signal is transcoded to composite or RGB color space.

Pressing the GAMUT button accesses the gamut display for the selected pane. The Gamut displays show RGB limits or composite video limits. Both Gamut displays illustrate what colors are causing illegal excursions and whether these digressions are above or below the allowable limits. The inputs are shown as an encoded display with gamut alarms. A Digital Input must be selected in order to view the Gamut display.

The displays show RGB and composite video limits.

Vector excursion marks are displayed in the gamut displays. The excursion marks help to visualize the minimum/maximum value of a 100% color bar signal. The position of the excursion marks depend on the selected Video Format selection from the VIDEO FORMAT > VIDEO A thru D CONFIGURE menu.

A gamut display diagram is shown in **Figure 3-40** and described in **Table 3-27**. The diagram illustrates the general location for the various gamut fields.

Figure 3-40. Gamut Display Diagram

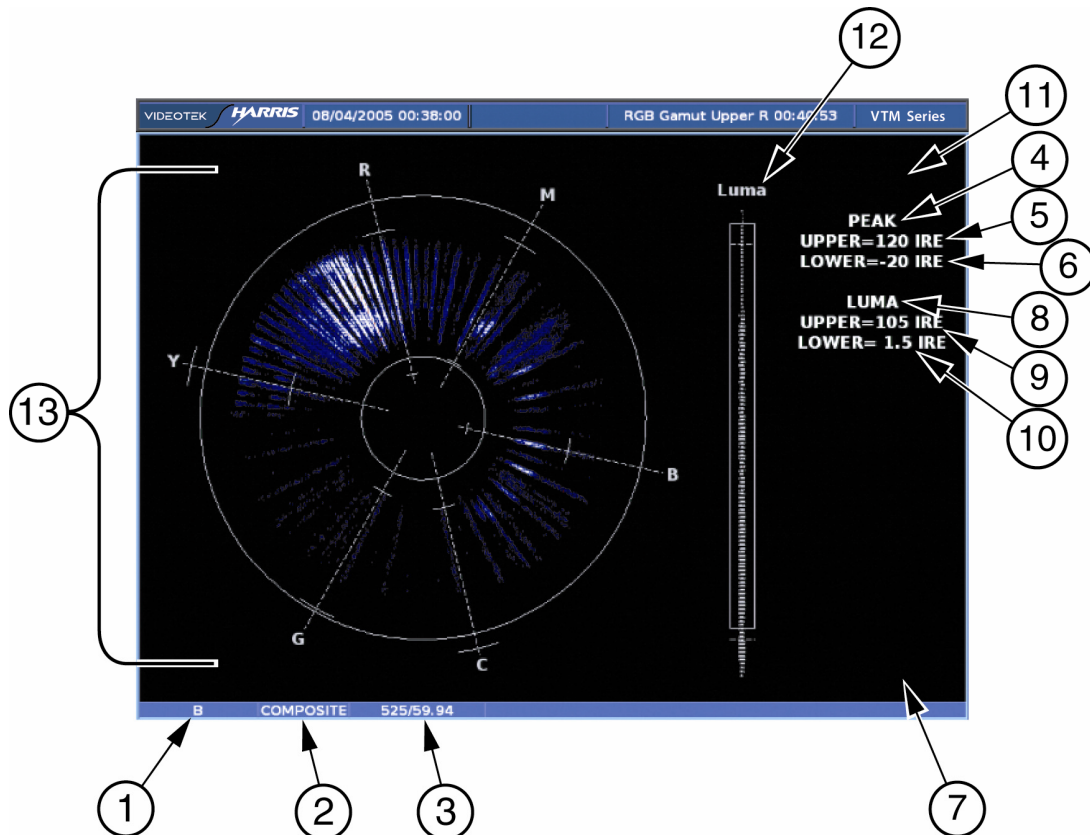


Table 3-27. Description of Gamut Display Diagram

Field Identifier	Field Information	Nomenclature
1	Input	Displays user-configurable source IDs for input and routers
2	Format	Displayed as Composite and RGB; this can be selected in the HD FORMAT or SD FORMAT submenu of the GAMUT Pane menu
3	Standard	Displays the Line Rate/Frame Rate [1080i/59.94]; this is selected in the VIDEO FORMAT > VIDEO A thru D CONFIGURE menu
4	Chroma alarm limits	Displayed as RGB (for RGB) and PEAK (for Composite)
5	Upper chroma alarm limit	Displayed as Upper = xxx yy - For RGB xxx is the RGB Gamut upper threshold setting, and yy is shown as mV - For Composite, xxx is the Peak upper threshold setting. In Composite, yy is determined by the format (IRE for NTSC and Units or mV for PAL).
6	Lower chroma alarm limit	Displayed as Lower = xxx yy - For RGB xxx is the RGB Gamut lower threshold setting, and yy is shown as units - For Composite, xxx is the Peak lower threshold setting; in Composite, yy is determined by the format (IRE for NTSC and Units for PAL)
7	Line select information	Line select is shown as Line and the number with the ODD or EVEN field (when applicable)
8	Luma alarm limit	Displays Luma when Composite is selected; this field is blank when RGB is selected
9	Upper luma alarm limit (Composite only)	Displayed as Upper = xxx yy; xxx is the Luma upper threshold setting, and yy is determined by the format (IRE for NTSC and Units or mV for PAL)
10	Lower luma alarm limit (Composite only)	Displayed as Lower = xxx yy; xxx is the Luma lower threshold setting, and yy is determined by the format (IRE for NTSC and Units or mV for PAL)
11	Zoom	- Zoom (when enabled) - Blank when disabled - Press the ZOOM button to cycle through Zoom modes
12	Luma/Mono bar graticule	Shows the Luma/Mono bar graticule
13	Gamut graticule	Composite or RGB Gamut graticule

Composite Gamut

The graticule for the composite gamut vector, as shown in **Figure 3-41** and described in **Table 3-28**, is two concentric circles with other identifiers. When setting the upper and lower limits, the upper and lower gamut rings represent the values set from the threshold values of the appropriate format. Set the 525 or 625 (check format) threshold in the VIDEO ALARMS DIGITAL > DIGITAL GAMUT > PEAK GAMUT (UPPER/LOWER) menu to move the gamut rings or LUMA GAMUT (UPPER/LOWER) > THRESHOLD 525/625 menu to move the luma bar limits. The outer circle (the UPPER gamut alarm limit) represents the highest allowable amplitude

in standard composite units (i.e. IRE for NTSC and units for PAL). The inner circle (the LOWER gamut alarm limit) represents the lowest allowable amplitude. The rings turn red when the alarm is enabled and the values exceed the threshold setting.

The other identifiers are radials that extend at the angle of the designated color. These six lines follow the same displacement as the vector display. Note that since the PAL display is derived solely from component information, there are not two phases for PAL signals. The +V phase is used (making the vectors look similar to NTSC).

NOTE: There is an alarm persistence of two seconds associated with any alarm indication. After an alarm has cleared, two seconds will pass before the gamut alarm indicator returns to normal.

Figure 3-41. Composite Gamut Vector Display Graticule Markings

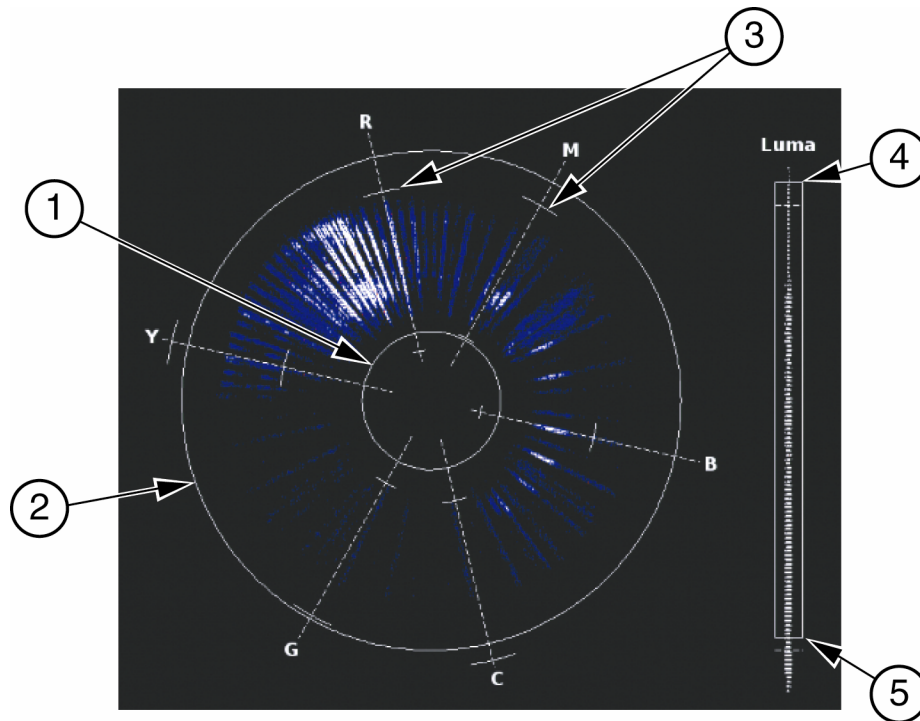


Table 3-28. Description of Composite Gamut Indicators

Key	Indicator	Description
1	Lower gamut ring	The lower gamut ring indicates the Gamut alarm Peak Lower limit. When the Gamut alarm is enabled and the Peak Lower limit is exceeded, the lower gamut ring turns red.
2	Upper gamut ring	The upper gamut ring indicates the Gamut alarm Peak Upper limit. When the Gamut alarm Peak Upper limit is exceeded, the upper gamut ring turns red.
3	Vector excursion mark	The excursion marks help to visualize the minimum/maximum value of 100% color bars.
4	Luma upper limit line	The Luma upper limit line indicates the Gamut alarm Luma Upper limit. When the Gamut alarm is enabled, and the Luma Upper limit is exceeded, the luma upper limit line and LUMA turn red.

Table 3-28. Description of Composite Gamut Indicators

Key	Indicator	Description
5	Luma lower limit line	The Luma lower limit line indicates the Gamut alarm Luma Lower limit. When the Gamut alarm is enabled, and the Luma lower limit is exceeded, the Luma Lower Limit line and LUMA turn red.

RGB Gamut Display

When setting the upper and lower limits, the upper and lower gamut rings represent the threshold values. Set the threshold in the VIDEO ALARMS DIGITAL > DIGITAL GAMUT > RGB (UPPER/LOWER) > THRESHOLD menu to move to gamut rings. The RGB Gamut Display, shown in **Figure 3-42** and described in **Table 3-29**, is similar to the Composite Gamut Display. The RGB Gamut vector displays video amplitudes (which are in mV) in a polar format to represent color information. The rings turn red when the alarm is enabled and the values exceed the threshold setting.

Each R, G, and B pixel is plotted using amplitude and phase. The amplitude is derived from the R, G, B component. The phase is derived from the C_B C_R information of the digital signal. The pixels can be plotted as a single color or as each component color (see the Gamut Setup menu in Section 4). Unlike the composite Gamut vector, which plots two points per pixel, the RGB Gamut vector plots three points. Also, signals with no color content are displayed on a separate bar graph labeled Mono.

The RGB graticule is nearly identical to the composite graticule. The only differences are:

Amplitudes are displayed in mV rather than IRE or UNITS.

- The radials representing color vectors are 60° apart since they are displayed in a component color space.
- Mono bar graph is for monochrome.

NOTE: There is an alarm persistence of two seconds associated with any alarm indication. After an alarm has cleared, two seconds will pass before the gamut indicator returns to normal.

Figure 3-42. Component Gamut Vector Display Graticule Markings

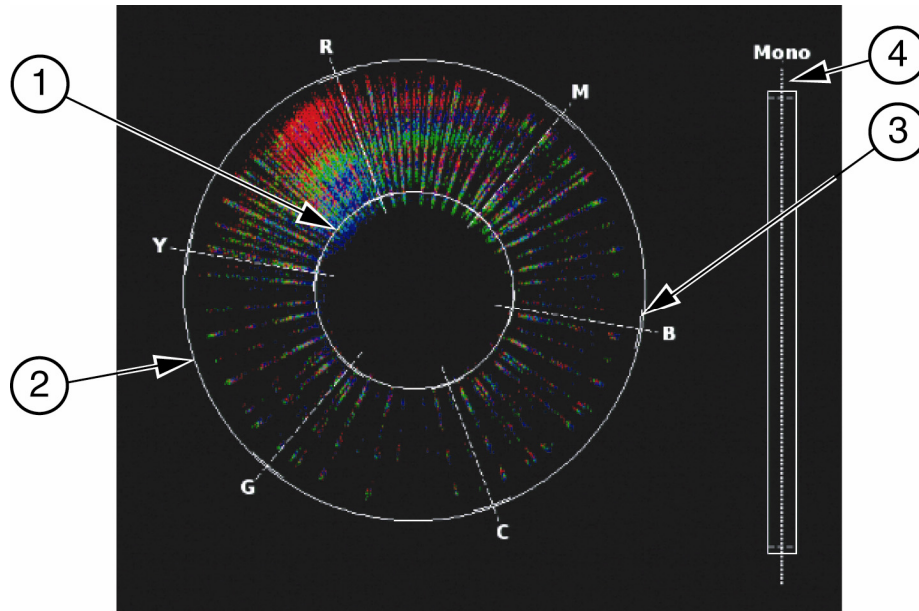


Table 3-29. Description of RGB Gamut Indicators

Key	Indicator	Description
1	Lower gamut ring	The lower gamut ring indicates the RGB Gamut alarm Lower limit. When the RGB Gamut alarm is enabled and the Lower limit is exceeded, the lower gamut ring turns red.
2	Upper gamut ring	The upper gamut ring indicates the RGB Gamut alarm Upper limit. When the RGB Gamut alarm is enabled, and the Upper limit is exceeded, the upper gamut ring turns red.
3	Vector excursion mark	The excursion marks help to visualize the minimum/maximum values of 100% color bars.
4	Mono	Mono indicates the monochrome of the RGB signal. There is no alarm associated with Mono.


Placing the Gamut Display in Line Select Mode



Pressing the LINE button enables the selected pane to monitor a single line of a video signal. This enables Line Select to monitor individual lines of the entire image. To view a line in Line Select mode:

1. Press the LINE button to place the selected Gamut display pane in Line Select mode. At the bottom-right of the display, the pane displays the Line number and Odd or Even field, as shown in **Figure 3-43**.

Figure 3-43. Establishing Line Select

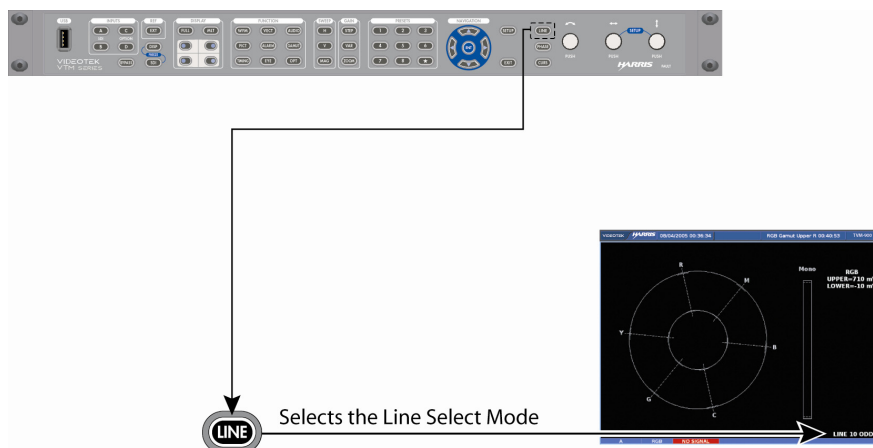

NOTE: In a Progressive (p) format odd and even selection is not available.

2. Press the CURVED ARROW knob to alternate between the ODD and EVEN fields for interlaced formats.
3. Rotate the CURVED ARROW knob to select the line to be displayed.

When the inputs are linked, Line Select is a global setting. When the inputs are not linked, Line Select is pane specific. When a picture is displayed in one of the panes, a marker across the picture approximates the displayed line position (± 1 line).

Gamut Zoom



Press ZOOM to cycle through one of six displays of the Composite or RGB gamut graticule:

- Expand the center
- Expand the upper-left quadrant
- Expand the upper-right quadrant
- Expand the lower-right quadrant
- Expand the lower-left quadrant
- Zoom off

Press and hold ZOOM to select the zoom pop-up menu. This menu is used to modify the ZOOM button. Once selected, press ZOOM to toggle between the selected zoom screen and the Normal screen. If NORMAL is selected in the ZOOM menu, pressing ZOOM steps through each zoom display.

Gamut Pane Menu Selections

Pressing and holding the GAMUT function button or the selected DISPLAY PANE button in the active gamut pane selects the pane menu. The Gamut Pane menu is described in **Table 3-30**.

Table 3-30. Gamut Menu Structure

Selection	Selection Option
COLOR SPACE	RGB
	CMPST
GAMUT SETUP	Press ENT

Color Space

Color Space is used to determine the type of gamut graticule that appears in the pane. Selecting RGB displays the RGB gamut graticule. Selecting CMPST displays the Composite gamut graticule.

Gamut Setup

Press the ENT button to access the global Gamut setup menu. For more information on the global Gamut Setup menu see Section 4.

Picture Display

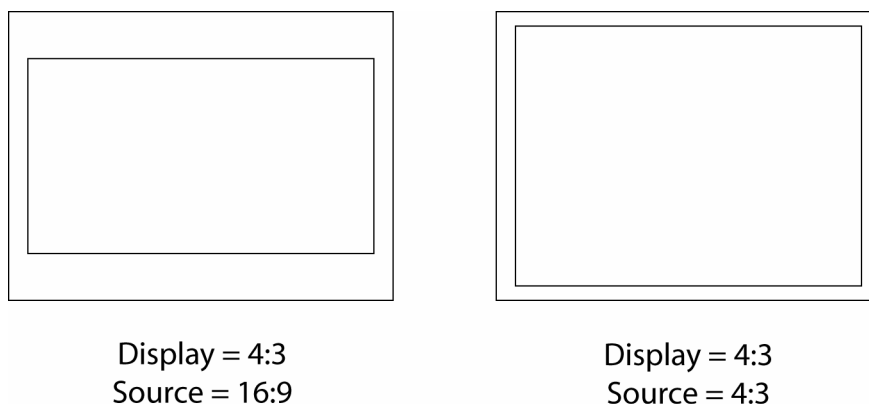
The picture display pane is used to show the picture of the selected input. Press the PICT button to display the picture in the selected pane. A Picture display diagram is shown in **Figure 3-44** and described in **Table 3-31**. Only one picture can be displayed.

Figure 3-44. Picture Display Diagram

Table 3-31. Description of Picture Display Diagram

Field Identifier	Field Information	Nomenclature
1	Input	Displays user-configurable source IDs for input and routers
2	Standard	Displays the Line Rate/Frame Rate [1080i/59.94]; select the Standard in the VIDEO FORMAT > VIDEO A thru D CONFIGURE menu
3	Closed caption	Shown as CC1 – CC4, T1 – T4, or 708; Closed Caption selections are located in the PICTURE SETUP > CLOSED CAPTION DISPLAY menu.
4	Gamut indication status	Displayed when Gamut is enabled (this field is not displayed when Gamut for the input is disabled); select GAMUT in the PICT pane menu to enable GAMUT
5	Aspect ratio	Displays the picture aspect ratio; the aspect ratio is determined by the input format
6	Picture	Displays the picture of the selected video input
7	XDS	Displays the location of the XDS information
8	Timecode	Displays the location of the timecode information

The picture display changes according to the aspect ratio and anamorphic selections in the global setup menu. A picture display diagram, shown as the left drawing in **Figure 3-45**, shows the 4:3 display with a 16:9 source. Also, the picture to the right in **Figure 3-45** shows a 4:3 display with a 4:3 source.

Figure 3-45. Aspect Ratio Source Diagram

Picture Pane Menu Selections

Pressing and holding the PICT function button or the DISPLAY PANE button in the active picture pane selects the pane menu. The Picture Pane menus are described in **Table 3-32** to **Table 3-34** for picture monitoring.

Table 3-32. Picture Analog Menu

Selection	Selection Option
NATIVE	OFF
	ON
DELAY	ON
	OFF
DELAY POSITION	Use the H POS and V POS knobs; press knob for default
PICTURE SETUP	Press ENT

Table 3-33. Picture SD Menu

Selection	Selection Option
NATIVE	OFF
	ON
DELAY	ON
	OFF
DELAY POSITION	Use the H POS and V POS knobs; press knob for default
GAMUT HIGHLIGHTING	ON
	OFF
PICTURE SETUP	Press ENT

Table 3-34. Picture HD Menu

Selection	Selection Option
DELAY	ON
	OFF
DELAY POSITION	Use the H POS and V POS knobs; press knob for default
GAMUT HIGHLIGHTING	ON
	OFF
PICTURE SETUP	Press ENT

Native Mode

NOTE: The Native mode menu item will only appear when an Analog or SD format is detected or selected.

When Native mode is enabled, it displays the SD (Analog or Digital) picture as 480i. The quad screen does not resize in Native mode. When Native mode is not checked, the SD picture fills the screen.

Delay

Delay is used to view the horizontal and vertical blanking areas of the video signal. DELAY enables and disables the delay mode. Delay Position displays the amount of vertical and horizontal delay. Using the delay position, turn the UP/DOWN and

RIGHT/LEFT knobs to position the picture. The Delay feature is not affected by the Native mode selection.

Gamut Highlighting

When Gamut Highlighting is selected in the Picture Setup menu, a grid pattern appears over the picture display highlighting gamut errors. Gamut Highlighting is determined by the GAMUT THRESHOLD settings in the VIDEO ALARM DIGITAL > DIGITAL GAMUT alarm menu.

Picture Setup

Press the ENT button to access the global Picture setup menu. For more information on the global Picture Setup menu see Section 4.

Closed Caption

Closed Caption data can be decoded and keyed over the picture. The Closed Caption display is provided as a means to verify that captions are present and can be decoded. The display provides a limited character and feature set. The 708 caption service is defined by EIA-708-B Digital Television Closed Captioning standard for High Definition video. All other caption services are defined by EIA/CEA-608-B NTSC Line 21 Data Services standard. The Closed Caption services are:

- CC1 – Primary synchronous caption service (608 or 708)
- CC2 – Special non-synchronous use captions (608)
- CC3 – Secondary synchronous caption service (608 or 708)
- CC4 – Special non-synchronous use captions (608)
- T1 – First text service
- T2 – Second text service
- T3 – Third text service
- T4 – Fourth text service
- 708 – Digital television caption service (HD only)
- TT – Teletext is displayed over the picture when the PAL or 625/50 format with Teletext data embedded in the vertical blanking interval is utilized, as shown in the sample illustration **Figure 3-46**. When enabled, the VTM monitors for teletext.
- XDS – Extended data services.

The default caption service is OFF. Selecting CC1 or CC3 with an EIA-708 embedded signal will decode the derived 608 data, if present. The 608 captioning data and 708 data is extracted at the same time.

Closed captioning supports 112 characters as per EIA/CEA-608B 6.4.1:

Upper and Lower Case Characters	ABCDEFGHIJKLMNOPQRSTUVWXYZ abcdefghijklmnopqrstuvwxyz
Accented Characters	àáâçèéêîñÑñóôúû
Punctuation Characters	! , . ; : ' " # % & @ / () [] + - ÷ < > ? ° ¢ \$ £ ® ™ ½ ¿
Numeric Characters	0 1 2 3 4 5 6 7 8 9
Other Characters	♪, standard space, □, ■

Some characters are not available such as the “e” with the dieresis above it. The French word Noël uses this character. The ë in Noël would appear differently on the screen. Also, Ñ is the only capital accented letter as shown above.

Figure 3-46. Teletext Sample Screen



Timing Display

Pressing the TIMING function button accesses the Timing display for the selected pane. A Timing display diagram is shown in **Figure 3-47** and described in Error! Reference source not found.. The diagram illustrates the general location for the various Timing display fields.

Relative timing of the inputs is compliant with SMPTE RP168.

Figure 3-47. Timing Display Diagram

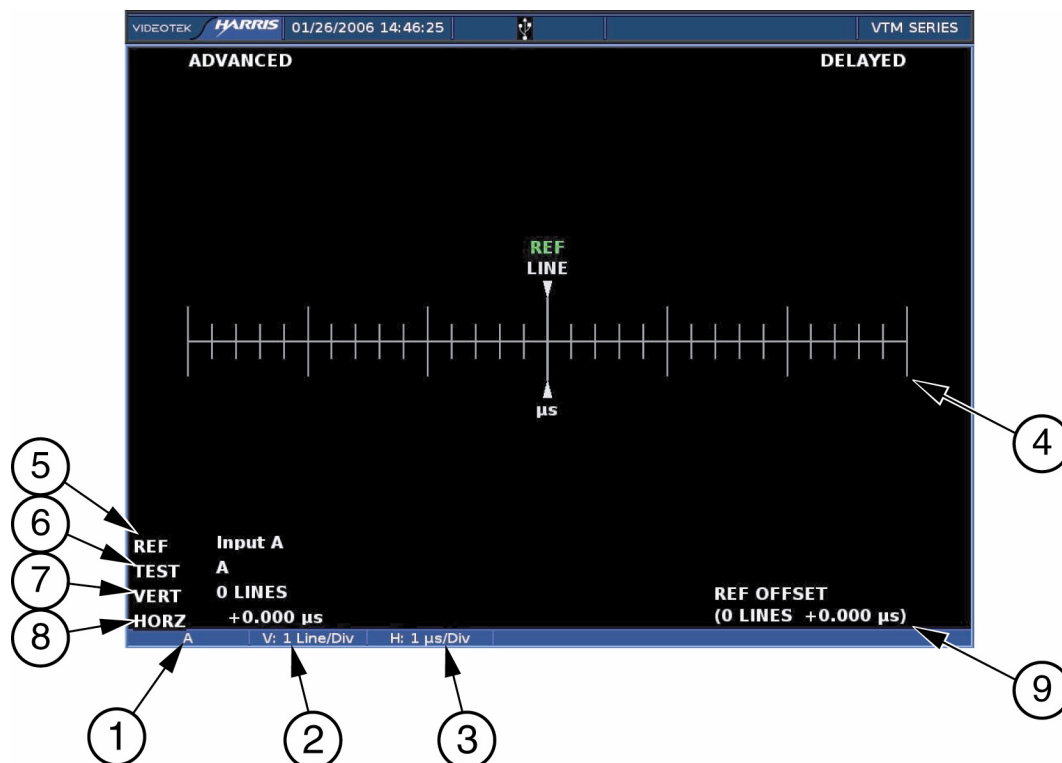


Table 3-35. Description of Timing Display Diagram

Field Identifier	Field Information	Nomenclature
1	Selected reference	Displays the selected reference as REF: X, where X is A, B, C, D, EXT BB, or EXT TRI; the REF is selected in the TIMING pane menu
2	Test	Indicates the input that is being measured, against the Selected Reference in Field Identifier 1; also displays the Selected Reference's Line Rate/Frame Rate [Ex: 1080i/59.94]; selected in the VIDEO FORMAT > VIDEO A through D CONFIGURE menu
3	VERT (Vertical)	Displays the Vertical Error Measurement as VERT: xxx Line(s), where xxx is the measured difference between the reference and the test input alignment of the vertical timing (sync/TRS) in lines
4	HORZ (Horizontal)	Displays the Horizontal Error Measurement as HORZ: yy.yyy μs, where yy.yyy is the measured difference between the reference and the test input alignment of the horizontal timing (sync/TRS)
5	Input	Displays user-configurable source IDs for input and routers
6	Vertical scale	Displayed as V: 1Line/DIV
7	Horizontal scale	Displayed as H: X, where X is the number with μs/DIV for analog, SD, and HD formats
8	REF OFFSET	Displays that the zero point of the timing measurements are offset from the REF selection by xx lines yy.yyy μs
9	Timing graticule	Shows the timing graticules, cursors, and labels

When a signal is processed, there is the potential for it to be delayed with respect to a reference signal. The Analog/Digital timing display is used to indicate when a video input is deviating in time from the reference. See “Reference Selection” on page 80 for more information on reference selection.

REF (Reference), located in the center of the timing display, indicates the reference-timing point for the type of signal being monitored. REF is green when the line and μ s (microseconds) cursors are all aligned. As the signal falls out of timing alignment, the line and the μ sec cursors change color when it moves from REF. When this occurs, the REF turns red. Each hash mark represents a vertical line (top scale) and 1μ s (bottom scale). Once the line or μ sec cursors are at the edge of the display, arrows will appear to the right or left of the timing line.

NOTE: The Timing Display alignment accuracy is ± 280 ns.

The bottom of the Timing display contains the following information:

- REF – The selected reference input that represents the REF line in the Timing display (EXT REF, INPUT A, B, C, D, LTC).
- TEST – The selected input (A, B, C, or D) that is being monitored.
- VERTICAL – The offset line in full-video lines between the reference and the displayed video.
- HORIZONTAL – The offset time in microseconds between the reference and the displayed video. Horizontal can be yellow at 0μ sec. It displays the minimum scale resolution at 1μ s and the minimum timing resolution at $.037\mu$ s for HD (High Definition) and 0.74μ s for SD (Standard Definition).

Things to Remember When Using the Timing Display

1. The Timing Display measures the elapsed time between the vertical syncs of two inputs. The elapsed time is expressed in units of pixels and lines of the selected input video not of the reference.
2. When referencing a standard definition analog or digital video input to a high definition video or external tri-level reference input, the line number indication in the timing display represents standard definition video lines. If the relative timing is adjusted in high definition video lines, it may take an adjustment of two or more lines before the line number changes in the timing display. This is due to the high frequency high definition video lines, which are shorter than the standard definition video lines represented by the timing display.
3. When referencing a high definition video input to a standard definition analog, digital video, or external composite (BB) reference input, the line number indication in the timing display represents high definition video lines. If the relative timing is adjusted in standard definition video lines, a single video line adjustment will cause a change of two or more lines in the timing display. This is due to the low frequency standard definition video lines, which are longer than the high definition video lines represented by the timing display.
4. The information of the Timing Display should not be used when captured SDI freeze data is displayed.

Timing Pane Menu Selections

Pressing and holding the TIMING function button in the active Timing pane selects the pane menu. The Timing Pane menu is described in **Table 3-36**.

Table 3-36. Timing Pane Menu

Selection	Selection Option
REFERENCE	EXT REF
	INPUT A
	INPUT B
	INPUT C
	INPUT D
	LTC
TIMING MODE	FACTORY
	OFFSET
	SET ZERO REF
	CLEAR ZERO REF

Reference Selection

The reference selection can be selected from the TIMING pane menu. The Reference selections are:

- **EXT REF** – Reflects current setting of External Reference (selected by pressing and holding the EXT button)
- **INPUT A** – Internal Reference fixed on Input A.
- **INPUT B** – Internal Reference fixed on Input B.
- **INPUT C** – Internal Reference fixed on Input C (Option required).
- **INPUT D** – Internal Reference fixed on Input D (Option required).
- **LTC** – Longitudinal Time Code

Timing Mode

The Timing mode selection is used to set the offset of the reference to the signal. When offset is applied against the reference, OFFSET is shown in the lower right corner of the Timing Pane. REF (Reference), located in the center of the timing display, indicates the Offset from the 0 REF point when Offset is applied. REF is green when the line and μ sec (microseconds) cursors are all aligned with the Offset reference. As the signal falls out of timing alignment with the Offset reference, the line and the μ sec cursors change color when it moves from REF. The Timing Mode Selections are:

- **Factory** – Sets the factory reference to 0 REF. When FACTORY is selected, the OFFSET field does not appear on the screen.
- **Offset** – Enables and displays the Offset field. The reference offset is not applied until SET ZERO REF is selected.

- Set Zero Ref – Applies the current offset setting as the Zero REF point.
- Clear Zero Ref – Clears the setting applied in the SET ZERO REF menu and returns the Reference to the Factory Reference Setting. Offset remains on the screen.

Alarm Display

Press the ALARM button to display the alarm display. Pressing and holding the ALARM function button opens the Alarm Pane menu. The default alarm display is the Alarm Log display. The Alarm Status pane can also be selected from the Alarm Pane menu. For information on individual alarms, see Setting Alarms and Alarm Descriptions in Section 5.

Alarm Log Display

The Alarm Log display lists all the alarms, the date, time, time code, duration, and peak value. The alarm list begins with the most recent alarm and can hold a maximum of 200 alarms.

An Alarm Log display diagram is shown in **Figure 3-48** and described in **Table 3-37**. The diagram illustrates the general location for the various alarm fields.

Figure 3-48. Alarm Log Diagram

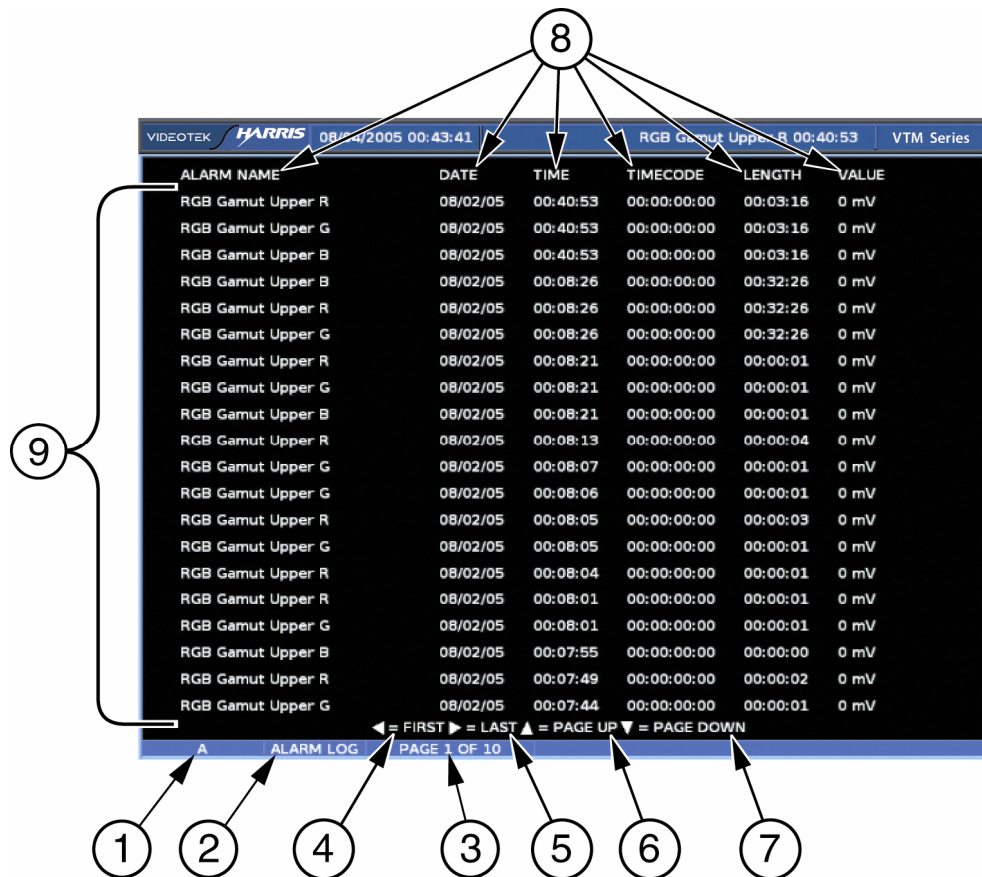


Table 3-37. Description of Alarm Log Display Diagram

Field Identifier	Field Information	Nomenclature
1	Input	Displays user-configurable source IDs for input and routers
2	Display Label	Displayed as ALARM LOG
3	Page Information	Displayed as PAGE X of Y, where X is the selected page and Y is the total number of pages.
4	Paging information	Displays ◀ = FIRST page
5	Paging information	Displays ▶ = LAST page
6	Paging information	Displays ▲ = PAGE UP
7	Paging information	Displays ▼ = PAGE DOWN
8	Column Labels	Displays the labels # (for the number in the alarm list), ALARM NAME, DATE, TIME, TIME CODE, LENGTH (Duration), and PEAK VALUE*
9	Alarm List	Displays the list of alarms from the most recent alarm to the last recorded alarm. There is a maximum of 200 alarms that can be logged.

* Certain alarm parameters do not have a level measurement that can report a peak value. This is indicated when NO RPV (No Report Peak Value) appears in the PEAK VALUE column. If A³-OPT2 is installed, all audio alarms will report NO RPV.

When an alarm is first registered, it appears on the alarm display and is highlighted in yellow. If the alarm is short term (i.e., two seconds or less), the alarm text is not highlighted after approximately two seconds. If the alarm continues longer than two seconds, the text remains yellow and the alarm duration is incremented. When the next alarm occurs, the previous alarm moves down one position.

The VTM Series has enough memory for 200 alarms per input. When 200 different alarm events have occurred, alarm number 200 is dropped and the most recent alarm is tagged as 01. To overcome the 200-alarm per input limit, connect a PC to the Ethernet port and use PC support software. All alarms are passed to the PC and saved.

Use the following NAVIGATION buttons to scroll through the alarm list:



Press to page up through the alarm list.



Press to page down through the alarm list.



Press to select the first page on the list.



Press to select the last page on the list.

To erase the current group of alarms, press and hold the ENT button for approximately five seconds.

A GPI output dry-contact closure can be used to alert other devices when an alarm occurs. Use the COMMUNICATIONS menu to setup the GPI.

Alarm Status Display

The Alarm Status Display lists all the alarms, the state of each alarm setting, the current alarm limit selection (if applicable), the current alarm duration (if applicable), and the Accumulated alarm column. An alarm status display diagram is shown in **Figure 3-49** and described in **Table 3-38**. The diagram illustrates the general location for the various alarm status display fields.

Figure 3-49. Alarm Status Display Diagram

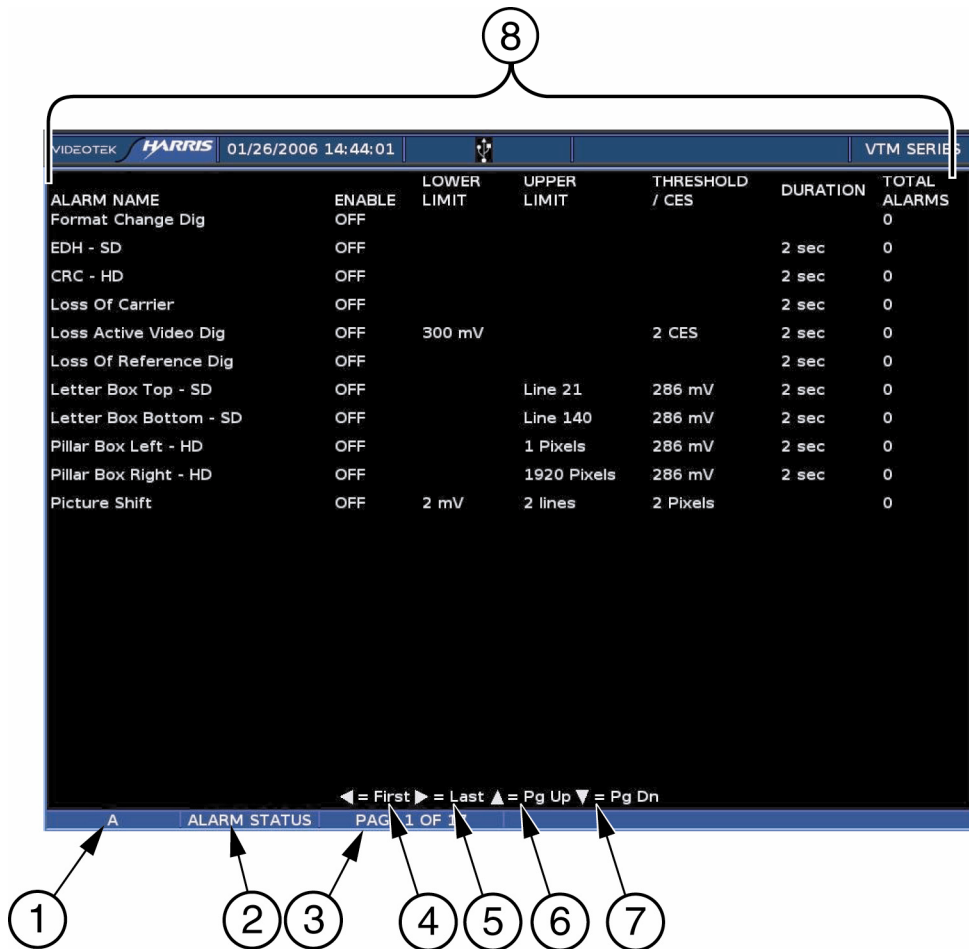


Table 3-38. Description of Alarm Status Display Diagram

Field Identifier	Field Information	Nomenclature
1	Input	Displays user-configurable source IDs for input and routers
2	Display Label	Displayed as ALARM STATUS
3	Page Information	Displayed as PAGE X of Y, where X is the selected page and Y is the total number of pages
4	Paging information	Displays ◀ = FIRST page

Table 3-38. Description of Alarm Status Display Diagram

Field Identifier	Field Information	Nomenclature
5	Paging information	Displays ► = LAST page
6	Paging information	Displays ▲ = PAGE UP
7	Paging information	Displays ▼ = PAGE DOWN
8	Column Labels	Displays the columns ALARM NAME, ENABLE, LOWER LIMIT, UPPER LIMIT, THRESHOLD/CES, DURATION, and TOTAL ALARMS

The alarm status screen contains alarm name text that can appear in a colored state. The colored states are:

- **White:** indicates alarm is not enabled.
- **Green:** indicates alarm is enabled and not exceeding alarm limits.
- **Red:** indicates the alarm is enabled and exceeding an alarm limits.

There is a two-second persistence for any Alarm Name color change.

Use the following NAVIGATION buttons to scroll through the alarm list:



Press to page up through the alarm list.



Press to page down through the alarm list.



Press to select the first page on the list.



Press to select the last page on the list.

Alarm Log and Status Pane Menu Selections

Pressing and holding the ALARM function button in the alarm status pane selects the Alarm pane menu. The Alarm pane menu is described in **Table 3-39**.

Table 3-39. Alarm Status Pane Menu

Selection	Selection Option
DISPLAY	ALARM LOG
	ALARM STATUS
ALARM LOG DISPLAY	ALL
	VIDEO ALARMS
	AUDIO ALARMS
	TIME CODE ALARMS
	GPI ALARMS
MUTE ALARMS	OFF
	ON
VIDEO ALARMS ANALOG	Press ENT
VIDEO ALARMS DIGITAL	Press ENT
AUDIO ALARMS	Press ENT

Display

The Display menu selection is used to select between the Alarm Log and Alarm Status displays.

The Alarm Status screen lists all the alarms, the state of each alarm setting, the current alarm limit selection (if applicable), and the current alarm duration (if applicable).

Alarm Log Display

The Alarm Log Display menu determines the type of information that is displayed in the alarm log screen. The selections are:

- All
- Video Alarms
- Audio Alarms
- Time Code Alarms
- GPI Alarms

Mute Alarms

Sound occurs when an alarm is activated and SOUND is selected for the alarm in the Alarm Matrix. The Alarm Matrix is accessed in any of the Alarm Setup menus. The mute alarms submenu is used to enable or disable the alarm notification sound.

Video Alarm Analog

Press the ENT button to access the global VIDEO ALARMS, ANALOG menu. For more information on the global SETUP menu see Section 4.

Video Alarm Digital

Press the ENT button to access the global VIDEO ALARMS, DIGITAL menu. For more information on the global SETUP menu see Section 4.

Audio Alarms

Press the ENT button to access the global AUDIO ALARMS menu. For more information on the global SETUP menu see Section 4.

Audio Display

Press the AUDIO button to display the audio display. Only one audio pane can be displayed at a time. The VTM Series accepts up to 8 AES/EBU, 8 analog, and four groups of embedded inputs, and provides up to 8 analog and 4 AES/EBU output channels. Dolby D and Dolby E inputs are also available on selected options.

Five audio types are selected by pressing the SETUP button and selecting AUDIO SETUP > CONFIGURE INPUT A thru D > AUDIO TYPE menu:

- **ANALOG**
- **AES/EBU** - A digital audio standard established jointly by the Audio Engineering Society (AES) and the European Broadcasting Union (EBU).
- **EMBEDDED** - Digital audio information multiplexed onto a serial digital data stream. Up to sixteen channels can be multiplexed on a single stream of 601 video, minimizing cabling and routing requirement.
- **DOLBY AES** - Dolby encoded audio information from a digital audio input. (Dolby option required)
- **DOLBY EMB. (EMBEDDED)** - Dolby Encoded audio information multiplexed onto a serial digital data stream. (Dolby option required)

Configure the audio display type and parameters using the Audio Setup CONFIGURE INPUT A thru D submenu. Audio can be displayed as:

- One 2 channel bar graph with 1 Lissajous and 1 Phase bar
- Two 2 channel bar graphs (for a total of 4 channels) with 2 Lissajous and 2 Phase bars
- Three 2 channel bar graphs (for a total of 6 channels) with 3 Phase bars or CineSound 5.1 with 2 Phase bars
- Four 2 channel bar graphs (for a total of 8 channels) with 4 Phase bars or CineSound 5.1+AUX, 6.1, or 7.1 with up to three phase bars.

Lissajous can be selected as Soundstage or X-Y displays.

Input assignments, scaling, input levels, and response can also be modified using the Audio Setup menu. The function of the audio is dependent upon the audio option installed.

Audio Scales

The Vertical audio graticule scales change according to the scale selections made in the AUDIO SETUP > METER SETUP > ANALOG or DIGITAL SCALE menu and the format being displayed.

The Scales are:

- TYPE I
- Type IIA
- Type IIB
- Type I + 8
- Nordic
- DIN 45406
- dBFS (Digital only)
- Zero dB Ref dBFS (ref -20 dBFS) (Digital only)
- Custom dBFS (Digital only)
- Custom dB

Vertical Audio Displays

The Vertical Meter displays the level, reference, and ballistics detail in a vertical format. There are eight analog audio input channels (four stereo pairs), 8 AES/EBU digital input channels (eight stereo pairs), and 16 embedded audio channels (serial-digital video input only) available for selection in the menu. A maximum of eight channels can be displayed simultaneously. Audio inputs can be assigned to any meter on the display.

The displayed inputs can also be monitored as analog signals on the 37-pin, D-Sub, ANALOG IN/OUT connector. The displayed AES/EBU or embedded audio will be converted to analog audio for the monitoring output. The output audio level can be adjusted from -50 dB to +6 dB around the reference-input level. The default output level for a -20 dBFS input produces a +4 dBm analog output level (600Ω). For example, when applying a gain adjustment of +6 dB to the output with a -20 dBFS input signal, the audio output level will be +10 dBm into a 600Ω termination. This Audio Output Level adjustment is made in the AUDIO SETUP > OUTPUT PREFERENCES menu. The Audio Output Level adjustment default is 0 dB.

The phase bars are used to monitor the instantaneous phase relationship between two channels of audio. The “+” marking indicates a phase difference of 0°, and the “-” marking indicates a phase difference of 180°. A properly phased stereo pair produces a phase pointer that moves within the green zone, whereas a reversed channel produces a pointer that moves within the red zone. The phase bar polarity in the AUDIO SETUP >

METER SETUP > CONFIGURE PHASE BARS > POLARITY menu can be set to Normal or Reverse.

The effect of higher damping in a phase meter is to show an averaged rather than a peak value of phase. The Phase Bar Damping in the AUDIO SETUP > METER SETUP > CONFIGURE PHASE BARS > DAMPING can be set from FAST, 1 to 10, and SLOW.

The Lissajous display appears for two- and four-bar graphs on the right of the audio pane. The Lissajous display shows the amplitude and phase relationship between two input signals.

Vertical Audio display diagrams are shown in **Figure 3-50** to **Figure 3-53** and described in **Table 3-40** to **Table 3-43**. The Vertical audio graticule scales change according to the scale selections made in the Setup menu and the format being displayed. Some of the markings in the illustrations do not appear on the display.

Figure 3-50. Two Bar Graph Display with Lissajous Diagram

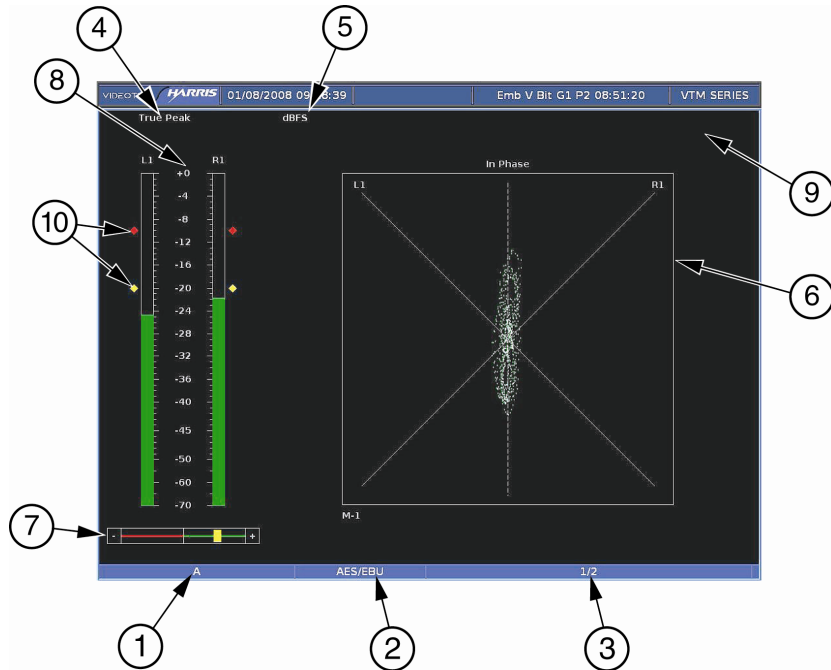


Table 3-40. Description of Two Bar Graph Display with Lissajous Diagram

Field Identifier	Field Information	Nomenclature
1	Input	Displays user-configurable source IDs for input and routers
2	Audio type	Displayed as Analog, AES, Embedded, Dolby AES, Dolby Embedded
3	Audio input	Displayed information is option dependent; shown as 1-16 (analog is 1-8, AES is 1-16 or 1-8, Embedded is 1-16)
4	Meter response	Displays the selected meter response: VU, Peak, True Peak, VU + Peak, VU + True Peak, Loudness, Custom
5	Scale selection	Displays the selected meter scale: Type I, Type IIa, Type IIb, Type I + 8, Nordic, DIN 45406, dBFS, Zero REF dBFS, Custom dB, and Custom dBFS (scales are dependent upon audio type)
6	Lissajous display	Lissajous of bar graph 1 with labels for R, L, and the number of the meter being monitored (i.e., M-1)
7	Phase bar	Phase Meter of bar graph 1
8	Audio graticule (with meter labels)	Shown as Stereo Pairs (L1, R1), SMPTE 320M, or Custom label
9	Zoom	- Zoom (when enabled) - Blank when disabled - Press the ZOOM button to cycle through Zoom modes
10	Level markers	Shows the peak and reference levels for the signal; this can be adjusted in the AUDIO SETUP > METER SETUP > REF DIGITAL (or ANALOG) menu

Figure 3-51. Four Bar Graph with Lissajous Display Diagram

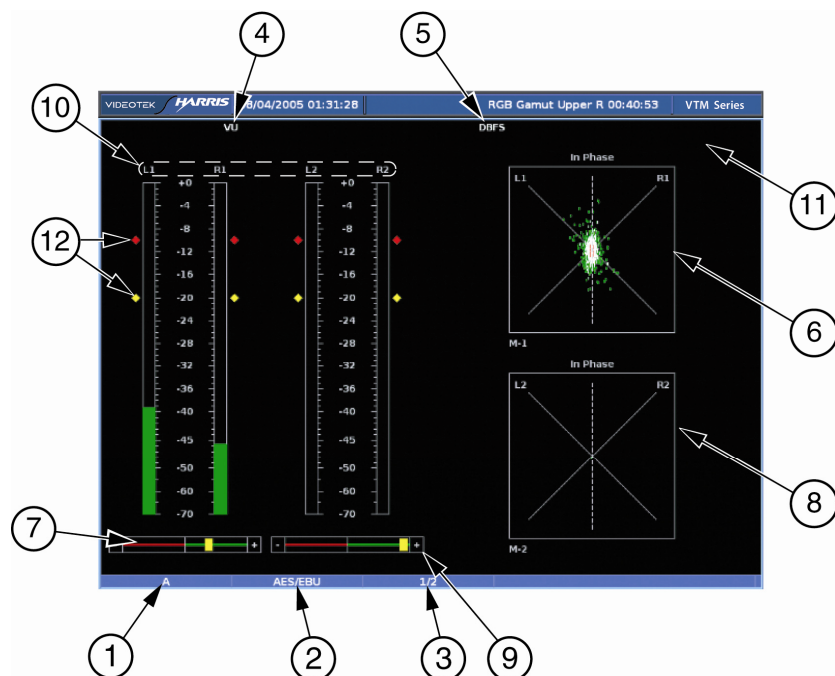


Table 3-41. Description of Four Bar Graph with Lissajous Display Diagram

Field Identifier	Field Information	Nomenclature
1	Input	Displays user-configurable source IDs for input and routers
2	Audio Type	Displayed as Analog, AES, Embedded, Dolby AES, Dolby Embedded
3	Audio Input	Displayed information is option dependent; shown as 1-16 (analog is 1-8, AES is 1-16 or 1-8, Embedded is 1-16)
4	Meter Response	Displays the selected meter response: VU, Peak, True Peak, VU + Peak, VU + True Peak, Loudness, Custom
5	Scale Selection	Displays the selected meter scale: Type I, Type IIa, Type IIb, Type I + 8, Nordic, DIN 45406, dBFS, Zero REF dBFS (scales dependent upon audio type)
6	Lissajous Display (1)	Lissajous of bar graph 1 with labels for R, L, and the number of the meter being monitored (i.e., M-1)
7	Phase Bar (1)	Phase Meter of bar graph 1
8	Lissajous Display (2)	Lissajous of bar graph 1 with labels for R, L, and the number of the meter being monitored (i.e. M-2)
9	Phase Bar (2)	Phase Meter of bar graph 2
10	Audio Graticule (with meter labels)	Shown as L1, R1, L2, and R2 (or Custom label)
11	Zoom	- Zoom (when enabled) - Blank when disabled - Press the ZOOM button to cycle through Zoom modes
12	Level Markers	Shows the peak and reference levels for the signal; this can be adjusted in the AUDIO SETUP > METER SETUP > REF DIGITAL (or ANALOG) menu

Figure 3-52. Six Bar Graph Diagram

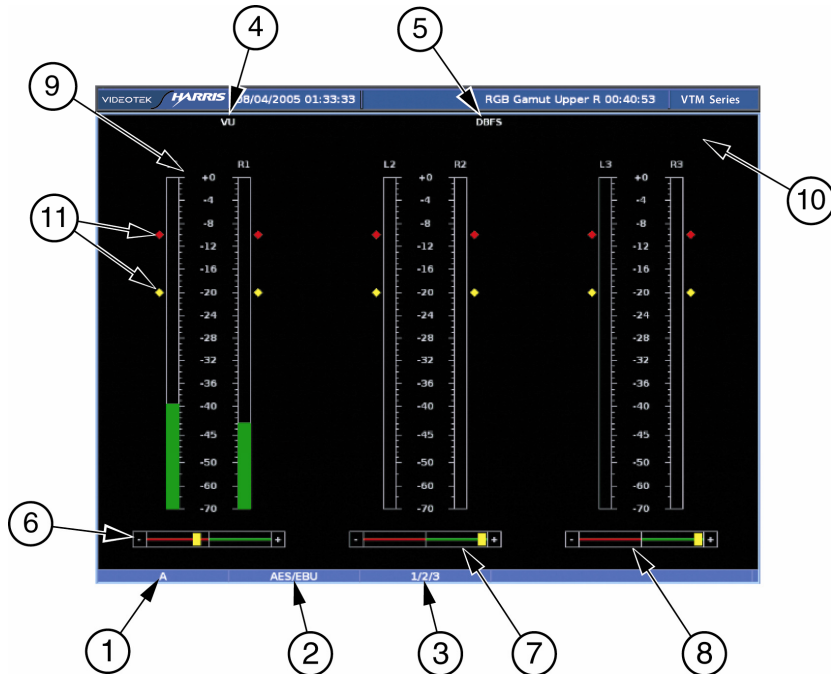


Table 3-42. Description of Six Bar Graph Diagram

Field Identifier	Field Information	Nomenclature
1	Input	Displays user-configurable source IDs for input and routers
2	Audio Type	Displayed as Analog, AES, Embedded, Dolby AES, Dolby Embedded
3	Audio Input	Displayed information is option dependent; shown as 1-16 (analog is 1-8, AES is 1-16 or 1-8, Embedded is 1-16)
4	Meter Response	Displays the selected meter response: VU, Peak, True Peak, VU + Peak, VU + True Peak, Custom, Loudness
5	Scale Selection	Displays the selected meter scale: Type I, Type IIa, Type IIb, Type I + 8, Nordic, DIN 45406, dBFS, Zero REF dBFS
6	Phase Bar (1)	Phase Meter of bar graph 1
7	Phase Bar (2)	Phase Meter of bar graph 2
8	Phase Bar (3)	Phase Meter of bar graph 3
9	Audio Graticule (with meter labels)	Shown as L1, R1, L2, R2, L3, and R3 (or Custom label)
10	Zoom	- Zoom (when enabled) - Blank when disabled - Press the ZOOM button to cycle through Zoom modes
11	Level Markers	Shows the peak and reference levels for the signal; this can be adjusted in the AUDIO SETUP > METER SETUP > REF DIGITAL (or ANALOG) menu

Figure 3-53. Eight Bar Graph Display Diagram

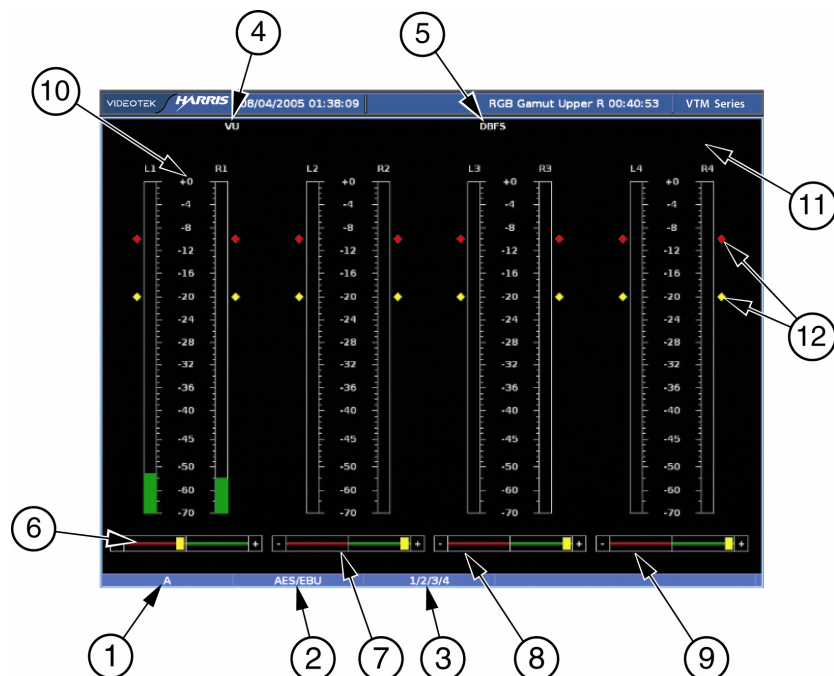


Table 3-43. Description of Eight Bar Graph Display Diagram

Field Identifier	Field Information	Nomenclature
1	Input	Displays user-configurable source IDs for input and routers
2	Audio Type	Displayed as Analog, AES, Embedded, Dolby AES, Dolby Embedded
3	Audio Input	Displayed information is option dependent; shown as 1-16 (analog is 1-8, AES is 1-16 or 1-8, Embedded is 1-16)
4	Meter Response	Displays the selected meter response: VU, Peak, True Peak, VU + Peak, VU + True Peak, Loudness, Custom
5	Scale Selection	Displays the selected meter scale: Type I, Type IIa, Type IIb, Type I + 8, Nordic, DIN 45406, dBFS, Zero REF dBFS
6	Phase Bar (1)	Phase Meter of bar graph 1
7	Phase Bar (2)	Phase Meter of bar graph 2
8	Phase Bar (3)	Phase Meter of bar graph 3
9	Phase Bar (4)	Phase Meter of bar graph 4
10	Audio Graticule (with meter labels)	Shown as L1, R1, L2, R2, L3, R3, L4, and R4 (or Custom label)
11	Zoom	- Zoom (when enabled) - Blank when disabled - Press the ZOOM button to cycle through Zoom modes
12	Level Meters	Shows the peak and reference levels for the signal; this can be adjusted in the AUDIO SETUP > METER SETUP > REF DIGITAL (or ANALOG) menu

CineSound Display

This unique, audio display provides an intuitive view of 5.1, 6.1, and 7.1 channels of surround sound audio. The default meter movement is from the center outward, but it can be reversed by a selection in the AUDIO SETUP menu. Two additional channels of audio can be viewed next to the CineSound[®] display, if required, thereby providing a total of eight channels on the screen. When the CineSound[®] display is selected, the audio inputs and meter labels follow a SMPTE 320M-B mapping scheme as listed in **Table 3-44**.

Table 3-44. CineSound[®] Audio Input Mapping

Analog Input	AES/EBU Input	CineSound Display Assignment	8-Bar Display Assignment
1	1	Left	1 Left (L1)
2	1	Right	1 Right (R1)
3	2	Center	2 Left (L2)
4	2	Low Frequency Effects (LFE)	2 Right (R2)
5	3	Left Surround (LS)	3 Left (L3)
6	3	Right Surround (RS)	3 Right (R3)
7	4	Left Aux	4 Left (L4)
8	4	Right Aux	4 Right (R4)

The 5.1 + Aux CineSound Audio display diagram is illustrated in **Figure 3-54** and described in **Table 3-45**. **Figure 3-55** displays CineSound with 6.1 channels. **Figure 3-56** displays CineSound with 7.1 channels.

Figure 3-54. CineSound 5.1 + Aux Display Diagram

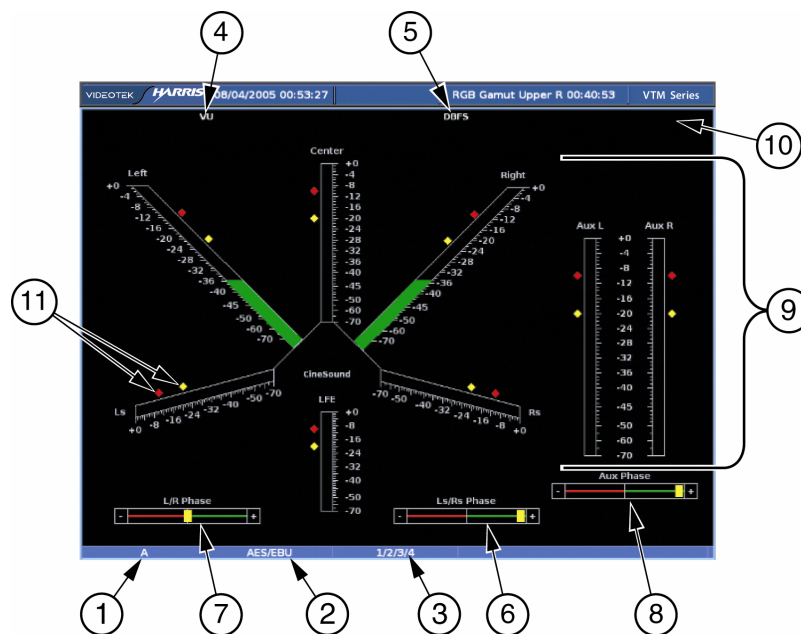


Table 3-45. Description of CineSound Display Diagram

Field Identifier	Field Information	Nomenclature
1	Input	Displays user-configurable source IDs for input and routers
2	Audio type	Displayed as Analog, AES, Embedded, Dolby AES, Dolby Embedded
3	Audio input	Displayed information is option dependent; shown as 1-16 (analog is 1-8, AES is 1-16 or 1-8, Embedded is 1-16)
4	Meter response	Displays the selected meter response: VU (normal), Peak, True Peak, VU + Peak, VU + True Peak, Loudness, Custom
5	Scale selection	Displays the selected meter scale: Type I, Type IIa, Type IIb, Type I + 8, Nordic, DIN 45406, dBFS, Zero REF dBFS
6	Phase meter of surround LR	Displays the surround LR phase
7	Phase meter of front LR	Displays the front LR phase
8	Phase meter of AUX	Displays the AUX phase
9	Audio graticule (with meter labels)	Shown as LFE, Ls, Left, Center, Right, Rs, and AUX L, R (or Custom label); these are the default labels
10	Zoom	- Zoom (when enabled) - Blank when disabled - Press the ZOOM button to cycle through Zoom modes
11	Level markers	Shows the peak and reference levels for the signal; this can be adjusted in the AUDIO SETUP > METER SETUP > REF DIGITAL (or ANALOG) menu.

Figure 3-55. CineSound 6.1 Channels Display


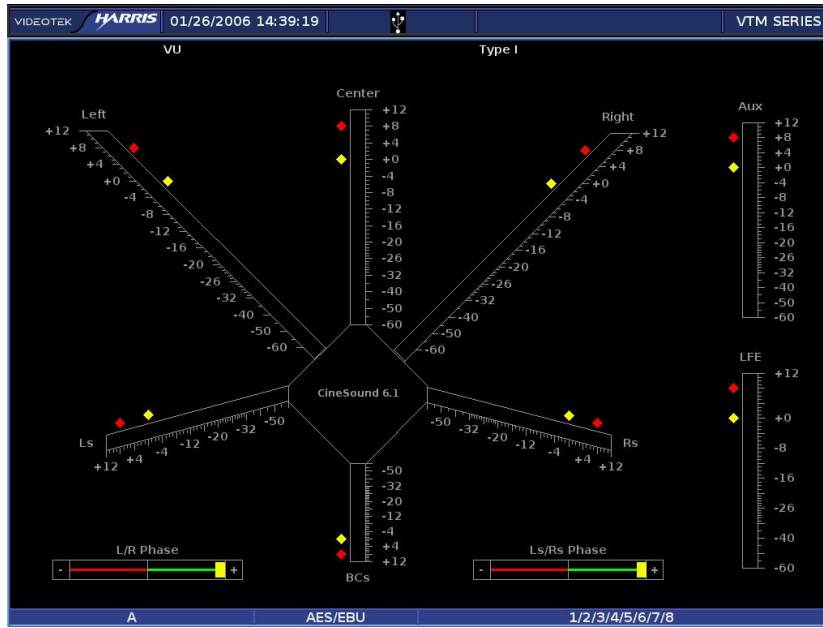


Figure 3-56. CineSound 7.1 Channels Display

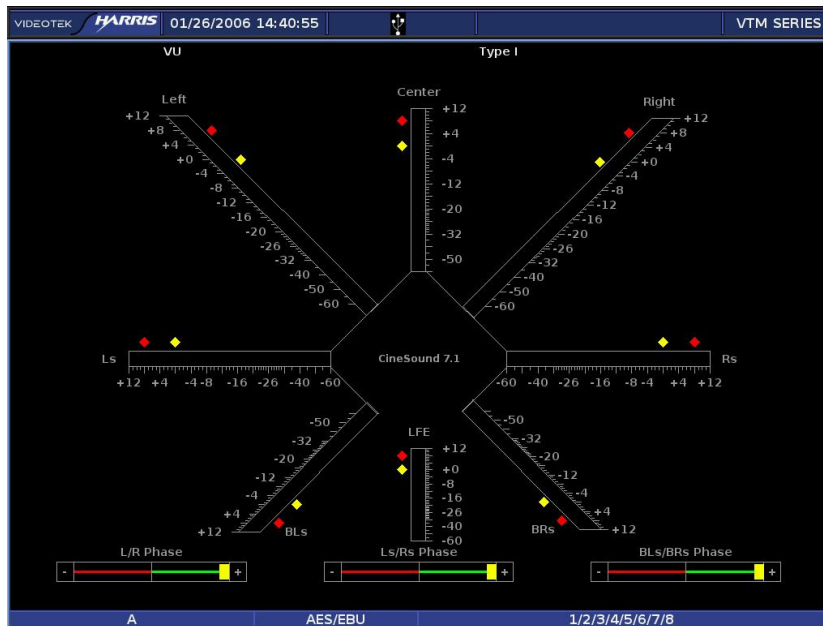

Loudness Display

The Loudness Audio display diagram is illustrated in **Figure 3-57** and described in **Table 3-46**. For more information on the Loudness feature, see the *A³-OPT 2*, *A³-OPT 3*, *A³-OPT 5*, *A³-4004*, and *A³-OPT 3/5-TL Installation and Operation Handbook*.

Figure 3-57. Loudness Display Diagram VTM/TVM-A³-OPT 3/5-TL)

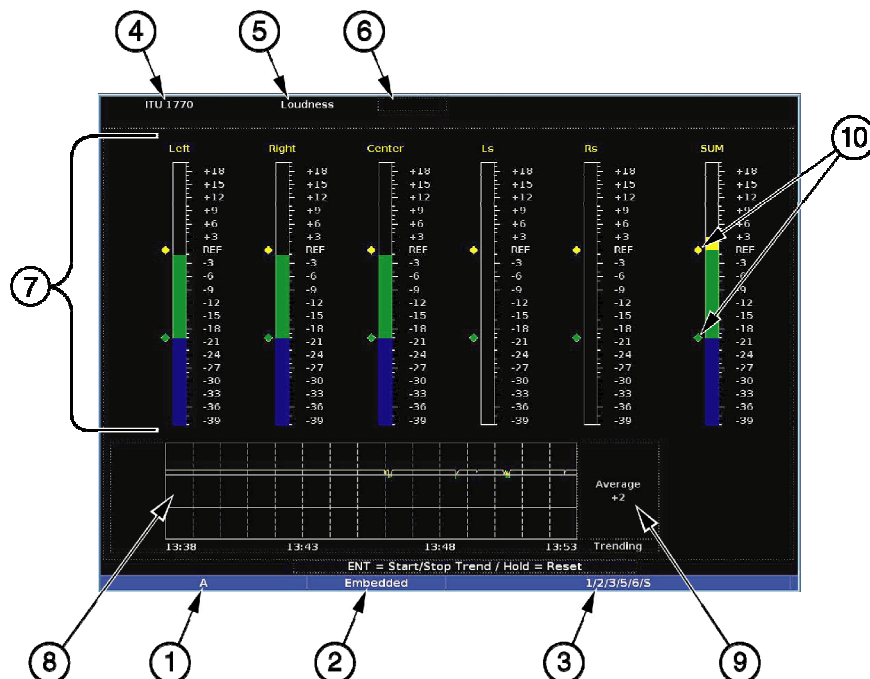


Table 3-46. Description of Loudness Display Diagram

Field Identifier	Field Information	Nomenclature
1	Input	Displays user-configurable source IDs for input and routers
2	Audio type	Displayed as Analog, AES, or Embedded
3	Monitored audio input channel	Displayed information is option dependent; shown as 1-16 (analog is 1-8, AES is 1-16 or 1-8, Embedded is 1-16)
4	Algorithm used	Algorithm based on the ITU-R BS.1770 standard for the RLB filter (algorithm based on the IEC 60608 standard for the A weighting filter)
5	Loudness	Displays the Loudness Units with Peak indicators
6	Zoom	- Zoom displayed (when enabled) - Blank when disabled - Press the ZOOM button to toggle Zoom mode off and on
7	Audio Meters (with meter labels)	Shown as Left, Right, Center, Ls, Rs, and SUM (or the average loudness for all audio channels); these are the default labels

Table 3-46. Description of Loudness Display Diagram

Field Identifier	Field Information	Nomenclature
8	Trend chart	The Trend Chart is used to view short term loudness readings for the user-selectable time period (the time can range from 0.25 hours to 24 hours) Press the ENT button to Start and Stop the Trending chart Press and hold the ENT button for five seconds to clear the trending chart
9	Average Indication	The Average Indication is a numeric average loudness dB level readout of all selected channels over the chart duration
10	Level Marker	Shows the reference and preferred range levels for the signal; this can be set in the AUDIO SETUP > METER SETUP > REFDIGITAL (or ANALOG) menu

Expanding the Audio Display



Press the ZOOM button to access the audio zoom feature. The range of the zoom is dependent upon the selections made in the ZOOM CENTER and ZOOM RANGE menu. Press and hold ZOOM to access this menu.

- ZOOM CENTER: Adjustable from +0 dB to –50 dB in 1 dB steps. The default is the REFERENCE LEVEL setting. The ZOOM CENTER adjustment is restricted by AUDIO SCALE, REFERENCE LEVEL, and ZOOM RANGE selections.
- ZOOM RANGE: Adjustable from 4 dB to 20 dB in 2 dB steps. The default is 10 dB. The ZOOM RANGE adjustment is restricted by AUDIO SCALE, REFERENCE LEVEL, and ZOOM CENTER selections. Zoom must be enabled to view the new adjustments.

Audio Menu Selections

Pressing and holding the AUDIO function button in the active audio pane selects the audio pane menu. The Audio Pane menu is described in **Table 3-47**.

Table 3-47. Audio Pane Menu

Selection	Selection Option
AUDIO INPUT CHECK	OFF
	ANALOG
	AES 1 – 4
	AES 5 – 8
	EMBEDDED 1 - 8
	EMBEDDED 9 - 16
LISSAJOUS	SOUNDSTAGE
	X – Y
V2A TIMING DISPLAY (VTM -OPT V2A option only)	OFF (Default)
	ON
AUDIO SETUP	Press ENT

Audio Input Check

The Audio Input Check is a quick way of checking the audio sources. It displays and changes 8-CH bargraphs with the input source selected from the pane menus. It overrides input selections and is only active while it is enabled.

Lissajous

Select to determine the type of Lissajous display that appears in the Audio pane. There are two types of Lissajous displays (Soundstage and X-Y). The soundstage selection displays a Lissajous, which is rotated so that the in-phase signals appear on the vertical axis and out of phase signals appear on the horizontal axis.

X-Y displays a Lissajous with the left channel mapped to the vertical axis, and the right channel mapped to the horizontal axis.

V2A Timing Display (VTM-A3-OPT V2A only)

NOTE: The VTM-A3-OPT V2A option is only available when the VTM-OPT 3TL or 5TL is purchased. The V2A option must be used with a V2A test signal source. Suitable sources are the GEN-STAR, VSG-410, X75, and TSG-3901.

The VTM-A3-OPT V2A option is used to receive V2A signal and analyze the timing between the video signal and the audio signal. The V2A (Video-to-Audio) Timing Display menu is used to enable and disable the Lip Sync Timing display. After analysis, the V2A Lip Sync Timing display, when enabled, shows the audio and video timing differences (if any) that occur during the following processes:

- Up, cross, and down conversion
- Analog-to-digital conversion
- Digital-to-analog conversion
- MPEG coding and decoding

Lip sync indicators appear next to each channel in the bar graph and CineSound displays. The markers indicate the channel number and the timing difference in milliseconds. The indicators do not appear on the loudness display. A question mark (?) appears when no V2A signal is present, no video signal is present, or no audio signal is present.

Audio Setup

Press the ENT button to access the global Audio Setup menu. For more information on the Audio, see the *A³-OPT 2*, *A³-OPT 3*, *A³-OPT 5*, *A³-4004*, and *A³-OPT 3/5-TL Installation and Operation Handbook*.

Option Display

NOTE: Only one option display can be shown at a time.



Pressing the OPTION function button accesses the Optional display for the selected pane. To select the type of optional display for the pane, press and hold the OPT button to access the OPTION pane menu. The Option Pane menu is described in **Table 3-48**.

Table 3-48. Option Pane Menu

Selection	Selection Option
DISPLAY	DOLBY METADATA (only if the Dolby option is installed)
	VIDEO METADATA
	XDS
	TELETEXT
	CRC
	ASI
	EMBEDDED AUDIO DATA
SETUP	Press ENT

Display

The display that appears for the selected input is determined by the DISPLAY submenu of the OPTION Pane setup menu. The displays that are selectable are:


- Dolby Metadata (described on page 99)
- Video Metadata (described on page 102)
- XDS (described on page 104)
- Teletext (described on page 105)
- CRC (described on page 105)
- ASI (described on page 107)
- Embedded Audio Data (described on page 111)

Option Setup

Press the ENT button to access the global setup menu. For more information on the global Setup menu see Section 4.

Dolby Metadata Display (Option Dependent)

Metadata is Dolby specific information found in the input audio stream that is used to configure encoders that will transmit the Dolby Digital (AC-3) information to audio decoders.

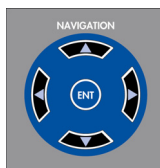

When the metadata information appears on the display, use the UP and DOWN NAVIGATION buttons to page through the metadata list. Press the RIGHT NAVIGATION button to move to the next program list. Press the LEFT NAVIGATION button to move to the previous program list. The metadata is read from the Dolby stream and cannot be changed.

- | | |
|---|------------------------------------|
| 1. Time Stamp | 18. Lo/Ro Surround Downmix |
| 2. Program Config | 19. Lo/Ro Center Downmix |
| 3. Program | 20. Pref. Stereo Downmix |
| 4. Data Rate | 21. Dolby Surr (Surround) Ex. Mode |
| 5. Bitstream Mode | 22. A/D Converter Type |
| 6. Channel Mode | 23. Original Bitstream |
| 7. LFE Channel (Enabled/Disabled) | 24. Copyright Bit |
| 8. Dolby Surr (Surround) Mode | 25. DC Filter |
| 9. Dialogue Level | 26. Lowpass Filter |
| 10. Center Downmix Level | 27. LFE Lowpass Filter |
| 11. Surround Downmix Level | 28. Surround Attenuation |
| 12. Audio Prod (Production) Information | 29. Surround Phase Shift |
| 13. Room Type | 30. Line Mode Comp Gain |
| 14. Mix Level | 31. Dynamic Range Gain |
| 15. RF Overmod Protection | 32. RF Mode Comp Gain |
| 16. Lt/Rt Surround Downmix | 33. Compression Gain |
| 17. Lt/Rt Center Downmix | |

A Dolby Metadata display diagram is shown in **Figure 3-58** and described in **Table 3-49**. The diagram illustrates the general location for the various waveform display fields.

Figure 3-58. Dolby Metadata Display Diagram

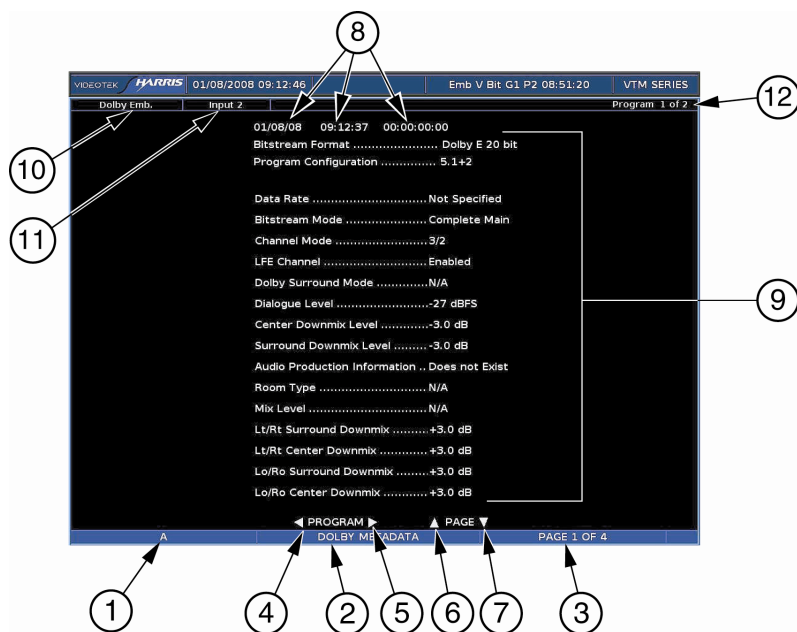


Table 3-49. Description of Dolby Metadata Display Diagram

Field Identifier	Field Information	Nomenclature
1	Input	Displays user-configurable source IDs for input and routers
2	Display label	Shown as Dolby Metadata
3	Page information	Shown as page X of Y where X is the page number and Y is the total number of pages
4	Paging information	Displays ◀ = Previous program
5	Paging information	Displays ▶ = Next program
6	Paging information	Displays ▲ = PAGE UP
7	Paging information	Displays ▼ = PAGE DOWN
8	Date, internal time, selected time code, time stamp	Date is shown as month/day/year, internal Time is shown as hour: minute: seconds, and time code is shown as hour: minute: seconds: frame
9	Metadata information	Supplied by the A ³ -OPT 5 board
10	Audio type	Displayed as Analog, AES, or Embedded, Dolby AES, Dolby Embedded
11	Dolby display input	The input selected in the AUDIO SETUP > CONFIGURE INPUT (A thru D) > DOLBY SETUP > DISPLAY INPUT menu is the Dolby display input displayed; Dolby inputs are shown as one digital input
12	Program information	Shows how many programs are available for the current Dolby format, and to which program the metadata parameters apply

Video Metadata

The Video metadata display provides a description and location in text form of specific data embedded in the video signal. A Video Metadata display diagram is shown in **Figure 3-59** and described in **Table 3-50**. The diagram illustrates the general location for the various Video Metadata display fields.

Figure 3-59. Video Metadata Display Diagram

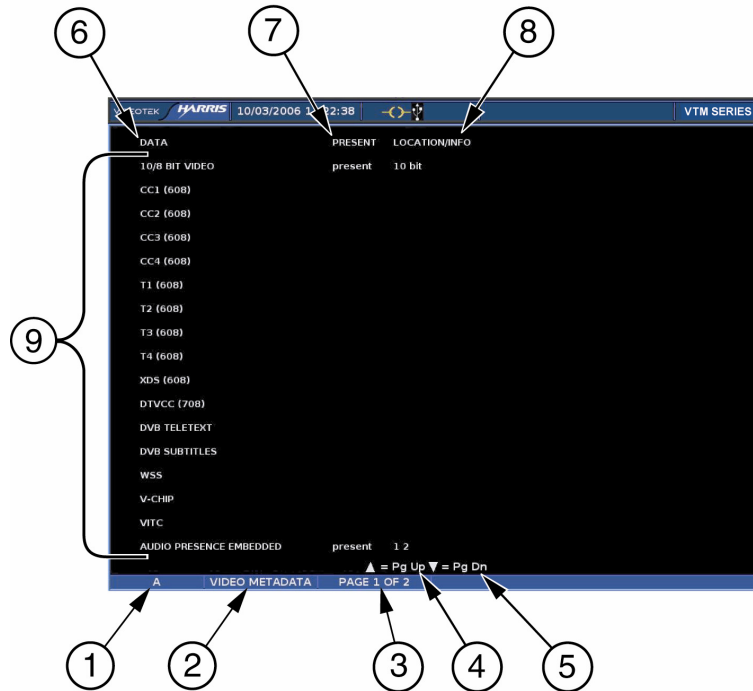


Table 3-50. Description of the Video Metadata Display Diagram

Field Identifier	Field Information	Nomenclature
1	Input	Displays user-configurable source IDs for input and routers
2	Display label	Displayed as Video Metadata
3	Page information	Shown as page X of Y where X is the page number and Y is the total number of pages.
4	Paging information	Displays ▲ = PAGE UP
5	Paging information	Displays ▼ = PAGE DOWN
6	Data column label	Indicates the DATA column
7	Present column label	Indicates the data detected
8	Location/info column label	Indicates the location information from the appropriate specification when it is detected
9	Metadata information	Displays the video metadata information

The display, shown in **Figure 3-59**, shows a chart that is split into three columns, which shows the information to be identified.

- The DATA COLUMN lists the Video metadata parameter.

- The PRESENT column has two states: No data detected (blank box) and Data Detected (indicated as present).
- The LOCATION/INFO column displays the location information from the appropriate specification when it is detected.

Table 3-51. Sample Video Metadata Pane List

Data	Present	Location/Information
10/8 BIT VIDEO	Present	10-bit *
CC-1 (608)	Present	LINE 21
CC-2 (608)		
CC-3 (608)	Present	LINE 21
CC-4 (608)		
T-1 (608)		
T-2 (608)		
T-3 (608)		
T-4 (608)		
XDS (608)		
DTVCC (708)		
DVB TELETEXT		
DVB SUBTITLES	Present	LINE 23
WSS		
V CHIP		
VITC		
AUDIO PRESENCE EMBEDDED		1, 2, 3, 4

* This field indicates 10 bits when the unit recognizes a 12 bit sampling structure.

The second page consists of Video Indexing information for Class 1 (title only), as shown in **Table 3-52**.

Table 3-52. Sample Video Index Pane

Data	Location/Information
VIDEO INDEX CLASS 1	
STANDARD/ASPECT RATIO	625/50 4x3
GAMUT	RGB
SAMPLING	4:0:0
PAN	PIXELS: -305.0000
TILT	LINES: -281.75
ZOOM	LINES: +563.5
WSS	
PAL PLUS	
ACTIVE FORMAT DESCRIPTION	

Table 3-53. Video Payload Identifier and Active Format Description (TVM-VTM-3GB only)


Data	Location/Information
VIDEO PAYLOAD IDENTIFIER	0X89c9001
LINK STATUS/BIT DEPTH	100% 10 bit
SAMPLING STRUCTURE	4:2:2 YCbCr
FRAME RATE	TS=Prog PS= Prog 50 Hz
DIGITAL INTERFACE STD	2.97Gb/s 1080i/p
ACTIVE FORMAT DESCRIPTION	0X50
AFD CODE	16:9 L
BAR DATA FLAG	
BAR DATA1	
BAR DATA2	
PAN AND SCAN DATA	

XDS

Extended Data Services (XDS) is a data service that provides current and future program information (such as the program name, type, and content advisory information). It also provides other related information (such as a national weather service message and time zone information).

Press the NAVIGATION buttons to scroll through the available pages. Only the information that is available in the video stream will appear next to the XDS field. If the information is not available in the data stream, the displayed information following the title is blank.

Deactivate the XDS pane by making another selection using the OPTION pop-up menu, or pressing a different function button in the selected pane. A sample XDS pane is shown in **Figure 3-60**.

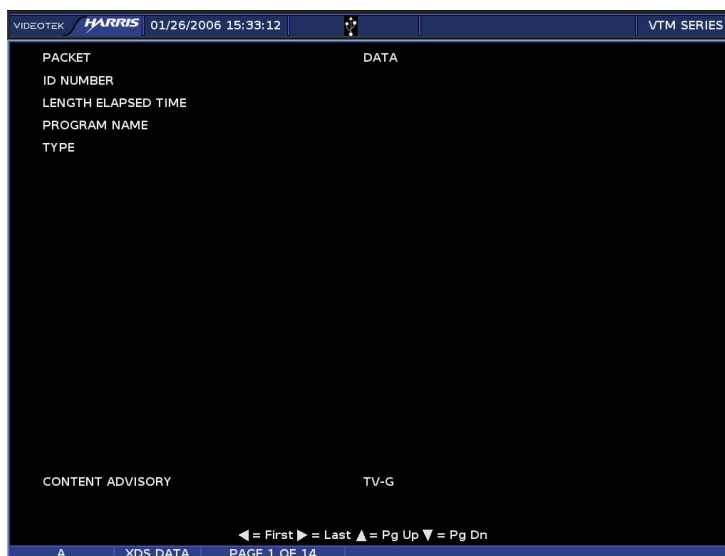Figure 3-60. XDS Pane

Teletext

NOTE: If the format selected is not a valid format for teletext, NOT VALID DISPLAY FOR INPUT FORMAT appears on the screen. PAL and 625 are the only formats that functions with teletext.

Teletext functionality is operational when enabled in the OPTION DISPLAY pane menu. When enabled, the VTM monitors for teletext.

The Teletext Detect alarm is activated when the presence of Teletext is not detected in the vertical blanking interval for some time in excess of the duration setting. The Teletext Not Updating alarm is also activated when the Teletext carrier is present and the data word is null for a period in excess of the duration setting. Press the DOWN arrow to go to the Index page (page 100). Press the LEFT ARROW button to go to the previous page, and press the RIGHT ARROW button to go to the next page.

Press the ENT button to open the Teletext Page Input screen. From this screen, select the page where the teletext can be viewed. Use the UP/DOWN Navigation buttons to change the number for the page. Press the LEFT/RIGHT button to move between numeric positions.

CRC

CRC evaluates SD and HD formats. CRC functionality is operational when enabled in the OPTION DISPLAY pane menu. When enabled and the OPTION button is pressed, the CRC display appears.

A CRC display diagram is shown in **Figure 3-61** and described in **Table 3-54**. The diagram illustrates the general location for the various CRC display fields.

Figure 3-61. CRC Display Diagram

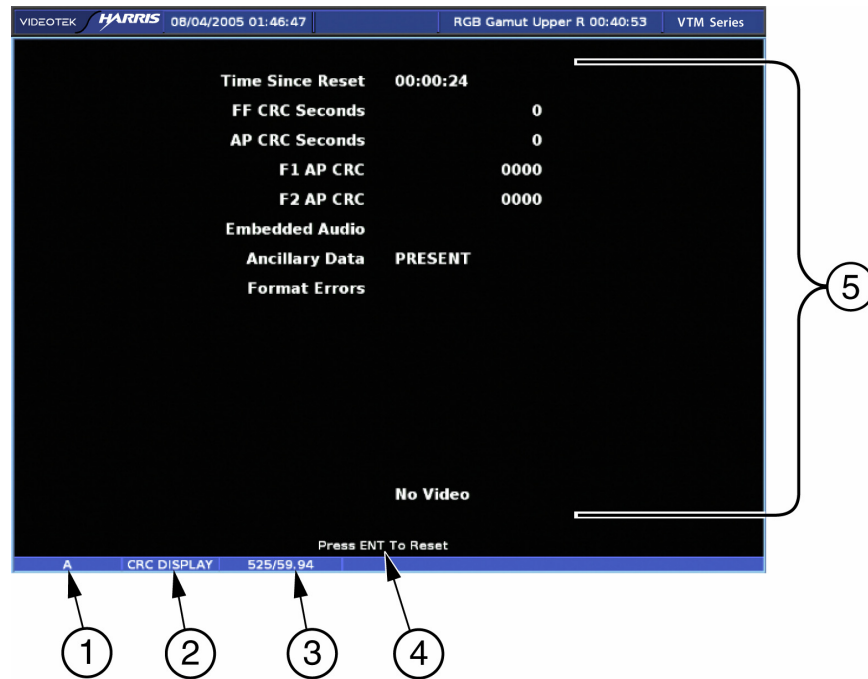


Table 3-54. Description of the CRC Display Diagram

Field Identifier	Field Information	Nomenclature
1	Input	Displays user-configurable source IDs for input and routers
2	Display label	Displayed as CRC DISPLAY
3	Standard	Displayed as the line rate/frame rate [1080i/59.94]; when no signal is present, No Signal appears
4	Reset information	Reset information; press ENT to reset is displayed
5	CRC timer, information and errors	Lists the CRC information

The following information is displayed when the CRC display is ON and an SD format is detected:

Display					Description
Time since Reset		00:00:00			Hr:min:sec, elapsed time since last reset
FF	CRC	Seconds		Value	Full field CRC error in seconds
AP	CRC	Seconds		Value	Active Picture CRC error in seconds
	F1	AP	CRC	Value	CRC value (Check Sum) for active picture, field one
	F2	AP	CRC	Value	CRC value (Check Sum) for active picture, field two
Embedded Audio				Value	Detects how many groups of audio are available
Ancillary Data				Present	Detects other ancillary information
Format Errors					Detects a format error

NOTE: When activated, the CRC display replaces the alarm display when an SD format is detected.

The following information is displayed when the CRC display is ON and an HD format is detected:

Display					Description
Time since Reset			00:00:00		Hr:min:sec, elapsed time since last reset
CRC	Error Free	Seconds	Value		Length of time in seconds CRC is error free
CHROMA					-
	Embedded Audio		Value		Detects how many groups of audio are available
	Ancillary Data		Present		Detects other ancillary Chroma information
LUMA					-
	Ancillary Data		Present		Detects ancillary Luma information
Format Errors			Y [*]	C [*]	Detects a format error

* Y=Luma and C=Chroma

The CRC Window Format Error types are displayed under FORMAT ERRORS when they are detected. The CRC format error types are:

- SAV PLACED INCORRECTLY (SAV)
- LINE LENGTH ERROR (Line Length)
- FIELD LENGTH ERROR (Field Length)
- RESERVED VALUES USED IMPROPERLY (Reserved Values)
- ANC DATA CHECKSUM ERROR (ANC Checksum)
- ANC DATA PARITY ERROR (ANC Parity)
- ANC DATA PLACEMENT ERROR (ANC Placement)
- ABSENCE OF SERIAL VIDEO INPUT (No Video)

Press and hold the ENT button on the front panel to reset the CRC elapsed time to zero and clear the EDH errors. The CRC error types are described in Section 5.

ASI (Option TVM-VTM-ASI only)

NOTE: To enable the ASI screen, refer to “Option Display” on page 98.

The ASI screen is used to analyze the transport stream that complies with the ATSC or DVB standard. It utilizes text and graphical formats and trending for up to 20 selectable programs simultaneously. It accepts two independent MPEG streams and analyzes the selected stream in real-time for compliance to measurement guidelines of ETSI TR-101-290 (ETR-290) first, second, and third priority standards. The priority standards are:

- ETR 290 1st Priority
- ETR 290 2nd Priority (DVB)
- ETR 290 2nd Priority (ATSC)
- ETR 290 3rd Priority (DVB)
- ETR 290 3rd Priority (ATSC)

Two formats that can be monitored in the MPEG stream are DVB and ATSC. Digital Video Broadcasting (DVB) is a specific project office of the European Broadcast Union. This group has produced a set of digital broadcasting standards. The Advanced Television Systems Committee (ATSC) is the parent organization that developed, tested, and described the form and function of the U.S. digital television formats. DVB ASI and SMPTE310 are automatically detected and not manually selected.

To select the ATSC or DVB format:

1. Press and hold the INPUT A, B, C, or D button. The T.S. FORMAT menu appears.
2. Select the ATSC or DVB format in the T.S. FORMAT menu.

The ASI screen, shown in **Figure 3-62**, displays the selected program information for the MPEG stream. The information is displayed based on the table selected. The other selection to show information is BW (bandwidth).

Figure 3-62. ASI Display Diagram (ATSC Standard Selected)

The screenshot shows a video monitor interface with a black background and blue text. At the top, it displays 'VIDEOTEK HARRIS', the date '06/05/2008 15:25:52', and 'PMT Error 15:24:50'. Below this, it says 'Program 3 / Total 2 programs'. On the left, a vertical menu lists various tables: INFO (highlighted in red), PAT, PMT, MGT, VCT, RRT, STT, EIT, EPG, and BW. The main display area shows 'PROGRAM 3' with the name 'NBC 10 News at 4' and 'Channel 10.1'. Below this, it indicates 'SOURCE: WCAU-DT'. A table lists the components of the program:

PID	TYPE	BANDWIDTH
0x0031	VIDEO	16,861,500 b/s
0x0034	AUDIO eng	399,000 b/s
TOTAL		17,260,500 b/s

At the bottom, navigation instructions are shown: '◀ PGM ▶ ▲ TABLE ▼ Hold ENT = Menu'. The status bar at the very bottom indicates 'C 270 Mb/s ASI ATSC'.

Navigate the screen using the left, right, up, and down navigation buttons. Press the LEFT and RIGHT navigation buttons to select the available video programs in the stream. Information related to the programs appears as soon as the program is selected.

Press the UP and DOWN navigation buttons or turn the CURVED ARROW knob to scroll through the available tables. The tables are determined by the ATSC or DVB formats. If a program is removed from the transport stream, the associated program indication turns red and “NO PROGRAM” appears.

ATSC Stream Formats

If ATSC is the format for the stream, the tables that appear are as follows:

- **INFO** (from the Program and System Information Protocol [PSIP])
- **PAT** (Program Association Table): The PAT tells the decoder how many programs are in a stream and points to the Program Map Tables (PMTs) that contain the information where the parts for any given program can be found.
- **PMT** (Program Map Table): The PMT points to the component video, audio, and data streams that make up the program. Parts in this context are the video stream (normally one), the audio streams, and the data streams.
- **MGT** (Master Guide Table): The MGT defines the type, packet identifiers, and PSIP tables in the transport stream. Only the System Time Table (STT) is not defined in the MGT tables. Press ENT and the UP and DOWN navigation buttons to scroll through the tables.
- **VCT** (Virtual Channel Table): The VCT tabulates virtual channel attributes for tuning.
- **RRT** (Region Rating Table): The RRT indicates the ratings for various countries
- **STT** (System Time Table): The SST indicates the time
- **EIT** (Event Information Table): lists the programs and information for the virtual channels. The information includes, name, start time, and duration. Press ENT and the UP and DOWN navigation buttons to scroll through the programs.

- **EPG** (Electronic Program Guide): The EPG indicates a list of the programs and the times the programs occur. Press ENT and the UP and DOWN navigation buttons to scroll through the programs.
- **BW** (Bandwidth): The BW screen displays the trend data, total bandwidth, and bandwidth per program.

DVB Stream Formats

If DVB is the format for the stream, the tables that appear are as follows:


- **INFO** (from the Service Information Table (SI))
- **PAT** (Program Association Table): The PAT tells the decoder how many programs are in a stream and points to the Program Map Tables (PMTs) that contain the information where the parts for any given program can be found.
- **PMT** (Program Map Table): The PMT points to the component video, audio, and data streams that make up the program. Parts in this context are the video stream (normally one), the audio streams, and the data streams.
- **EIT** (Event Information Table): lists the programs for the virtual channels. Press ENT and the UP and DOWN navigation buttons to scroll through the programs.
- **CAT** (Conditional Access Table): The Condition Access Table (CAT) is the pointer to the Entitlement Management Message (EMM) associated with the CA system(s) that it uses.
- **NIT** (Network Information Table): the NIT contains the information for the transmissions of a stream in a network. Each stream is individually identified with a network ID and a transport stream ID.
- **SDT** (Service Description Table): The SDT describes services found within a transport stream. Press ENT and the UP and DOWN navigation buttons to scroll through the services.
- **BW** (Bandwidth): The BW screen displays the trend data, total bandwidth, and bandwidth per program.

Bandwidth and Trending Screen

The Bandwidth screen, shown in **Figure 3-63**, indicates the trend data, total bandwidth, and the bandwidth per program. The top of the display is a bar graph. The far right of the bar graph indicates the total bandwidth. The bars to the left of the total bandwidth bar indicate the bandwidth per program.

Beneath the bar graph is a plotted chart (trending chart) that displays the bandwidth level in Mb/s over the selected time. The trending chart is displayed with the selectable bandwidth level on the left and the selectable time on the bottom of the chart. The trending chart can display the Total bandwidth over time, the selected program, or NULL bandwidth. Samples are plotted in 15, 30, 45, or 60-minute intervals.

Figure 3-63. ASI Bandwidth Display

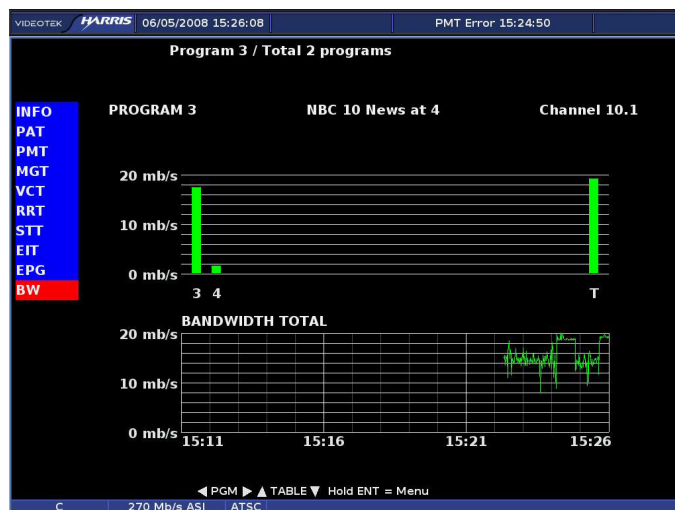

ASI Menu Selections

Pressing and holding the ENT button in the active ASI pane selects the ASI pane menu. The ASI Pane menu is described in **Table 3-55**.

Table 3-55. ASI Pane Menu

Selection	Selection Option
DATA FORMAT	HEX
	DECIMAL
UTC OFFSET	-12.00 TO +12.00 (0.00 is default) HOURS
TREND TIME	15 MINUTES
	30 MINUTES
	45 MINUTES
	60 MINUTES
TREND SCALE	10 Mb/s TO 150 Mb/s
TREND DISPLAY	TOTAL
	FOLLOW PGM SELECT
	NULL BANDWIDTH

Data Format

The Data Format menu is used to determine the numeric base for the Transport Stream information that is displayed: Hex or Decimal

UTC Offset

The Universal Time Coordinated (UTC) Offset is used to set the time zone of the unit. The UTC Offset parameters are in hour increments.

Trend Time

The X-axis of the trending chart contains the selected trending time. When new data is entered into the trending display, the time interval on the X-axis changes while the plot lines shift from right to left. The TRENDING TIME is set in 15-, 30-, 45-, or 60-minute increments:

Trend Scale

The Y-axis of the trending chart is used to indicate the scale that is plotted on the trending chart. Bandwidth data is plotted on a scale of 10 Mb/s to 150 Mb/s.

Trend Display

The Trend Display menu item is used to select the type of information that is shown in the trending display. The selections are the Total Bandwidth, the bandwidth of the selected program, and Null Bandwidth. The Null Bandwidth is the bandwidth that is used by the Null packet.

Embedded Audio Data


When enabled in the OPTION pop-up menu, the Embedded Audio display appears. Each channel is displayed on two pages. The first page is CHANNEL STATUS BIT and the second page is USER BIT. Audio Control Packet data provides the first block of information at the top of the pane. The information is embedded at line 9 or 571 (interlaced only) of the horizontal ancillary data for the Y channel.

At the top of the pane DID indicates the audio groups that are embedded as audio, and a “-” indicates the audio group is not present. Also, the channel number for the data displayed is shown.

The remaining Embedded Audio information provided in the Embedded Audio pane are:

- CHANNELS PRESENT indicates all of the active channels by showing the channel number. When the channel is not present, a “-” appears.
- SAMPLING RATE indicates the sampling frequency of the embedded audio.
- FORMAT indicates the professional or consumer audio format.
- AUDIO DATA indicates if the data received is audio (shown with YES) or not audio (shown with NO).
- EMPHASIS indicates No, NA, TC, and J17. No indicates no emphasis. NA indicates that there is no data available or defined. TC indicates the time constant of 50/15 uS. J17 indicates CCITT J.17 (800 HZ insertion loss of 6.5 dB).
- SIGNAL LOCK indicates a lock of the source sampling frequency.
- CHANNEL MODE indicates NA, two channel, 1 channel, primary/secondary, and Stereo. NA indicates that the data value is not available or reserved.
- RESOLUTION indicates 20- or 24-bit audio packets.

- The CHANNEL STATUS BIT/USER BIT shows all 192 bits of information by byte. Channel status bit/User Bit information analyzes the bits, decodes the information, and displays the selected data.

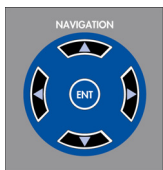

When the Embedded Audio data information appears on the display, use the UP and DOWN NAVIGATION buttons to scroll through the audio data. Press the RIGHT NAVIGATION button to select the next channel. Press the LEFT NAVIGATION button to select the previous channel.

Multi-Screen Display Selection



Press the MLT button in the display group to toggle between the MLT and Quad or Full Screen. MLT is high tally when selected. Press and hold the MLT button to access the MLT DISPLAY menu where one of the following can be selected:

- VTM CLASSIC: Enables the display to be setup like a classic VTM display, as described on page 112.
- DATA ANALYZER: Enables the Data Analyzer display, as described on 115. This menu item is not accessible without the TVM-VTM-AAP or VTM-40 option.
- TIMING CUSTOM: Enables the Custom Timing Display, as described on page 120.
- WFM/VEC ONLY: Enables the Waveform and Vector to only be displayed, as described on page 123.
- 3Gb/s WFM/VEC: Enables the 3Gb/s display to show the Waveform and Vector, as described on page 124. This display is not accessible without the TVM-VTM-3GB option.

VTM Classic

Pressing and holding the MLT button accesses the MLT DISPLAY menu. From the MLT DISPLAY menu, select VTM classic to have the VTM Series convert the screen to the classic VTM style display, as shown in **Figure 3-64**.

Figure 3-64. VTM Classic Display Diagram

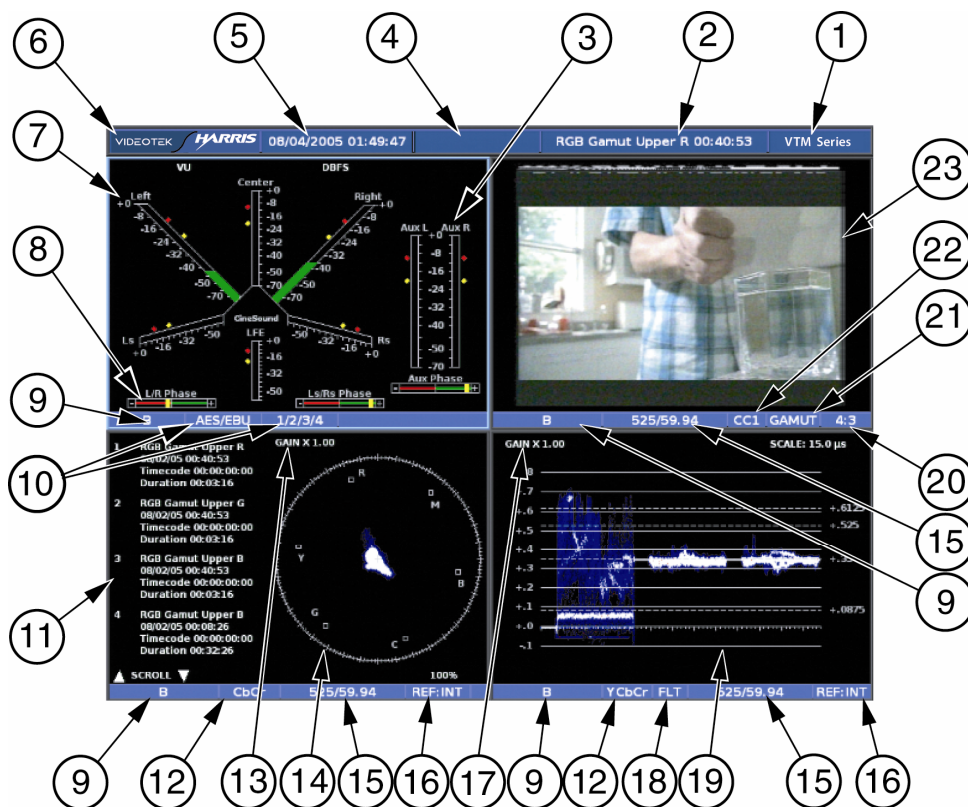


Table 3-56. Description of Simultaneous VTM Classic Display

Key	Description
1	Model identification
2	Latest Alarm indication with the date and time the alarm occurred; highlighted in yellow when active
3	Location of the Lissajous (X, Y) display of the audio input meter or the AUX location in the 5.1 and AUX/LFE in 6.1 CineSound display
4	Icon status indication
5	Date and time of internal clock
6	Company name
7	Location of the audio
8	Audio phase bar when audio graticule meters are displayed
9	Indicates the input selection
10	Indicates the format and input channels
11	Alarm display
12	Indicates the format selection
13	Vector Gain indication
14	Vector or Gamut display of selected inputs
15	Indicates the detected or selected video standard
16	Indicates the reference

Table 3-56. Description of Simultaneous VTM Classic Display

Key	Description
17	Waveform gain indication
18	Waveform filter indication
19	Waveform or Eye Pattern and Jitter display of selected input(s)
20	Indicates the selected aspect ratio of the picture
21	Picture Gamut indication
22	Indicates the Closed Caption selection
23	Displays the picture for the selected input

The VTM Classic panes are located in fixed pane locations. Panes cannot be moved while in this mode. Press the appropriate display button to highlight and change a function selection (i.e. from vector to gamut or waveform to eye pattern). The VTM classic display can only utilize a single input.

The panes are linked together for Line select and cursor movement. When line select is enabled, the WFM and VEC are in line select and the picture cursor show and follow the line selection.

The alarm log changes in VTM Classic mode. When an alarm is first registered, it appears at the top of the alarm display area in yellow. If the alarm is short term (i.e., two seconds or less), the alarm text reverts to the original graticule color after approximately two seconds. If the alarm continues longer than two seconds, the text remains yellow and the alarm duration is incremented. When the next alarm occurs, the previous alarm moves down one position.

The VTM Series has enough memory for 200 alarms per input. When 200 different alarm events have occurred, alarm number 200 is dropped and the most recent alarm is tagged as 1. Use the UP or DOWN NAVIGATION buttons to scroll through the alarm list. **Figure 3-65** shows a sample alarm in VTM Classic mode.

Figure 3-65. Sample Alarm Message

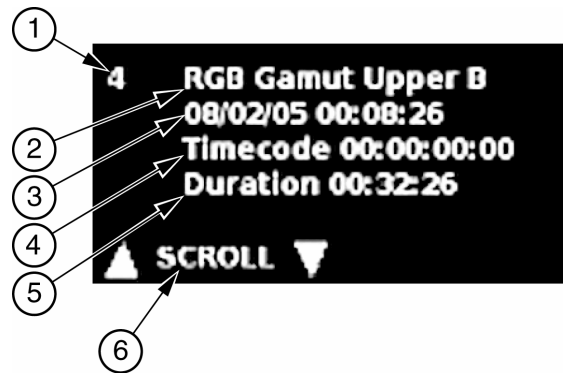


Table 3-57. Description of Sample Alarm Message

Key	Description
1	Index number, from 1-200
2	Alarm type, which describes the error
3	Date and time (the internal clock setting in month/day/year and hour:minute:second)
4	Time code, which is from the LTC/CLOCK, VITC, or D-VITC (shown in day:hour:minute:second:frame)
5	Duration, which is the length of time that the error occurred (shown in hour:minute:second)
6	Scroll UP and DOWN indication (use the UP and DOWN NAVIGATION buttons to scroll through the alarm list)

Data Analyzer Display (SD-SDI and HD-SDI Only) (TVM-VTM-AAP or VTM-40 Option)

NOTE 1: Data display only operates with Digital Inputs.

NOTE 2: When Data Analyzer is utilized, the unit is forced into Line Select mode.

Pressing and holding the MLT button accesses the MLT DISPLAY menu. From the MLT DISPLAY menu, select DATA ANALYZER to display the data word analyzer. The data display contains the data and the picture zoom box. A picture zoom box also appears in the picture display.

To navigate through the Data mode display, select the Data mode display pane. The cursor on the picture can be moved up and down with the CURVED ARROW knob. The LEFT/RIGHT knob moves the cursor left and right.

The data samples per page actually represent two unique pixels. Both of these pixels have exactly the same color information, formed from the combination of one C_B and one C_R sample. That color information is combined with the first Y sample (the “cosited” Y sample) for the first pixel of the group and combined with the second Y sample (Y' , or Y prime) for the second pixel.

The Pixel Cursor and the zoomed picture elements are displayed next to the data. The target area within the Pixel Cursor reflects the Pixel Group Display menu selection 2H, 8H, or 2H x 4V. When selecting Data Analyzer, the pixel cursor appears on the picture pane. The Pixel cursor shows the location of the data displayed in the Data zoom pane.

Look at the Picture Zoom display for the precise location of the Data display cursor. The Pixel Cursor is described in Pixel Cursor on page 116.

Referring to item 6 in **Figure 3-66**, the first pixel will be formed from the samples 1440 and 1441. The color information for this pixel comes from C_b and C_r , or samples 1440 and 1441. Sample 1441 is the unique Y sample.

A sample Data Mode display is shown in **Figure 3-66** and described in **Table 3-58**.

Figure 3-66. Data Mode Display (SD-SDI and HD-SDI Only)

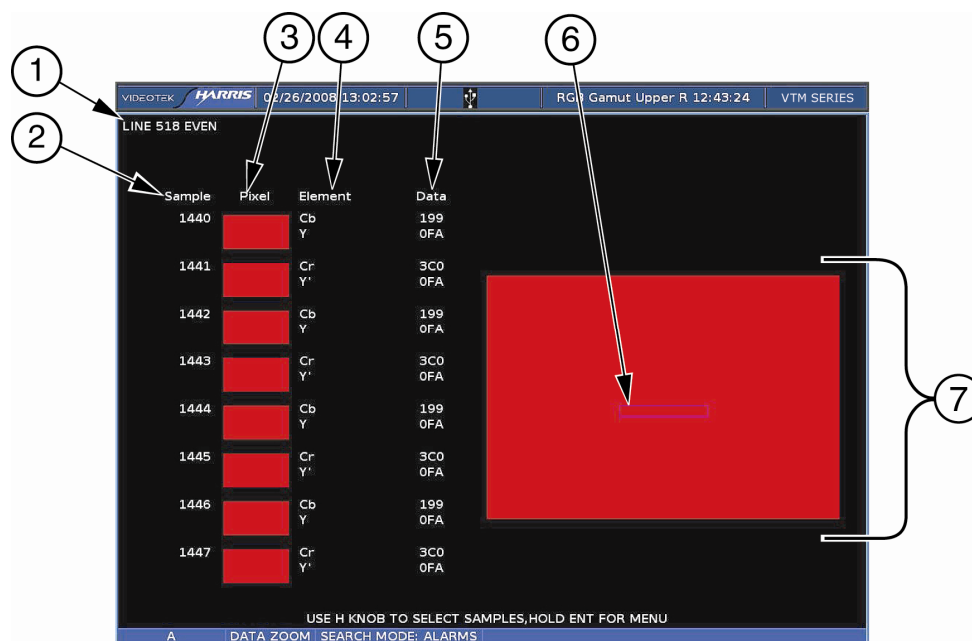


Table 3-58. Description of Data Mode Display (SD-SDI and HD SDI Only)

Key	Indicator	Description
1	LINE	Indicator that shows the line number of the picture along with the Even (E) and/or Odd (O) line selection; the line number corresponds to the cursor on the picture
2	SAMPLE	Indicates the selected pixel samples inside the pixel cursor.
3	PIXEL	Complete information for two Pixels
4	ELEMENTS	Elements that show the component samples for each pixel; there are two elements per pixel sample grouping: C_b , Y and C_r , Y'
5	DATA	Value of C_b , Y, C_r , and YI in Decimal, Hex, or Binary form
6	CURSOR	Cursor for the Data Zoom Display; represents the exact location of the cursor in the Picture Display (the cursor area indicates the pixels that are represented in the Pixel, Element, and Data columns)
7	PICTURE ZOOM	Zoomed portion of the picture display to show the precise pixel locations

Pixel Cursor

When selecting Data Analyzer, the pixel cursor appears on the picture display. The Pixel cursor in the picture display shows the general location of the data displayed in

the Data Zoom pane. Look at the Picture Zoom display for the precise location of the Data display cursor. Rotate the HORIZONTAL LEFT/RIGHT knob to move the pixel cursor horizontally (left and right). Also, when the LINE button is enabled (the LINE button is high tally), turn the CURVED ARROW knob to move the pixel cursor vertically (up and down), and to change the line. As the cursor is adjusted, the data in the data display changes.

The target area within the Pixel Cursor reflects the Pixel Group Display menu selection 2H, 8H, or 2H×4V.

Pressing the ENT button will access the next event determined by the DATA SEARCH or ALARM SEARCH criteria in the Data Analyzer Setup menu. Every press of the ENT button will move the cursor to the next Data Search or Alarm Search result.

NOTE: When scrolling the data pixel cursor, the cursor will stop or disappear when it reaches the limits of the active video. The picture zoom will continue to move within the vertical or horizontal blanking regions. The data area, located in the lower left of the display, will continue to scroll, and show all of the data on the line. The data will not agree with the cursor in the Picture Zoom Area when the picture zoom stops scrolling. When the extreme horizontal or vertical limits are reached, the pixel cursor will jump to the other side of the picture and continue to scroll into the active video region. The picture zoom cursor and the data display will show the same pixel information when the picture cursor is within the active video region.

Data Display Pop-up Menu

The DATA DISPLAY menu selections are used to set Data Analyzer functions. Press and hold the ENT button when the Data Display is shown and selected to access the Data menu. The Data Display submenu items are described in **Table 3-59**.

Table 3-59. Data Analyzer Setup Menu

Selection	Selection Option
TRIGGER ON ALARM	OFF*
	ON
DATA DISPLAY FORMAT	HEX (Default)
	DECIMAL
	BINARY
PIXEL GROUP DISPLAY	2H*
	8H (Default)
	2H x 4V*
NAVIGATION MODE	NORMAL
	DATA SEARCH*
	ALARM SEARCH*
DATA SEARCH	(See Data Search on page 119 for complete List)
CUSTOM DATA SEARCH	000 TO FFF (Hexadecimal values)

* SD-SDI and HD-SDI only

Trigger on Alarm

NOTE: an alarm will occur and activate the Trigger on Alarm feature only if the alarms are enabled via the Alarms menu.

Trigger on Alarm is used to freeze the waveform and vector, show where an alarm occurred, and highlight the information for the pixel that is creating the alarm. The highlighted pixel data is shown in the Data display. The waveform and vector then changes color, and the pixel cursor is placed over the first pixel creating the alarm.

The pixel data that created the alarm is highlighted in red in the Data Display. For multiple alarms, press the ENT button to move between the pixel information of each alarm.

Press the EXIT button to clear the capture and the highlighted pixel information. The highlighted information will reappear if the alarm is still active.

Data Display Format

The Data Display Format is used to determine the numeric base for the pixel information that is displayed: Decimal, Hex, or Binary.

Pixel Group Display

Pixel Group Display is used to determine the cursor size and the samples displayed. The Pixel Group Display selections are:

- **2H:** 2 pixel on the same line*
- **8H:** 8 pixel samples from the same line
- **2H×4V:** 2 horizontal pixels and 4 vertical pixels*

* SD-SDI and HD-SDI only

Navigation Mode

Navigation mode is used to choose between three search selections. The Navigation mode selections are NORMAL, DATA SEARCH, and ALARM SEARCH.

- **NORMAL:** Navigates the data display normally.
- **DATA SEARCH:** (SD-SDI and HD-SDI only) Enables data search mode. When enabled, the values correspond to the data ID selection made in the DATA SEARCH menu are highlighted. Press the ENT button to select the lines containing the selected data ID.
- **ALARMS SEARCH:** (SD-SDI and HD-SDI only) When selected, the pixel data that created the alarm is highlighted in yellow in the Data Display. For multiple alarms, press the ENT button to move between the pixel information of each alarm.

Some alarms that are triggered will have an “H” indication for High or Upper and an “L” indication for Low or Lower indication when the alarm search is performed. The alarms that show these indications are Luma Upper and Lower, RGB Upper and Lower, and Peak Upper and Lower.

To search for a specific alarm after the data capture has been performed, turn off all alarms except the alarm to be searched in the captured data display. Note that when

this happens, the disabled alarms will not be enabled in the live display. Therefore, no disabled alarm can be triggered and registered in the Alarm Log until the alarms are enabled again. Once all alarms, except the alarm(s) to be searched, are disabled, the Alarms Search feature will only search for the enabled alarm(s) in the captured data display.

Data Search (SD-SDI and HD-SDI only)

The Data Search menu is used to select the data ID of the ancillary data that will be highlighted when Data Search mode is enabled in the Navigation Mode menu. The Data Search selections are as follows:

200	Undefined format
180	Marked packets for deletion
260	Ancillary Time code
284	Data End Marker Packet
288	Data Start Marker Packet
1E3	299M, HDTV, control, Group 1
2E2	299M, HDTV, control, Group 2
2E1	299M, HDTV, control, Group 3
1E0	299M, HDTV, control, Group 4
2E7	299M, HDTV, audio, Group 1
1E6	299M, HDTV, audio, Group 2
1E5	299M, HDTV, audio, Group 3
2E4	299M, HDTV, audio, Group 4
2FF	AES audio data, Group 1
1FD	AES audio data, Group 2
1FB	AES audio data, Group 3
2F9	AES audio data, Group 4
1EF	AES control packet, Group 1
2EE	AES control packet, Group 2
2ED	AES control packet, Group 3
1EC	AES control packet, Group 4
1FE	AES extended packet, Group 1
2FC	AES extended packet, Group 2
2FA	AES extended packet, Group 3
FF8	AES extended packet, Group 4
2F0	METADATA packets

1F4	Error detection (EDH)
2F5	Time code
161/101	Closed Caption (EIA-708-B)
161/102	Closed caption (EIA-608 data)
162/101	Program Description DTV
162/102	Data Broadcast (DTV)
162/203	VBI Data
Custom	

Custom Data Search

The Custom Data search is used to select a specific Data ID of the ancillary data that may not be listed in the data search menu. The value is in hexadecimal form.

Data Analyzer Display (TVM-VTM-3GB Option)

NOTE 1: When Data Analyzer is utilized, the unit is forced into Line Select mode.

NOTE 2: Pixel cursor movements are previously described on page 116.

The display characteristics of the DATA ANALYZER will change if the detected incoming format is either:

- Level A - Direct image format mapping (SMPTE 425M-A) OR
- Level B - 2 x SMPTE 292M HD SDI mapping (SMPTE 425M-B) OR
- The unit is successfully configured for Dual-Link operation.
- If one of the conditions listed above is detected, the basic format of the pane will change and appear as shown in **Figure 3-67** for Level A and **Figure 3-68** for Level B. Dual-link display will appear as shown in **Figure 3-69**.

For Level A and B format, each data Stream contained within the input is represented as a column.

Figure 3-67. Data Analyzer Display with TVM-VTM-3GB (Level A)

Word	Stream 1	Stream 2
1920	3FF	3FF
1921	000	000
1922	000	000
1923	2D8	2D8
1924	228	228
1925	200	200
1926	1FC	1B0
1927	22B	1FF

USE H KNOB TO SELECT SAMPLES,HOLD ENT FOR MENU

A DATA ZOOM

Figure 3-68. Data Analyzer Display with TVM-VTM-3GB (Level B)

Word	Stream 1	Stream 2
3840	3FF	3FF
3841	3FF	3FF
3842	000	000
3843	000	000
3844	000	000
3845	000	000
3846	274	274
3847	274	274


USE H KNOB TO SELECT SAMPLES,HOLD ENT FOR MENU

A DATA ZOOM

Table 3-60. Data Analyzer Display with TVM-VTM-3GB (Level A and Level B)

Key	Indicator	Description
1	LINE	Indicator that shows the line number of the picture along with the Even (E) and/or Odd (O) line selection; the line number corresponds to the cursor on the picture
2	WORD	Indicates the data word associate with both the Stream 1 and Stream 2 data
3	STREAM 1	Data values for Stream 1 represented as Cb, Y, Cr, and Yl in Decimal, Hex, or Binary form
4	STREAM 2	Data values for Stream 2 represented as Cb, Y, Cr, and Yl in Decimal, Hex, or Binary form

For Level B or Dual-link operation, data is represented as two separate full bandwidth data links.

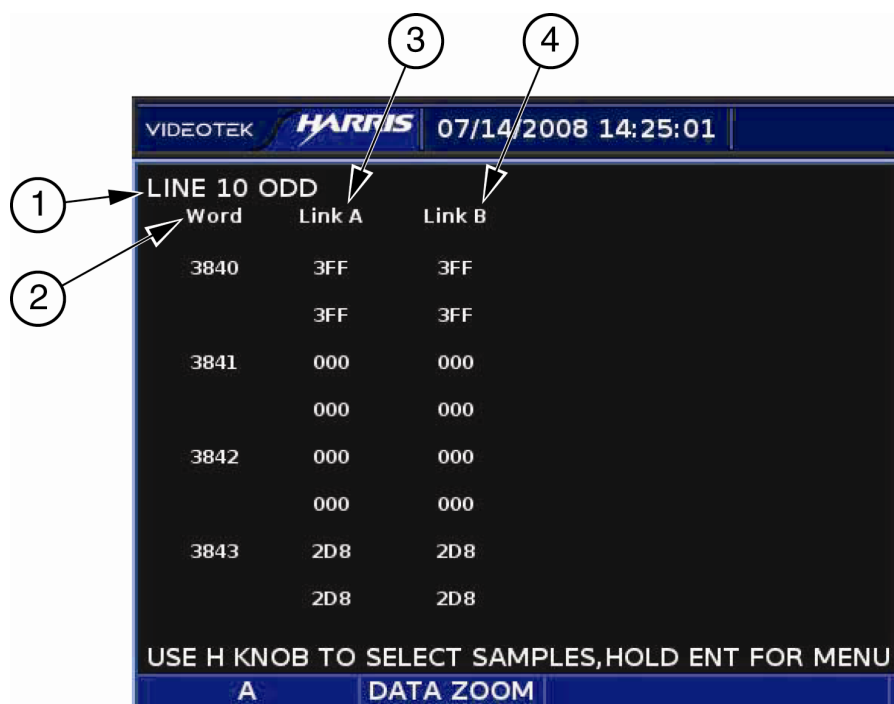Figure 3-69. Data Analyzer Display with TVM-VTM-3GB (Dual Link)**Table 3-61. Data Analyzer Display with TVM-VTM-3GB (Dual Link)**

Key	Indicator	Description
1	LINE	Indicator that shows the line number of the picture along with the Even (E) and/or Odd (O) line selection; the line number corresponds to the cursor on the picture
2	WORD	Indicates the data word associated with both the Link A and Link B data
3	LINK A	Data values for Link A represented as Cb, Y, Cr, and Yl in Decimal, Hex, or Binary form
4	LINK B	Data values for Link B represented as Cb, Y, Cr, and Yl in Decimal, Hex, or Binary form

Timing Custom Display


Relative timing of the inputs is compliant with SMPTE RP168.

Selecting the Timing Custom Display creates a fixed three-pane display with the Timing Display filling the top two horizontal panes. The Timing pane status information appears in the lower-left section of the pane.

The Vector or Gamut display is the lower-left pane. The waveform display is the lower-right display. These displays cannot be moved. Selecting the pane and then pressing and holding the WFM, VEC, GAMUT, or TIMING function buttons open the associated pane menu.

A sample illustration of the Timing Custom Display is shown in **Figure 3-70**.

Figure 3-70. Custom Timing Display

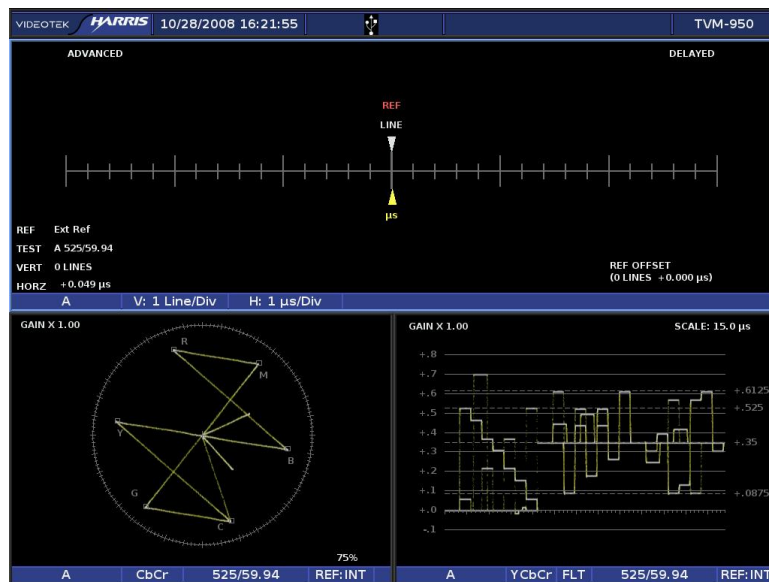

The upper-left DISPLAY button is high tally when the timing display is selected.

WFM/VEC Only Display (Dual-Screen Display)

Pressing and holding the MLT button accesses the MLT DISPLAY menu. From the MLT DISPLAY menu, select WFM/VEC ONLY to display the dual Waveform and Vector display. The Vector or Gamut display appears in the upper-left pane, and the waveform or eye pattern display appears in the upper-right pane. The lower two panes are off and not functional while using this display.

A sample illustration of the Waveform/Vector only display is shown in **Figure 3-71**.

Figure 3-71. WFM/VEC Only Display



3Gb/s WFM/VEC Mode (with TVM-VTM-3GB only)


NOTE: When in 3Gb/s mode, one input should have a 3Gb/s input in order to be functional.

The TVM-VTM-3GB has two active-looping triple-rate (2.97 Gb/s, 1.485 Gb/s, and 270 Mb/s) inputs and one-triple rate SDI monitor output. The signal from monitor output can be the video input of the selected pane or, from a menu selection, can be an internal test generator that displays color bars, pathological, or color bars with motion. The generator can insert embedded audio and Video Payload ID per SMPTE 352M-202 ancillary data. The test signal generator is free-running and can not be genlocked to any input or reference. The TVM-VTM-3GB supports dual-link HD-SDI 12-bit YCbCr and RGB video formats.

The 3 Gb/s WFM/VEC Mode Display

The default 3 Gb/s display shows the Waveform, Vector, Picture, and Audio display, as shown in **Figure 3-72**. A blank pane will appear if an audio option is not installed in the system. Any changes to the panes are remembered for future operation.

Figure 3-72. 3Gb/s WFM/VEC Mode Display

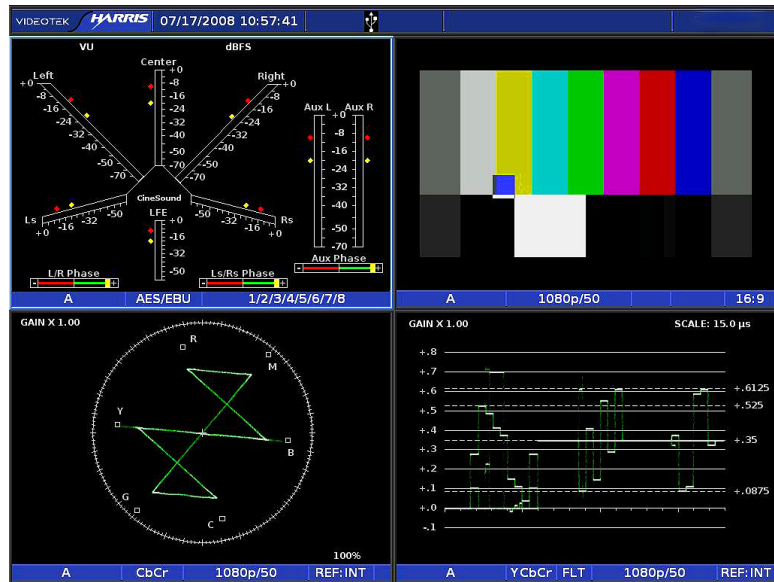

Using the TVM-VTM-3GB as a Monitor

The 3Gb/s WFM/VEC mode is the best method to monitor the 3Gb/s video formats and frame rates. Resources from other functions are needed to display 3Gb/s signals so there are restrictions to audio lissajous and the number of vector and waveform panes. When 3Gb/s mode is selected only one input can be displayed at a time. Once the 3Gb/s signal input is selected, the waveform, vector, picture, and audio will reflect the current input signal condition. The Waveform, Vector, Audio, and Picture display panes function the same as described in their appropriate sections.

The 3Gb/s mode produces the following changes in the VTM:

- The same video input is displayed in the four panes.
- Picture gamut highlighting is disabled in 3Gb/s WFM/VEC mode. Further, the picture will only show half of the video lines in 1080p/50/59.94/60 formats.
- There is no audio Lissajous in 3Gb/s WFM/VEC mode. Also, if two or four channels of audio are displayed, the VTM will automatically switch into an eight-channel configuration.
- Waveform and Vector displays show all lines for each frame. When not in 3Gb/s WFM/VEC mode, half of the lines are displayed.
- When performing a data capture, FREEZE + LIVE is not available.

Using the TVM-VTM-3GB as a Test Signal Generator

NOTE 1: The video output format is restricted to 10-bit YCbCr signals.

NOTE 2: The MONITOR OUT/GENERATOR A-B menu only appears in the Setup menu if the TVM-VTM-3GB board appears in slot 1.

NOTE 3: The MONITOR OUT/GENERATOR C-D menu only appears in the Setup menu if the TVM-VTM-3GB board appears in slot 2.

The TVM-VTM-3GB can be used as a signal generator. Using the MONITOR OUT/GENERATOR A-B or MONITOR OUT/GENERATOR C-D setup menu, set the 3GB option to output a Monitor, Pathological, Colorbar, or Colorbar with Motion display using one of the video formats listed below. The VTM-OPT-3GB can also be used to output a -18 dBFS or -20 dBFS tone to a maximum of four different audio groups.

The available video output signals are:

- 1080i/59.94
- 1080i/50
- 1080p/59.94
- 1080p/50
- 720p/59.94
- 720p/50
- 625/50
- 525/59.94

For more information on the MONITOR OUT/GENERATOR A-B or C-D setup menus, see page 170.

Presets



Presets are used to store menu configurations and display settings. A total of 15 presets can be stored in the VTM Series. Press PRESET button 1 to 8 to select a preset from the associated bank of presets. Preset bank A contains presets 1 to 8. Preset bank B contains presets 9 to 16. Press the STAR button to toggle between preset banks A and B.



The STAR button is low tally when using the first bank of presets containing Presets 1 to 8, and high tally when using the second bank of presets containing Preset 9 to 16. Press and hold the * button to access the preset menu. The Preset menu is described in **Table 3-62**. Preset *8 is locked as the factory default, and cannot be changed. For more information on Preset *8, see page 127.

Storing Presets

NOTE: Freeze Mode configurations cannot be stored in a preset. Also, any data that is frozen in freeze mode cannot be stored in a preset. For more information on Freeze Mode, see Freeze and Freeze + Live Mode on page 129.

To store a preset in bank A, press and hold the desired preset number button (1 to 8) for three seconds. The number button is high tally upon release after holding the button for three seconds. Also, a beep will sound if the Aural alert is enabled in the SYSTEM SETUP menu.

To store a preset in bank B, first press the STAR till the STAR button is high tally. Once the STAR button is high tally, press and hold the desired preset number button (1 to 7) for three seconds. The number button is high tally upon release.

Recalling Presets

NOTE: Information must be stored in a preset location before being recalled.

Press any number from 1 to 8 to directly select the stored preset in bank A. Press STAR and any number from 1 to 7 to directly select the stored preset in bank B. Press preset *8 to select the factory default settings. Preset STAR 8 is never empty and will recall the factory default settings.

If a preset does not exist for the selected number when selected, nothing happens.

Preset *8 (Factory Preset)

Press Preset 8 in bank B (when the * is high tally) to access the factory-preset mode. This preset contains the factory default settings.

Preset Setup Menu

Press and hold the * button to access the preset menu. The Preset Setup menu is described in **Table 3-62**.

Table 3-62. Preset Setup Menu

Selection	Selection Option	Selection Option
NAME PRESET	1 TO 8	RENAME SCREEN
NAME * PRESET	*1 TO *7	RENAME SCREEN
CLEAR PRESET	1 TO 8	PRESS ENT
	ALL	PRESS ENT
CLEAR * PRESET	*1 TO *7	PRESS ENT
	ALL	PRESS ENT
SETUP	PRESS ENT	-

Name Preset

The NAME PRESET menu is used to name bank A preset locations using the Rename screen. On the Rename screen use the RIGHT and LEFT NAVIGATION buttons to move between character locations, and use the UP and DOWN NAVIGATION buttons to select a character in the highlighted character location. When complete, press the RIGHT or LEFT NAVIGATION buttons until ACCEPT or CANCEL is highlighted. ACCEPT saves the data. CANCEL will not save the data. This is useful for when a preset is saved to a USB device.

Name * Preset

The NAME * PRESET menu is used to name bank B preset location using the Rename screen. On the Rename screen use the RIGHT and LEFT NAVIGATION buttons to move between character locations, and use the UP and DOWN NAVIGATION buttons to select a character in the highlighted character location. When complete, press the RIGHT or LEFT NAVIGATION buttons until ACCEPT or CANCEL is highlighted.

ACCEPT saves the data. CANCEL will not save the data. This is useful for when a preset is saved to a USB device.

Clear Preset

The Clear Preset menu is used to clear the preset and the preset name in bank A. Press ENT to clear both the preset and CUSTOM name from the memory. Preset *8 cannot be configured with this menu item.

Clear * Preset

The Clear * Preset menu is used to clear the preset and the preset name in bank B. Press ENT to clear both the preset and CUSTOM name from the memory. Preset *8 cannot be configured with this menu item.

Setup

Press the ENT button to access the global setup menu. For more information on the global Setup menu, see Section 4.

Capturing a Display



The VTM Series is capable of holding frame-captured displays in internal memory. The DISP button is high tally when a capture is performed or recalled. If no frame had been captured in the pane, press the DISP button to capture the screen. The DISP button is high tally when a frame is captured. Only one captured frame can be cached in the unit at a time. The frame will remain cached until the frame is cleared. Once the frame is frozen and the DISP button is high tally, press the DISP button to toggle between the captured frame and the live frame.

Clear Captured Frame

While a live screen is shown, press and hold the DISP button to access the DISP menu. The DISP menu contains the CLEAR XGA CAPTURE menu. Select CLEAR XGA CAPTURE and press the ENT button to clear the frozen frame in the pane. Once the frozen frame is cleared from the pane, a new frame capture can be performed.

Capturing Display Information



The VTM Series is capable of holding frame-captured information. If no data has been captured, press the SDI button to capture the data in that pane. The SDI button is high tally when information is captured. Only one capture can be cached in the unit at a time. The data will remain cached until the data is cleared. Once the data is frozen and the SDI button is high tally, press the SDI button to toggle between displaying the captured data and the live data.

When selecting a different pane, the SDI button will change according to the current configuration of that pane (i.e. if the captured data in the cache is displayed or not displayed). When returning to a pane that already contains and displays the cached captured data, the SDI button reaches a high-tally state.

When MULTI mode DATA ANALYZER display is selected, the SDI button selection affects all the panes on the display.

Press and hold the SDI button to access the SDI menu. The SDI menu consists of the Clear Capture and Freeze mode menu items.

SDI is deselected if the SDI button is pressed, the input changes, or a format changes for the selected input signal. A FORMAT MISMATCH error occurs when the currently selected format for the pane is different than the format of the frozen data in the cache. SDI capture cannot be performed when an audio pane is the active pane.

Clear Captured Data

Press and hold the SDI button to access the SDI menu. The SDI menu contains the CLEAR SDI CAPTURE menu. Select CLEAR SDI CAPTURE and press the ENT button to clear the frozen information in the pane. Once the frozen data is cleared from the pane, a new data capture can be performed.

Freeze and Freeze + Live Mode (SD-SDI and HD-SDI only)

Freeze mode contains two selections: FREEZE and FREEZE + LIVE. Selecting Freeze mode will separate the frozen display from the live display. When SDI is high tally, data that was captured in the cache is displayed. When the SDI button is low tally, the Live data is displayed.

FREEZE + LIVE is selected to show live display overlaying the captured display.

This page is intentionally blank.

Section 4 ♦ Global Setup Menu Functions

Navigating the Setup Menu

Press the SETUP button to access the global setup menu. Use the SETUP POSITION knobs or the NAVIGATION buttons to navigate the Global Setup menu. The SETUP POSITION knobs and Navigation buttons are described below:



- Press to enter the Setup menu.
- Press to exit from the Setup menu.



Press to exit the Rename or Matrix screen, or the Setup menu.



- Press to move up in the menu or Matrix screen.
- Press to select a character in the Rename screen.



 
- Press to move left in the menu or Matrix screen.
- Press to select the previous character in the Rename screen.



Press to move right in the Menu, Matrix, or Rename screen.




- Press to move down in the menu, or Matrix screen.
- Press to scroll down the list of characters in the Rename screen.
- Rotate the knob to move the menu cursor up and down or to change a value or condition in a menu.



- Press the knob to exit the displayed Rename or Matrix screen or the entire Setup menu.

- Rotate to change a character in the Renaming screen, or move to the corresponding box up or down in the Matrix screen.

 - Press the knob to select a menu item.



- Rotate the knob to move forwards or backwards in the menu.

- Press to select a character or matrix box in the Rename or Matrix screens.

- Rotate to select the previous or next box in the Matrix or Rename screens.



- Rotate the knob to move the menu cursor up and down.

- Rotate the knob to select a character in the Rename screen or move up and down in the Matrix screen.



- Press to select a menu item or a Matrix box.
- Press to move to the next character box in the Rename screen.

Setup Menu and Alarm Tables

The following tables make up the global setup menu. “(Default)” is shown next to each of the default menu selections. The Setup menu items are listed in **Table 4-1** with their corresponding Table and Description Pages:

Table 4-1. Setup Menu Tables

Setup Menu Item	Table Page	Description Page
Video Format Menu	133	161
Waveform Setup Menu	137	163
Eye Pattern Setup Menu	137	164
Vector Setup Menu	138	165
Gamut Setup Menu	138	166
Picture Setup Menu	139	166
Audio Setup Menu*	-	-
Audio Alarms Menu*	-	-
Video Alarms, Digital Menu	141	184**
Video Alarms, Analog Menu	146	189**
Time Code Alarms Menu	151	192**
TS (Transport Stream) Alarms Menu	152	193**
Monitor Out/Generator A-B	156	170
Monitor Out/Generator C-D	156	170
Display Setup Menu	156	171
Communications Menu	158	172
System Menu	160	176
About Menu	161	182

* For information on Audio, see the *A³-OPT 2*, *A³-OPT 3*, *A³-OPT 5*, *A³-4004*, and *A³-OPT 3/5-TL Installation and Operation Handbook*.

** The alarm information is provided in “Alarm Descriptions.”

Table 4-2. Video Format Menu

Selection	Selection Option	Selection Option
VIDEO A FORMAT	AUTODETECT (Default)	-
	1080i/60	-
	1080i/59.94	-
	1080i/50	-
	1080p/60 (TVM-VTM-3GB only)	-
	1080p/59.94 (TVM-VTM-3GB only)	-
	1080p/50 (TVM-VTM-3GB only)	-
	1080p/30	-
	1080p/29.97	-
	1080p/25	-
	1080p/24	-
	1080p/23.98	-
	1080p/30sF	-
	1080p/29.97sF	-
	1080p/25sF	-
	1080p/24sF	-
	1080p/23.98sF	-
	720p/60	-
	720p/59.94	-
	720p/50	-
	720p/30	-
	720p/29.97	-
	720p/24	-
	720p/23.98	-
	625/50	-
	525/59.94	-
VIDEO A STRUCTURE	AUTO/10 bit YCbCr (default) 4:2:2	-
	10 BIT YCbCr 4:4:4	-
	10 BIT RGB 4:4:4	-
	12 BIT YCbCr 4:4:4	-
	12 BIT RGB 4:4:4	-
	12 BIT YCbCr 4:2:2	-

Table 4-2. Video Format Menu

Selection	Selection Option	Selection Option
VIDEO B FORMAT	AUTODETECT (Default)	-
	1080i/60	-
	1080i/59.94	-
	1080i/50	-
	1080p/60 (TVM-VTM-3GB only)	-
	1080p/59.94 (TVM-VTM-3GB only)	-
	1080p/50 (TVM-VTM-3GB only)	-
	1080p/30	-
	1080p/29.97	-
	1080p/25	-
	1080p/24	-
	1080p/23.98	-
	1080p/30sF	-
	1080p/29.97sF	-
	1080p/25sF	-
	1080p/24sF	-
	1080p/23.98sF	-
	720p/60	-
	720p/59.94	-
	720p/50	-
	720p/30	-
	720p/29.97	-
	720p/24	-
	720p/23.98	-
	625/50	-
	525/59.94	-
VIDEO B STRUCTURE	AUTO/10 bit YCbCr (Default) 4:2:2	-
	10 BIT YCbCr 4:4:4	-
	10 BIT RGB 4:4:4	-
	12 BIT YCbCr 4:4:4	-
	12 BIT RGB 4:4:4	-
	12 BIT YCbCr 4:2:2	-
ENABLE DUAL LINK A-B	OFF	-
	ON	-

Table 4-2. Video Format Menu

Selection	Selection Option	Selection Option
VIDEO C FORMAT	AUTODETECT (Default)	-
	1080i/60	-
	1080i/59.94	-
	1080i/50	-
	1080p/60 (TVM-VTM-3GB only)	-
	1080p/59.94 (TVM-VTM-3GB only)	-
	1080p/50 (TVM-VTM-3GB only)	-
	1080p/30	-
	1080p/29.97	-
	1080p/25	-
	1080p/24	-
	1080p/23.98	-
	1080p/30sF	-
	1080p/29.97sF	-
	1080p/25sF	-
	1080p/24sF	-
	1080p/23.98sF	-
	720p/60	-
	720p/59.94	-
	720p/50	-
	720p/30	-
	720p/29.97	-
	720p/24	-
	720p/23.98	-
	625/50	-
	525/59.94	-
	NTSC (Only available with inputs C and D with the TVM-VTM-ACV-2 option)	-
	PAL (Only available with inputs C and D with the TVM-VTM-ACV-2 option)	-
VIDEO C STRUCTURE	AUTO/10 bit YCbCr (Default) 4:2:2	-
	10 BIT YCbCr 4:4:4	-
	10 BIT RGB 4:4:4	-
	12 BIT YCbCr 4:4:4	-
	12 BIT RGB 4:4:4	-
	12 BIT YCbCr 4:2:2	-

Table 4-2. Video Format Menu

Selection	Selection Option	Selection Option
VIDEO D FORMAT	AUTODETECT (Default)	-
	1080i/60	-
	1080i/59.94	-
	1080i/50	-
	1080p/60 (TVM-VTM-3GB only)	-
	1080p/59.94 (TVM-VTM-3GB only)	-
	1080p/50 (TVM-VTM-3GB only)	-
	1080p/30	-
	1080p/29.97	-
	1080p/25	-
	1080p/24	-
	1080p/23.98	-
	1080p/30sF	-
	1080p/29.97sF	-
	1080p/25sF	-
	1080p/24sF	-
	1080p/23.98sF	-
	720p/60	-
	720p/59.94	-
	720p/50	-
	720p/30	-
	720p/29.97	-
	720p/24	-
	720p/23.98	-
	625/50	-
	525/59.94	-
	NTSC (Only available with inputs C and D with the TVM-VTM-ACV-2 option)	-
	PAL Only available with inputs C and D with the TVM-VTM-ACV-2 option)	-
VIDEO D STRUCTURE	AUTO/10 bit YCbCr (Default) 4:2:2	-
	10 BIT YCbCr 4:4:4	-
	10 BIT RGB 4:4:4	-
	12 BIT YCbCr 4:4:4	-
	12 BIT RGB 4:4:4	-
	12 BIT YCbCr 4:2:2	-

Table 4-2. Video Format Menu

Selection	Selection Option	Selection Option
ENABLE DUAL LINK C-D	OFF	-
	ON	-
SOURCE ID	INPUT A	Rename Screen (Rename and select ACCEPT or CANCEL)
	INPUT B	Rename Screen (Rename and select ACCEPT or CANCEL)
	OPTION C	Rename Screen (Rename and select ACCEPT or CANCEL)
	OPTION D	Rename Screen (Rename and select ACCEPT or CANCEL)

Table 4-3. Waveform Setup Menu

Selection	Selection Option
DIGITAL WAVEFORM GRATICULE	PERCENT
	VOLTS (Default)
NTSC PEDESTAL	OFF
	ON (7.5 IRE)
PAL WAVEFORM SCALE	UNITS
	VOLTS (Default)
DC RESTORE (Only available with TVM-VTM-ACV-2 option)	OFF
	SLOW (Default)
	FAST
WAVEFORM INTENSITY	25% to 200% (NORMAL is 100%)
WAVEFORM CONTRAST	25% to 200% (NORMAL is 100%)
PERSISTENCE	NORMAL, 1 TO 6 & INFINITE (NORMAL is default)
ATTACK	9 to 15 (NORMAL is 9), and MAX (16) (LOW is default)
ERROR HIGHLIGHTING	OFF
	ON

Table 4-4. Eye Pattern Setup Menu

Selection	Selection Option
JITTER DISPLAY TYPE	0 TO 1.0 UI (Default)
	0 TO 0.2 UI
	0 TO 3700 ps
	0 TO 740 ps
EYE INTENSITY	25% to 200% (NORMAL is 100%)
EYE CONTRAST	25% to 200% (NORMAL is 100%)
PERSISTENCE	NORMAL, 1 to 6, & INFINITE (NORMAL is default)

Table 4-4. Eye Pattern Setup Menu

Selection	Selection Option
ATTACK	LOW (1), 2 to 15 (NORMAL is 9), and MAX (16) (LOW is default)

Table 4-5. Vector Setup Menu

Selection	Selection Option
PAL OVERLAY	NORMAL (Default)
	OVERLAY
SD I/Q LINES	OFF (Default)
	ON
VECTOR INTENSITY	25% TO 200% (NORMAL is 100%)
VECTOR CONTRAST	25% TO 200% (NORMAL is 100%)
PERSISTENCE	NORMAL, 1 TO 6, & INFINITE (NORMAL is default)
ATTACK	LOW (1), 2 to 15 (NORMAL is 9), and MAX (16) (LOW is default)

Table 4-6. Gamut Setup Menu

Selection	Selection Option
GAMUT INTENSITY	25% TO 200% (NORMAL is 100%)
GAMUT CONTRAST	25% TO 200% (NORMAL is 100%)
PERSISTENCE	NORMAL, 1 TO 6, & INFINITE (NORMAL is default)
COLOR PLOT	SINGLE COLOR
	RGB (Default)
DATA ERROR PERSISTENCE	NORMAL, 1 TO 6, & INFINITE (NORMAL is default)

Table 4-7. Picture Setup Menu

Selection	Selection Option	Selection Option
THUMBNAIL	UPPER LEFT PANE	UPPER LEFT
		UPPER RIGHT
		LOWER LEFT
		LOWER RIGHT
		OFF (Default)
	UPPER RIGHT PANE	UPPER LEFT
		UPPER RIGHT
		LOWER LEFT
		LOWER RIGHT
		OFF (Default)
	LOWER LEFT PANE	UPPER LEFT
		UPPER RIGHT
		LOWER LEFT
		LOWER RIGHT
		OFF (Default)
	LOWER RIGHT PANE	UPPER LEFT
		UPPER RIGHT
		LOWER LEFT
		LOWER RIGHT
		OFF (Default)
MARKERS	CENTER	OFF (Default)
		ON
	SAFE TITLE	OFF (Default)
		CORNERS
		BOX
	SAFE ACTION	OFF (Default)
		CORNERS
		BOX
	CLEAN APERTURE	OFF (Default)
		CORNERS
		BOX
CLOSED CAPTION DISPLAY	OFF (Default)	-
	CC1	-
	CC2	-
	CC3	-
	CC4	-

Table 4-7. Picture Setup Menu

Selection	Selection Option	Selection Option
	T1	-
	T2	-
	T3	-
	T4	-
	708	-
	TT	-
	EIA 708 SERVICE	SERVICE 1 to 7
	XDS	OFF (Default)
		ON
		LINE 6 – see Table 4-19 on page 168
	SIZE	SMALL (Default)
		LARGE
	TELETEXT PAGE	000 TO 9FF (100 is default)
ANAMORPHIC	OFF	-
	ON	-
TIME CODE	ENABLE	-
	LTC/DVITC	-
TIME CODE (cont'd)	POSITION	TOP
		MIDDLE (Default if ON is selected)
		BOTTOM
BRIGHTNESS	25% TO 200% (NORMAL is 100%)	-
CONTRAST	25% TO 200% (NORMAL is 100%)	-
COLOR	ON (Color) (Default)	-
	OFF (Mono)	-
BLUE GUN	OFF (Default)	-
	ON	-
RED GUN	OFF (Default)	-
	ON	-
GREEN GUN	OFF (Default)	-
	ON	-
VBI MASK	OFF	-
	ON	-

Table 4-8. Video Alarms, Digital Menu

Selection	Selection Option	Selection Option	Selection Option
ALARM REPORTING SETUP	MATRIX SCREEN	-	-
FORMAT CHANGE	OFF (Default)	-	-
	ON	-	-
PAYLOAD IDENTIFIER MISMATCH (TVM-VTM-3GB only)	OFF (Default)	-	-
	ON	-	-
LOSS OF CARRIER	ENABLE	OFF (Default)	-
		ON	-
	DURATION	0 TO 60 Seconds (2 Seconds is default)	-
LOSS OF REFERENCE	ENABLE	OFF (Default)	-
		ON	-
	DURATION	0 TO 60 Seconds (2 Seconds is default)	-
LOSS OF ACTIVE VIDEO – DIG	ENABLE	OFF (Default)	-
		ON	-
	THRESHOLD	0 TO 350 mV (300 mV is default)	-
LOSS OF ACTIVE VIDEO – DIG (cont'd)	SENSITIVITY	2 TO 20 CES (2 CES is default)	-
	DURATION	0 TO 60 0 TO 60 Seconds (2 Seconds is default)	-
LOSS OF PAYLOAD IDENTIFIER (OPT 3GB only)	ENABLE	OFF	-
		ON	-
	DURATION	0 TO 60 Seconds (2 Seconds is default)	-
DIGITAL GAMUT	RGB GAMUT UPPER	ENABLE	OFF (Default)
			ON
		THRESHOLD	650 TO 750 mV (710 mV is default)
		SENSITIVITY	1 TO 20 CES (15 CES is default)
	RGB GAMUT LOWER	DURATION	0 TO 60 Seconds (2 Seconds is default)
		ENABLE	OFF (Default)
			ON
		THRESHOLD	-50 TO 50 mV (-10 mV is default)
		SENSITIVITY	1 TO 20 CES (15 CES is default)

Table 4-8. Video Alarms, Digital Menu

Selection	Selection Option	Selection Option	Selection Option
	LUM GAMUT UPPER	DURATION	0 TO 60 SECONDS (2 Seconds is default)
		ENABLE	OFF (Default)
			ON
		THRESHOLD 525	NTSC IRE: 90 TO 108 IRE (105 is default)
		THRESHOLD 625	- PAL UNITS: 92 TO 109 UNITS (107 UNITS is default) - PAL mV: 643 TO 762 mV (750 mV is default)
		SENSITIVITY	1 TO 20 CES (15 CES is default)
		DURATION	0 TO 60 SECONDS (2 Seconds is default)
	LUM GAMUT LOWER	ENABLE	OFF (Default)
			ON
		THRESHOLD 525	NTSC IRE: 1.5 TO 20 IRE (1.5 is default)
		THRESHOLD 625	- PAL UNITS: -7 TO 20 UNITS (-4 UNITS is default) - PAL mV: -46 TO 143 mV (-35 mV is default)
		SENSITIVITY	1 TO 20 CES (15 CES is default)
		DURATION	0 TO 60 SECONDS (2 Seconds is default)
	PEAK GAMUT UPPER	ENABLE	OFF (Default)
			ON
		THRESHOLD 525	NTSC IRE: 50 TO 140 IRE (120 is default)
		THRESHOLD 625	- PAL UNITS: 51 TO 143 UNITS (123 UNITS is default) - PAL mV: 357 TO 1000 mV (857 mV is default)
		SENSITIVITY	1 TO 20 CES (2 CES is default)

Table 4-8. Video Alarms, Digital Menu

Selection	Selection Option	Selection Option	Selection Option
	PEAK GAMUT LOWER	DURATION	0 TO 60 SECONDS (2 Seconds is default)
		ENABLE	OFF (Default)
			ON
		THRESHOLD 525	▪ NTSC IRE: -40 TO 0 IRE (-20 is default)
		THRESHOLD 625	▪ PAL UNITS: -40 TO 0 UNITS (-20 UNITS is default) ▪ PAL mV: -285 TO 0 mV (-142 mV is default)
		SENSITIVITY	1 TO 20 CES (2 CES is default)
CAPTIONING	CC NOT DETECTED - 608	ENABLE	OFF (Default)
			ON
		DURATION	10 TO 600 SECONDS (240 SEC is default)
	CC NOT UPDATING – 608	ENABLE	OFF (Default)
			ON
		DURATION	10 TO 600 SECONDS (240 SEC is default)
	CC NOT DETECTED – 708	ENABLE	OFF (Default)
			ON
		DURATION	10 TO 600 SECONDS (240 SEC is default)
	CC NOT UPDATING – 708	ENABLE	OFF (Default)
			ON
		DURATION	10 TO 600 SECONDS (240 SEC is default)
	TT NOT DETECTED – SD	ENABLE	OFF (Default)
			ON
		DURATION	10 TO 600 SECONDS (240 SEC is default)
	TT NOT UPDATING – SD	ENABLE	OFF (Default)
			ON
		DURATION	10 TO 600 SECONDS (240 SEC is default)
	ST (SUBTITLE) NOT DETECTED	ENABLE	OFF (Default)
			ON
		DURATION	10 TO 600 SECONDS (240 SEC is default)

Table 4-8. Video Alarms, Digital Menu

Selection	Selection Option	Selection Option	Selection Option
	ST (SUBTITLE) NOT UPDATING	ENABLE	OFF (Default)
			ON
		DURATION	10 TO 600 SECONDS (240 SEC is default)
	WSS (WIDE SCREEN SIGNALING) NOT DETECTED	ENABLE	OFF (Default)
			ON
		DURATION	10 TO 600 SECONDS (240 SEC is default)
	XDS NOT DETECTED	ENABLE	OFF (Default)
			ON
		DURATION	10 TO 600 SECONDS (240 SEC is default)
CRC- HD	ENABLE	OFF (Default)	-
		ON	-
	DURATION	0 TO 60 Seconds (2 Seconds is default)	-
EDH – SD	ENABLE	OFF (Default)	-
		ON	-
	DURATION	0 TO 60 Seconds (2 Seconds is default)	-
LETTERBOX – SD	TOP BORDER	ENABLE	OFF (Default)
			ON
		END OF TOP BORDER 525	NTSC LINES: +21 TO +139 (21 is default)
		END OF TOP BORDER 625	PAL LINES: +19 TO +159 (19 is default)
	BOTTOM BORDER	ENABLE	OFF (Default)
			ON
		START OF BOTTOM BORDER 525	NTSC LINES: +140 TO +262 (140 is default)
		START OF BOTTOM BORDER 625	PAL LINES: +160 TO +312 (160 is default)
	THRESHOLD	10 TO 350 mV (286 mV is default)	-

Table 4-8. Video Alarms, Digital Menu

Selection	Selection Option	Selection Option	Selection Option
	DURATION	0 TO 60 Seconds (2 Seconds is default)	-
PILLAR BOX - HD	LEFT BORDER	ENABLE	OFF (Default)
			ON
		END OF LEFT BORDER	+1 TO +860 (1 is default)
	RIGHT BORDER	ENABLE	OFF (Default)
			ON
		START OF RIGHT BORDER	+861 TO +1920 (1920 is default)
	THRESHOLD	10 TO 350 mV (286 mV is default)	-
	DURATION	0 TO 60 Seconds (2 Seconds is default)	-
PICTURE SHIFT	ENABLE	OFF (Default)	-
		ON	-
	THRESHOLD	0 TO 350 mV (2 mV is default)	-
	VERTICAL	1 TO 200 LINES (2 LINES is default)	-
	HORIZONTAL	1 TO 300 PIXELS (2 PIXELS is default)	-
EYE JITTER	ENABLE	OFF (Default)	-
		ON	-
	THRESHOLD SD	100 TO 3700 ps (100 ps is default)	-
	THRESHOLD HD	50 TO 670 ps (50 ps is default)	-
	DURATION	0 TO 60 SECONDS (2 Seconds is default)	-
TIMING ALARM	ENABLE	OFF (Default)	-
		ON	-
	MICROSECONDS	1 TO 64 (1 μ SECOND is default)	-
	LINES	0 TO 50 LINE(S) (1 is default)	-
	DURATION	0 TO 60 SECONDS (2 Seconds is default)	-

Table 4-9. Video Alarms, Analog Menu

Selection	Selection Option	Selection Option	Selection Option
ALARM REPORTING SETUP	MATRIX SCREEN	-	-
FORMAT CHANGE	OFF (Default)	-	-
	ON	-	-
LOSS OF SIGNAL	OFF (Default)	-	-
	ON	-	-
	DURATION	0 TO 60 SECONDS (2 Seconds is default)	-
LOSS OF REFERENCE	OFF (Default)	-	-
	ON	-	-
	DURATION	0 TO 60 SECONDS (2 Seconds is default)	-
LOSS OF VIDEO	ENABLE	OFF (Default)	-
		On	-
	THRESHOLD NTSC	NTSC IRE: 0 TO 50 IRE (40 is default)	-
	THRESHOLD PAL	▪ PAL UNITS: 0 TO 51 UNITS (41 UNITS is default) ▪ PAL mV: 0 TO 357 mV (287 mV is default)	-
	DURATION	0 TO 60 SECONDS (2 Seconds is default)	-
ANALOG GAMUT	PEAK UPPER	OFF (Default)	-
		ON	-
		THRESHOLD NTSC	NTSC IRE: 50 TO 140 IRE (120 is default)
		THRESHOLD PAL	▪ PAL UNITS: 51 TO 143 UNITS (136 UNITS is default) ▪ PAL mV: 357 TO 1000 mV (951 mV is default)
		SENSITIVITY	1 TO 20 CES (15 CES is default)
		DURATION	0 TO 60 SECONDS (2 Seconds is default)
	PEAK LOWER	OFF (Default)	-
		ON	-
		THRESHOLD NTSC	NTSC IRE: -40 TO 0 IRE

Table 4-9. Video Alarms, Analog Menu

Selection	Selection Option	Selection Option	Selection Option
			(-20 is default)
		THRESHOLD PAL	- PAL UNITS: -41 TO 0 UNITS (-34 UNITS is default) - PAL mV: -285 TO 143 mV (-238 mV is default)
		SENSITIVITY	1 TO 20 CES (2 CES is default)
		DURATION	0 TO 60 SECONDS (2 Seconds is default)
	LUM UPPER	ENABLE	OFF (Default)
		ON	ON
		THRESHOLD NTSC	NTSC IRE: 50 TO 140 IRE (105 is default)
		THRESHOLD PAL	- PAL UNITS: 51 TO 143 UNITS (107 UNITS is default) - PAL mV: 357 TO 1000 mV (748 mV is default)
		SENSITIVITY	1 TO 20 CES (18 CES is default)
		DURATION	0 TO 60 SECONDS (2 Seconds is default)
	LUM LOWER	ENABLE	OFF (Default)
			ON
		THRESHOLD NTSC	NTSC IRE: -5.0 TO 10 IRE (-2.5 is default)
		THRESHOLD PAL	- PAL UNITS: -10 TO 0 UNITS (-5 UNITS is default) - PAL mV: -70 TO 0 mV (-35 mV is default)
		SENSITIVITY	1 TO 20 CES (18 CES is default)
		DURATION	0 TO 60 SECONDS (2 Seconds is default)
CAPTIONING	CC NOT DETECTED – ANL	OFF (Default)	-
		ON	-
		DURATION	0 TO 60 SECONDS (2 Seconds is default)

Table 4-9. Video Alarms, Analog Menu

Selection	Selection Option	Selection Option	Selection Option
	CC NOT UPDATING – ANL	OFF (Default)	-
		ON	-
		DURATION	0 TO 600 SECONDS (240 Seconds is default)
	TT NOT DETECTED – ANL	OFF (Default)	-
		ON	-
		DURATION	0 TO 600 SECONDS (240 Seconds is default)
	TT NOT UPDATING – ANL	OFF (Default)	-
		ON	-
		DURATION	0 TO 600 SECONDS (240 Seconds is default)
	XDS NOT DETCTED – ANL	OFF (Default)	-
		ON	-
		DURATION	0 TO 600 SECONDS (240 Seconds is default)
	XDS NOT UPDATING – ANL	OFF (Default)	-
		ON	-
		DURATION	0 TO 600 SECONDS (240 Seconds is default)
	ST NOT UPDATING – ANL	ENABLE	OFF (Default)
			ON
		DURATION	0 TO 600 SECONDS (240 Seconds is default)
	ST NOT DETECTED – ANL	ENABLE	OFF (Default)
			ON
		DURATION	0 TO 600 SECONDS (240 Seconds is default)
SYNC AND BURST	H SYNC UPPER	ENABLE	OFF (Default)
			ON
		THRESHOLD NTSC	NTSC IRE: -50 TO -42 IRE (-45 is default)
		THRESHOLD PAL	▪ PAL UNITS: -51 TO -46 UNITS (-46 UNITS is default) ▪ PAL mV: -356 TO -320 mV (-320 mV is default)
		DURATION	0 TO 60 SECONDS (2 Seconds is default)
	H SYNC LOWER	ENABLE	OFF (Default)

Table 4-9. Video Alarms, Analog Menu

Selection	Selection Option	Selection Option	Selection Option
			ON
		THRESHOLD NTSC	NTSC IRE: -38 TO -20 IRE (-35 is default)
		THRESHOLD PAL	- PAL UNITS: -42 TO -20 UNITS (-36 UNITS is default) - PAL mV: -292 TO -142 mV (-252 mV is default)
		DURATION	0 TO 60 SECONDS (2 Seconds is default)
	BURST UPPER	ENABLE	OFF (Default) ON
		THRESHOLD NTSC	NTSC IRE: 42 TO 50 IRE (45 is default)
		THRESHOLD PAL	- PAL UNITS: 46 TO 51 UNITS (46 UNITS is default) - PAL mV: 321 TO 357 mV (322 mV is default)
		DURATION	0 TO 60 SECONDS (2 Seconds is default)
	BURST LEVEL LOWER	ENABLE	OFF (Default) ON
		THRESHOLD NTSC	NTSC IRE: 20 TO 38 IRE (35 is default)
		THRESHOLD PAL	- PAL UNITS: 20 TO 42 UNITS (36 UNITS is default) - PAL mV: 143 TO 293 mV (252 mV is default)
		DURATION	0 TO 60 SECONDS (2 Seconds is default)
BURST/CHROMA PHASE	ENABLE	OFF	-
		ON	-
	FIELD	ODD (Default)	-
		EVEN	-
	LINE	1 TO 50 LINE(S) (25 LINES is default)	-

Table 4-9. Video Alarms, Analog Menu

Selection	Selection Option	Selection Option	Selection Option
	POSITION	0.0 TO 64.0 μ s (49.5 microseconds is the default)	
	PHASE	0 TO 359.75 DEGREE(S) (283.5 is default)	-
	RANGE	5 TO 20 DEGREE(S) (7.5 is default)	-
	DURATION	0 TO 60 SECONDS (2 Seconds is default)	-
H BLANKING	OFF (Default)	-	-
	WIDTH NTSC	NTSC μ SECONDS: 8 TO 16 μ SECONDS (10.9 is default)	-
	WIDTH PAL	PAL μ SECONDS: 8 TO 16 μ SECONDS (12 is default)	-
	WINDOW	0.1 TO 0.5 μ SECONDS (0.1 is default)	-
	DURATION	0 TO 60 SECONDS (2 Seconds Default)	-
V BLANKING	ENABLE	OFF (Default)	-
		ON	-
	WIDTH NTSC	NTSC LINE: 20 TO 25 LINE (20 is default)	-
	WIDTH PAL	PAL LINE: 25 TO 30 LINE (30 is default)	-
	DURATION	0 TO 60 SECONDS (2 Seconds is default)	-
SC/H PHASE	OFF (Default)	-	-
	ON	-	-
	RANGE	5 TO 89 DEGREES (20 DEGREES is default)	-
	DURATION	0 TO 60 SECONDS (2 SECONDS Default)	-
VITS	LINES NTSC	MATRIX SCREEN: NTSC: 10 TO 22 ODD AND EVEN LINE (10 ODD is default) OFF, ACTIVE, INACTIVE	-
	LINES PAL	▪ PAL ODD: 6 TO 23 LINES (6 ODD is default) OFF, ACTIVE, INACTIVE ▪ PAL EVEN:	-

Table 4-9. Video Alarms, Analog Menu

Selection	Selection Option	Selection Option	Selection Option
		319 TO 336 LINES (319 EVEN is default) OFF, ACTIVE, INACTIVE	
VITS (CONT)	THRESHOLD NTSC	NTSC IRE: 0 TO 100 IRE (40 is default)	-
	THRESHOLD	▪ PAL UNITS: 0 TO 102 UNITS (41 UNITS is default) ▪ PAL mV: 0 TO 714 mV (287 mV is default)	-
	DURATION	0 TO 60 SECONDS (2 Seconds is default)	-

Table 4-10. Time Code Alarms Menu

Selection	Selection Option	Selection Option
ALARM REPORTING SETUP	MATRIX SCREEN	-
LTC LOSS OF TIME CODE	ENABLE	OFF (Default)
		On
	DURATION	0 TO 600 SECONDS (240 seconds is default)
LTC TIME CODE LEVEL	ENABLE	OFF (Default)
		On
	RANGE	0.2 TO 1.8 VOLTS (0.5 is default)
	DURATION	0 TO 600 SECONDS (240 seconds is default)
LTC TIME CODE FRAMING	ENABLE	OFF (Default)
		On
	RANGE	1.5 TO 10.5 LINES (10.5 is default)
	DURATION	0 TO 600 SECONDS (240 seconds is default)
LTC TIME CODE CONTINUITY	ENABLE	OFF (Default)
		On
LTC/DVITC COMPARE (TC SYNC)	ENABLE	OFF (Default)
		On
	THRESHOLD	1 TO 30 FRAMES (1 frame is default)
	DURATION	0 - 60 SECONDS (2 seconds is default)
D-VITC LOSS OF TIME CODE	ENABLE	OFF (Default)
		On
	DURATION	0 TO 600 SECONDS (240 seconds is default)

Table 4-10. Time Code Alarms Menu

Selection	Selection Option	Selection Option
D-VITC LINE	ENABLE	OFF (Default)
		On
	LINE 525	525 LINE: 10 TO 30 LINES (line 14 is default)
	LINE 625	625 LINE: 6 TO 30 LINES (line 14 is default)
	DURATION	0 TO 600 SECONDS (240 seconds is default)
D-VITC CONTINUITY	ENABLE	OFF (Default)
		On
D-VITC CRC	ENABLE	-
	DURATION	0 TO 600 SECONDS (240 Seconds is default)

Table 4-11. TS Alarms Menu (TVM-VTM-ASI)

Selection	Selection Option	Selection Option	Selection Option
ALARM REPORTING SETUP	MATRIX SCREEN	-	-
LOSS OF SIGNAL	ENABLE	-	-
	DURATION	0 TO 60 SECONDS (2 Seconds is default)	-
CRC CHANGE (ATSC)	PAT	-	-
	PMT	-	-
	STT	-	-
	MGT	-	-
	VCT	-	-
	RRT	-	-
	EIT	-	-
	ETT	-	-
CRC CHANGE (DVB)	PAT	-	-
	PMT	-	-

Table 4-11. TS Alarms Menu (TVM-VTM-ASI)

Selection	Selection Option	Selection Option	Selection Option
ETR 290 1 st PRIORITY	TS SYNC LOSS	ENABLE	-
		DURATION	0 TO 60 SECONDS (2 seconds is default)
	SYNC BYTE ERROR	ENABLE	-
		DURATION	0 TO 60 SECONDS (2 seconds is default)
	PAT ERROR	ENABLE	-
		DURATON	0.1 TO 5.0 SECONDS (0.5 seconds is default)
	CONTINUITY COUNT ERROR	ENABLE	-
		DURATION	0 TO 60 SECONDS (2 seconds is default)
	PMT ERROR	ENABLE	-
		DURATION	0.1 TO 5.0 SECONDS (0.5 seconds is default)
	PID ERROR	ENABLE	-
		DURATION	0 TO 60 SECONDS (2 seconds is default)
ETR 290 2nd PRIORITY	TRANSPORT ERROR	ENABLE	-
		DURATION	0 TO 60 SECONDS (2 seconds is default)
	CRC ERROR (ATSC)	PAT	-
		PMT	-
		EIT	-
		STT	-
		MGT	-
		VCT	-
		RRT	-
		ETT	-
		DURATION	0 TO 60 SECONDS (2 Seconds is default)
	CRC ERROR (DVB)	PAT	-
		CAT	-
		PMT	-
		SDT	-
		NIT	-
		BAT	-
		TOT	-
		EIT	-

Table 4-11. TS Alarms Menu (TVM-VTM-ASI)

Selection	Selection Option	Selection Option	Selection Option
	PCR ERROR	DURATION	0 TO 60 SECONDS (2 Seconds is default)
		ENABLE	-
		DISCONTINUITY	10 to 1000 ms (100 ms is default)
	PCR ACCURACY	REPETITION	10 ms to 1000 ms (40 ms is default)
		ENABLE	-
	PTS ERROR	THRESHOLD	100 ns TO 2000 ns (500 ns is default)
		ENABLE	-
	CAT ERROR	THRESHOLD	100 ns TO 2000 ms (500 ms is default)
		ENABLE	-
		DURATION	0 TO 60 SECONDS (2 Seconds is default)
ETR 290 3 rd PRIORITY	NIT ACUTAL ERROR (DVB only)	ENABLE	-
		SHORT RANGE	10 to 100 ms (25 ms is default)
		RANGE	1000 ms TO 50000 ms (10000 ms is default)
	NIT OTHER ERROR (DVB only)	ENABLE	-
		RANGE	1000 ms TO 50000 ms (10000 ms is default)
	SDT ACTUAL ERROR (DVB only)	ENABLE	-
		SHORT RANGE	10 to 100 ms (25 ms is default)
		RANGE	500 ms TO 50000 ms (2000 ms is default)
	SDT OTHER ERROR (DVB only)	ENABLE	-
		RANGE	1000 ms TO 50000 ms (10000 ms is default)
	EIT ACTUAL ERROR (DVB only)	ENABLE	-
		SHORT RANGE	10 to 100 ms (25 ms is default)
		RANGE S0	500 ms TO 50000 ms (2000 ms is default)
		RANGE S1	500 ms TO 50000 ms (2000 ms is default)

Table 4-11. TS Alarms Menu (TVM-VTM-ASI)

Selection	Selection Option	Selection Option	Selection Option
	EIT OTHER ERROR (DVB only)	ENABLE	-
		RANGE S0	500 ms TO 50000 ms (2000 ms is default)
		RANGE S1	500 ms TO 50000 ms (2000 ms is default)
	EIT PF ERROR (DVB only)	ENABLE	-
	UNREFERENCED PID ERROR	ENABLE	-
		DURATION	0 TO 60 SECONDS (2 Seconds is default)
	REPETITION ERROR (DVB)	RST ENABLE	-
		RST REPETITION	10 ms TO 100 ms (25 ms is default)
		TDT ENABLE	-
		TDT SHORT RANGE	10 ms TO 100 ms (25 ms is default)
		TDT RANGE	5000 ms TO 120000 ms (30000 ms is default)
		SI ENABLE	-
	REPETITION ERROR (ATSC)	MGT ENABLE	-
		MGT RANGE	50 ms TO 2000 ms (150 ms is default)
		STT ENABLE	-
		STT REPETITION	250 ms TO 60000 ms (1000 ms is default)
		RRT ENABLE	-
		RRT REPETITION	5000 ms TO 120000 ms (60000 ms is default)
		VCT ENABLE	-
		VCT REPETITION	50 ms TO 3000 ms (400 ms is default)
		EIT ENABLE	-
		EIT REPETITION	50 ms TO 20000 ms (500 ms is default)
	BASE PID ERROR	-	-
	BUFFER ERRORS	MONITORED PROGRAM	PROGRAM 1 TO PROGRAM 6
		TBB	-
		TBSB	-
		MBB	-
		EBB	-

Table 4-11. TS Alarms Menu (TVM-VTM-ASI)

Selection	Selection Option	Selection Option	Selection Option
		BB	-
		BSB	-
	EMPTY BUFFER ERROR	-	-
	DATA DELAY ERROR	-	-

Table 4-12. Monitor Out/Generator A-B

Selection	Selection Option	Selection Option	Selection Option
FUNCTION	MONITOR	-	-
	PATHOLOGICAL	-	-
	COLORBAR	-	-
	COLORBAR WITH MOTION	-	-
VIDEO FORMAT	1080i/59.94	-	-
	1080i/50	-	-
	1080p/59.94	-	-
	1080p/50	-	-
	720p/59.94	-	-
	720p/50	-	-
	625/50	-	-
	525/59.94 (Default)	-	-
AUDIO OUTPUT LEVEL	-18 dBFS (default) OR -20 dBFS	-	-
ENABLE GROUP 1-2	OFF	-	-
	ON	-	-
ENABLE GROUP 3-4	OFF	-	-
	ON	-	-

Table 4-13. Monitor Out/Generator C-D

Selection	Selection Option	Selection Option	Selection Option
FUNCTION	MONITOR	-	-
	PATHOLOGICAL	-	-
	COLORBAR	-	-
	COLORBAR WITH MOTION	-	-
VIDEO FORMAT	1080i/59.94	-	-
	1080i/50	-	-
	1080p/59.94	-	-
	1080p/50	-	-

Table 4-13. Monitor Out/Generator C-D

Selection	Selection Option	Selection Option	Selection Option
	720p/59.94	-	-
	720p/50	-	-
	625/50	-	-
	525/59.94 (Default)	-	-
AUDIO OUTPUT LEVEL	-18 dBFS (default) OR -20 dBFS	-	-
ENABLE GROUP 1-2	OFF	-	-
	ON	-	-
ENABLE GROUP 3-4	OFF	-	-
	ON	-	-

Table 4-14. Display Setup Menu

Selection	Selection Option	Selection Option	Selection Option
DISPLAY COLORS	MATRIX SCREEN (See Table 4-15 for the Display Colors Menu)	-	-
GRATICULE INTENSITY	25% TO 200% (NORMAL is 100%)	-	-
CURSOR INTENSITY	25% TO 200% (NORMAL is 100%)	-	-
XGA FREEZE	FREEZE FROM CLOCK	HH:MM:SS	-
		ENABLE	OFF (Default)
			ON
	FREEZE ON ALARM	FIRST ALARM MANUAL RETURN TO LIVE (Default)	-
		FIRST ALARM AUTO RETURN TO LIVE	
MONITOR	APECT RATIO	4:3	-
		16:9	-
		16:10	-
	SCREEN SAVER	OFF (Default)	-
		1 TO 60 MIN	-
	OUTPUT LEVEL	1V p-p (Default)	-
		0.7V p-p	
	MONOCHROME DISPLAY		

Table 4-15. Display Colors Menu

Black (Not available on the Graticule Color menu.)

Blue

Green

Cyan

Red

Purple

LT Gray

DK Gray

LT Blue

LT Green

LT Cyan

LT Red

LT Purple

Yellow

White

NOTE: LT=Light and DK=Dark

Table 4-16. Communications Setup Menu

Selection	Selection Option	Selection Option	Selection Option
RCU PORT	TERMINATION	OFF (Default)	-
		ON	-
	BAUD RATE	19200 Baud	-
		38400 Baud (Default)	-
		57600 Baud	-
		115200 Baud	-
IP CONFIGURATION	ETHERNET CONFIG SCREEN	-	-
GPI INPUT FUNCTION	INPUT 1	SELECT INPUT A	-
		ON AIR A	-
		SELECT/ON AIR A	-
		USER GPI ALARM 1	-
	INPUT 2	SELECT INPUT B	-
		ON AIR B	-
		SELECT/ON AIR B	-
		USER GPI ALARM 2	-
	INPUT 3	SELECT INPUT C	-
		ON AIR C	-
		SELECT/ON AIR C	-
		USER GPI ALARM 3	-

Table 4-16. Communications Setup Menu

Selection	Selection Option	Selection Option	Selection Option
	INPUT 4	SELECT INPUT D	-
		ON AIR D	-
		SELECT/ON AIR D	-
		USER GPI ALARM 4	-
	INPUT 5	RECALL PRESET 1	-
		USER GPI ALARM 5	-
	INPUT 6	RECALL PRESET 2	-
		USER GPI ALARM 6	-
	INPUT 7	RECALL PRESET 3	-
		USER GPI ALARM 7	-
	INPUT 8	RECALL PRESET 4	-
		USER GPI ALARM 8	-
	INPUT 9	RECALL PRESET 5	-
		USER GPI ALARM 9	-
GPI OUTPUT FUNCTION	GPO OUT 1 POLARITY	NORMALLY OPEN (Default)	-
		NORMALLY CLOSED	-
	GPO OUT 2 POLARITY	NORMALLY OPEN (Default)	-
		NORMALLY CLOSED	-
	GPO OUT 1 SETUP	FOLLOW INPUT A	-
		FOLLOW INPUT B	-
		FOLLOW INPUT C	-
		FOLLOW INPUT D	-
		FOLLOW ALARMS	-
	GPO OUT 2 SETUP	FOLLOW INPUT A	-
		FOLLOW INPUT B	-
		FOLLOW INPUT C	-
		FOLLOW INPUT D	-
		FOLLOW ALARMS	-
GPI ALARM NAMES	INPUT 1	RENAME SCREEN	-
	INPUT 2	RENAME SCREEN	-
	INPUT 3	RENAME SCREEN	-
	INPUT 4	RENAME SCREEN	-
	INPUT 5	RENAME SCREEN	-
	INPUT 6	RENAME SCREEN	-
	INPUT 7	RENAME SCREEN	-
	INPUT 8	RENAME SCREEN	-

Table 4-16. Communications Setup Menu

Selection	Selection Option	Selection Option	Selection Option
	INPUT 9	RENAME SCREEN	-
GPI ALARM REPORTING SETUP	GPI ALARM REPORTING MATRIX	-	-
ROUTER PORT	INPUT SELECTION	A TO B (A is the Default) for 2 inputs A TO D (A is default) for 4 inputs	-
	CONFIGURATION	DISABLED (Default)	-
		ENABLE ROUTER	-
		ENABLE SCANNER	-
	ROUTER MODE CHANNEL	CH 1 TO CH 12	-
	SCANNER MODE SEQUENCE	CHANNEL 1 TO CHANNEL 12	-
	DWELL TIME	1 TO 60 SECONDS (5 Seconds is default)	-
	CHANNEL NAMES	CHANNEL 1 TO CHANNEL 12	RENAME SCREEN
UNIT ID	1 TO 99 (1 is default)	-	-

Table 4-17. System Setup Menu

Selection	Selection Option	Selection Option	Selection Option
PANEL LOCKOUT	ENTER PASSWORD	SCREEN LOCK/UNLOCK FRONT PANEL PRESETS	-
CHANGE PASSWORD	ENTER PASSWORD	ENTER PASSWORD	-
CLOCK DISPLAY	OFF	-	-
	SYSTEM CLOCK	-	-
SET TIME	ENTER NEW TIME SCREEN	-	-
TIME CODE INPUT	ANL	LTC (Default)	-
		VITC	-
		VITC LINE NTSC	LINE 10 TO LINE 30
		VITC LINE PAL	LINE 6 TO LINE 30
	SD	LTC (Default)	-
		DVITC	-
		DVITC LINE 525	LINE 10 TO LINE 30
		DVITC LINE 625	LINE 6 TO LINE 30
	HD	LTC (Default)	-
		ANC LTC	-

Table 4-17. System Setup Menu

Selection	Selection Option	Selection Option	Selection Option
		ANC DVITC 0	-
		ANC DVITC 1	-
AURAL ALERT	OFF	-	-
	ON (Default)	-	-
EXIT BYPASS ON ALARM	OFF	-	-
	ON	-	-
CONTROL ILLUMINATION	BRIGHTNESS	MIN, 2 TO 9, MAX (3 is the Default)	-
	CONTRAST	MIN, 2 TO 9, MAX (3 is the Default)	-
	AUTO OFF	OFF/ON	-
	AUTO OFF TIME	15, 30, 45 SECONDS, 1 TO 60 MINUTES (10 MINUTES Default)	-
DIAGNOSTICS	SYSTEM FAULT LOG	SYSTEM FAULT LOG SCREEN	-
FILE NAVIGATOR (appears when USB drive is attached)	FILE NAVIGATION SCREEN	-	-
FLASH UPDATE FROM USB	INSERT DEVICE WITH FLASH UPDATE	PRESS ENT to begin	-
FEATURE UPGRADE FROM USB	INSERT DEVICE WITH FEATURE UPGRADE	PRESS ENT to begin	-

Table 4-18. About Menu

Selection	Selection Option	Selection Option	Selection Option
ABOUT	ABOUT SCREEN	-	-

Video Format Menu

The Video Format menu items are described below.

Video A, B, C, or D Format

The Video “A, B, C, D” Format menu is used to automatically or manually select the video format reference standard for the selected input. The format selection determines the unit of measure and the critical amplitude limits for the input. The default selection, AUTODETECT, is used to automatically detect the format of the input signal.

Video A, B, C, or D Structure

The VIDEO “A, B, C, D” Structure menu is used to configure the signal handling path to a 10-bit or 12-bit RGB or YCbCr sampling structure. 12-bit modes are not available

with formats 1080p/60, 1080p/59.94, and 1080p/50. 4:4:4 and 4:2:2 are the format rates selected with the 10-bit and 12-bit sampling structures. 4:2:2 is only available with 12-Bit YCbCr. The selections are as follows:

- **AUTO 10 bit YCbCr 4:2:2:** The sampling structure is determined from the Video Payload Identifier. If there is no detected VPI, a 10-bit YCbCr sampling structure will be assumed.
- **10-bit YCbCr 4:4:4:** The signal handling path will be configured for a 10-bit YCbCr mode of operation.
- **10-bit RGB 4:4:4:** The signal handling path will be configured for a 10-bit RGB mode of operation.
- **12-bit YCbCr 4:4:4:** The signal handling path will be configured for a 12-bit YCbCr mode of operation. This selection is only available for 3Gb/s HD, when a TVM-VTM-3GB board is detected for the appropriate channels.
- **12-bit RGB 4:4:4:** The signal handling path will be configured for a 12-bit RGB mode of operation. This selection is only available for 3Gb/s HD, when a TVM-VTM-3GB board is detected for the appropriate channels.
- **12-bit YCbCr 4:2:2:** The signal handling path will be configured for a 12-bit YCbCr mode of operation. This selection is only available for 3Gb/s HD, when a TVM-VTM-3GB board is detected for the appropriate channels.

Dual Link

When set to ON inputs A and B and C and D have DUAL LINK selections. DUAL LINK forces the Input A YCbCr format to link with Input B or the Input C YCbCr format to link with Input D. Inputs A or B cannot be linked to inputs C or D, and inputs C or D cannot be linked with inputs A or B.

The TVM-VTM-DLK expands the Dual Link capability. Inputs A and B and C and D contain another DUAL LINK selection: RGB. Selecting a format with DUAL LINK can force Input A to include the YCbCr or RGB format to link with Input B or the Input C YCbCr or RGB format to link with Input D. Inputs A or B cannot be linked to inputs C or D, and inputs C or D cannot be linked with inputs A or B.

In addition to Dual link features described above, TVM-VTM-3GB also supports 12 bit and 1080P 50/59.94/60 formats.

Source ID

The Source ID is the ID of the signal for the selected input. The default Source ID is the input selection (Input A to Option D), but the text can be changed by using the Rename Screen, as shown in **Figure 4-1**. On the Rename Screen, press the UP/DOWN navigation buttons to change the character in the character box, and press the RIGHT/LEFT navigation buttons to change the character box. Select ACCEPT and ENT to accept the changed information. Select CANCEL and press ENT, or press EXIT to cancel the changes.

Figure 4-1. Source ID Rename Screen



Waveform Setup Menu

The Waveform Setup menu is described below.

Digital Waveform Graticule

The Digital Waveform Graticule menu is used to select the unit of measurement for the Digital Waveform Graticule. The selections are Volts or Percent. The default selection for the Digital Waveform Graticule menu is VOLTS.

NTSC Pedestal (or 7.5 IRE Setup)

When in 525/60 Composite format, set the NTSC PEDESTAL to OFF if using a 0 IRE pedestal signal. When set to OFF, the Vector graticules change to the proper levels in order to display an NTSC signal without 7.5 IRE setup. The NTSC PEDESTAL default position is ON (7.5 IRE).

PAL Waveform Scale

The PAL Waveform scale menu is used to select the unit of measurement for the PAL Waveform. The selections are Volts or Units. The default selection for the PAL Waveform menu is UNITS.

DC Restore (Analog Option Required)

DC Restore is used to have the voltage supplied to the analog signal in order to maintain a DC level on the waveform. The blanking level is offset and shifts due to the presence or absence of burst: 1 IRE unit or less. The DC Restore selections are Off, Fast, and Slow.

- Off = DC offset appears.
- Slow = Hum still viewed in the signal.
- Fast = Fully restores the signal.

Waveform Intensity

The Waveform Intensity is used to raise or lower the brightness of the displayed waveform.

Waveform Contrast

Waveform Contrast is used to adjust the overall difference between the lightest and darkest colors of the waveform. The range of contrast is 25% to 200%. NORMAL is the default contrast setting.

Persistence

Persistence is used to determine how long a data point (pixel) in the waveform remains on the display. The ranges of Persistence are NORMAL, 1 TO 6, & INFINITE. NORMAL is the default setting.

Attack

Attack is the initial intensity that the data point (pixel) appears in the display. The range of attack is 9 to 15 (NORMAL is 9), and MAX (the greatest intensity). NORMAL is the default intensity.

Error Highlighting

Error highlighting changes color of the portion of the waveform that exceeds the alarm settings. OFF is the default. The highlighting is dependent upon the format and gamut settings selected. The following are rules to consider:

- Composite format with Flat filter follows the alarm settings for Gamut Peak upper and lower. It follows the threshold settings for the alarm, even when it is not enabled.
- Composite format with Low Pass filter follows the Luma Upper and Lower thresholds.
- Component format with RGB filter will follow the RGB gamut.
- No highlighting in YCbCr or YRGB.

Eye Pattern Setup Menu

The Eye Pattern Setup menu is used to select the Jitter Display Type, Persistence, Eye Intensity, Eye Contrast, and Attack.

Jitter Display Type

The Jitter Display Type menu is used to change the scale of the jitter meter.

Eye Intensity

The Eye Intensity submenu is used to raise or lower the brightness of the displayed Eye Pattern. The range of intensity is 25% to 200%

Eye Contrast

The Eye Contrast submenu is used to adjust the overall difference between the lightest and darkest colors of the Eye Pattern. The range of contrast is 25% to 200%.

Persistence

Persistence is used to determine how long a data point (pixel) in the Eye Pattern remains on the display (refresh rate). The ranges of Persistence are NORMAL, 1 TO 6 & INFINITE. If INFINITE is selected, the waveform data point will always remain on the screen.

For Eye pattern, the correlation of values derived by using measurement cursors versus the jitter meter could differ unless the eye pattern is displayed using the maximum persistence setting. A normal persistence setting will make it more difficult to view pixels near the widest sample points, which forces the placement of the measurement cursors to a lower (narrower) jitter value. Jitter can only be selected when the Eye Pattern is enabled.

Attack

Attack is the initial intensity that the data point (pixel) appears in the display. The range of attack is LOW (the lowest intensity), 2 to 15 (NORMAL is 9), and MAX (the greatest intensity). Low is the default intensity.

Vector Setup Menu

The Vector Setup menu is used to select the PAL Overlay, SDI I&Q, Vector Intensity, Vector Contrast, Persistence, and Attack.

PAL Overlay (Analog Option Required)

A PAL signal by default appears in parade mode. The PAL Overlay menu is used to determine if the PAL signal should be in Parade or Overlay mode.

When in Parade mode multiple components of the same signal are shown next to one another (i.e. Components Y, then CB, then CR in a YCbCr format). When in Overlay mode the multiple components of the same signal are displayed over each another (i.e. R over G over B in an RGB format).

SD I/Q Lines

The SD I/Q Lines submenu is used to turn OFF and ON the I and Q marker lines on the Vector Display. The default condition is OFF. The I and Q marker lines only appear in SD format.

Vector Intensity

The Vector Intensity is used to raise or lower the brightness of the displayed vector. The range of intensity is 25% to 200%. Normal (100%) is the default.

Vector Contrast

Vector Contrast is used to adjust the overall difference between the lightest and darkest colors of the vector. The range of contrast is 25% to 200%. Normal (100%) is the default.

Persistence

Persistence is used to determine how long a data point (pixel) in the vector remains on the display. The ranges of Persistence are NORMAL, 1 TO 6, and INFINITE.

Attack

Attack is the initial intensity that the data point (pixel) appears in the display. The range of attack is LOW (the lowest intensity), 2 to 15 (NORMAL is 9), and MAX (the greatest intensity).

Gamut Setup Menu

The Gamut Setup menu is used to change the Gamut Intensity, Gamut Contrast, Persistence, Color Plot, and Data Error Persistence.

Gamut Intensity

The Gamut Intensity is used to raise or lower the brightness of the displayed gamut. The range of intensity is 25% to 200%. Normal (100%) is the default.

Gamut Contrast

Gamut Contrast is used to adjust the overall difference between the lightest and darkest colors of the gamut. The range of contrast is 25% to 200%. Normal (100%) is the default.

Persistence

Persistence is used to determine how long a data point (pixel) in the Gamut remains on the display. The ranges of Persistence are NORMAL, 1 TO 6, & INFINITE.

Color Plot

The Color Plot is used to set the color for plotting RGB pixels. The pixels can be one single color or individual colors (Red, Green, or Blue). Multiple colors help to indicate which color of the RGB signal moves beyond the inner and outer parameters of the gamut graticule. Select RGB for multiple colors.

Data Error Persistence

Data Error Persistence is used to determine how long a point of data in the Composite Gamut remains on the display. The ranges of Persistence are NORMAL, 1 TO 6, and INFINITE.

Picture Setup Menu


The Picture Setup menu items are described below.

Thumbnail

A thumbnail is approximately 1/16 of the full screen display or 1/16 of the pane. It is used to show the picture that is being measured in the pane or display. Up to four thumbnails can be shown simultaneously. Each thumbnail can be for the same or different input. When in quad mode (not full screen), the thumbnail will not be displayed if one of the four panes has picture selected.

The thumbnail picture is shown in one corner of each Upper Left, Upper Right, Lower Left, and Lower Right pane by using the THUMBNAIL menu. A sample quad-screen display containing a thumbnail in the lower-right corner of the lower right pane is shown in **Figure 4-2**.

Figure 4-2. Sample Thumbnail Screen

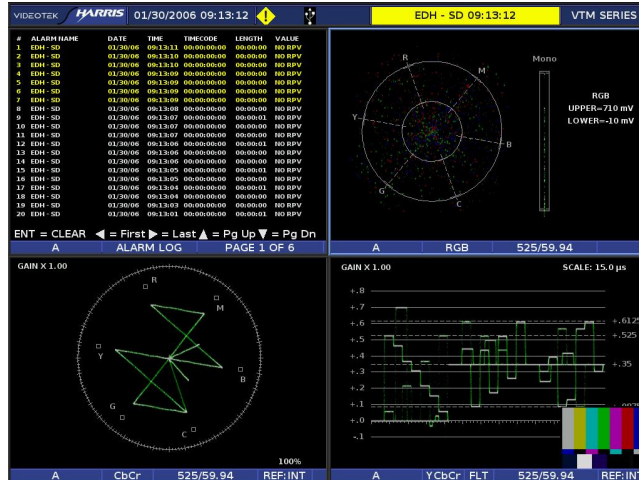

Markers

There are three markers available to be indicated in the picture. Safe Action is equal to 90% of the picture height and 90% of the picture width. Safe Title is equal to 80% of the picture height and 80% of the picture width. Clean Aperture shows the limits for the active pixel area. Brackets appear on the picture or a box surrounds the picture to show these limits. The center marker identifies the location of the center of the picture.

Closed Caption Display

The Closed Caption Display menu is used to determine the type of closed caption display that should appear with the picture. The closed captions selections are CC1 to CC4, T1 to T4, and 708 (which is HD only) Service 1 to 7. For more information on Closed Captioning, see Closed Caption on page 76.

XDS

Located in the upper-left corner of the picture display is the Extended Data Services (XDS) display when it is enabled in the PICTURE SETUP menu. The Picture Setup/XDS menu is used to enable and disable XDS along with selecting the information for line 6.

When XDS is selected, XDS data is decoded. There are five fixed lines (ID number, Length of Time Elapsed, Program Name, Channel Info Network Name, and Content Advisory), and one selectable line. Use the UP/DOWN NAVIGATION buttons to select an item for the XDS.

The XDS selections are shown in Table 4-19. The bold items are always shown and cannot be changed on the XDS display. All items are selectable for line 6 except CHANNEL INFO NETWORK NAME. For more information on XDS see page 104.

Table 4-19. XDS Line Selections

Selection	Selection Option	Selection Option
ID NUMBER	FUTURE CONTENT ADVISORY	PSIP STRUCTURE CONTROL
LENGTH ELAPSED TIME	FUTURE AUDIO SERVICES	PSIP EIT DESCRIPTOR
PROGRAM NAME	FUTURE CAPTION SERVICES	PSIP DATA CARRIAGE
CHANNEL INFO NETWORK NAME (Not available for Line 6 selection)	FUTURE COPY MANAGEMENT	CHANNEL INFO CALL LETTERS
TYPE	FUTURE ASPECT RATIO	CHANNEL INFO TAPE DELAY
CONTENT ADVISORY	FUTURE COMPOSITE PACKET 1	CHANNEL INFO TSID
AUDIO SERVICES	FUTURE COMPOSITE PACKET 2	MISC TIME OF DAY
CAPTION SERVICES	FUTURE DESCRIPTION	MISC IMPULSE CAPTURE ID
COPY MANAGEMENT	PSIP MINOR CHANNEL	MISC SUPPLEMENTAL DATA LOCATION
ASPECT RATIO	PSIP EVENT NUMBER	MISC TIME ZONE
COMPOSITE PACKET 1	PSIP EVENT START	OUT OF BAND CHANNEL
COMPOSITE PACKET 2	PSIP EVENT DURATION	CHANNEL MAP POINTER
DESCRIPTION	PSIP PROGRAM NAME	CHANNEL MAP HEADER
FUTURE ID NUMBER	PSIP PROGRAM TYPE	CHANNEL MAP PACKET
FUTURE LENGTH ELAPSED TIME	PSIP CONTENT ADVISORY	NATIONAL WEATHER SVC CODE
FUTURE PROGRAM NAME	PSIP AUDIO SERVICES	NATIONAL WEATHER SVC MSG
FUTURE TYPE	PSIP CAPTION SERVICES	-

(Closed Caption) Size

The SIZE menu is used to select the size of the text of the closed caption display. The selections are large (covers more of the displayed video signal) or small (covers less of the displayed video signal).

Teletext Page

NOTE: If the format selected is not a valid format for teletext, NOT VALID DISPLAY FOR INPUT FORMAT appears on the screen. PAL and 625 are the only formats that functions with teletext.

The Teletext Page menu item is used to select the page where the teletext can be viewed. Use the UP/DOWN Navigation buttons to change the number for the page. Press the LEFT/RIGHT button to move between numeric positions. Press ACCEPT to display the selected page.

When Teletext is displayed over the picture press the DOWN arrow to go to the Index page (page 100). Press the LEFT ARROW button to go to the previous page, and press the RIGHT ARROW button to go to the next page.

The Teletext Detect alarm is activated when the presence of Teletext is not detected in the vertical blanking interval for some time in excess of the duration setting. The Teletext Not Updating alarm is also activated when the Teletext carrier is present and the data word is null for a period in excess of the duration setting.

Anamorphic

The Anamorphic menu selection is used to correct the anamorphic display. Setting the menu selection to ON corrects the SD aspect ratio for the monitor.

Time Code

Time Code is the time that is associated with each video frame. Time Code is keyed over the picture on the right side. Adjacent to the Time Code, the LTC/DVITC is keyed over the picture on the right side when LTC/DVITC is selected. LTC/DVITC cannot be activated unless ENABLE is selected. The submenu POSITION select is used for the vertical placement of the time code at the top, bottom (beyond safe action areas), and middle.

Brightness

Picture Brightness is used to make the picture brightness lighter or darker. The brightness range is from 25% (for the darkest picture) to 200% (for the brightest picture). The default picture brightness is 100%.

Contrast

Picture Contrast is used to increase the overall difference between the lightest and darkest colors. The contrast range is from 25% (for the least amount of difference between the lightest and darkest colors) to 200% (for the most amount of difference between the lightest and darkest colors). The default picture contrast is 100%.

(Picture) Color

Picture Color is used to change the picture to color or monochromatic (black and white). The default menu item for Picture Color is Color.

Blue Gun

Blue Gun is a setup feature that is used to show the blue color component of the input video. Use the Blue Gun feature to set the Saturation and Hue by matching the intensity of all blue bars when a SMPTE split field color bar signal is applied.

Red Gun

Red Gun is a setup feature that is used to show the red color component of the input video. Use the Red Gun feature to set the Saturation and Hue by matching the intensity of all red bars when a SMPTE split field color bar signal is applied.

Green Gun

Green Gun is a setup feature that is used to show the green color component of the input video. Use the Green Gun feature to set the Saturation and Hue by matching the intensity of all green bars when a SMPTE split field color bar signal is applied.

VBI MASK

The VBI (Vertical Blanking Interval) MASK menu selection is used to mask closed caption and non-active lines. With VBI MASK set to ON, only active lines will be shown on the picture portion of the display.

Monitor Out/Generator A-B and C-D

NOTE 1: The video output format is restricted to 10-bit YCbCr signals.

NOTE 2: The MONITOR OUT/GENERATOR A-B menu only appears in the Setup menu if the TVM-VTM-3GB board appears in slot 1.

NOTE 3: The MONITOR OUT/GENERATOR C-D menu only appears in the Setup menu if the TVM-VTM-3GB board appears in slot 2.

The TVM-VTM-3GB can be used as a signal generator. The MONITOR OUT/GENERATOR A-B or C-D setup menu is used to set the 3GB option to output a Monitor, Pathological, Colorbar, or Colorbar with Motion display using one of the video formats listed in the Video Format submenu of the Monitor Out/Generator A-B or C-D menu. The TVM-VTM-3GB can also be used to output a -18 dBFS or -20 dBFS tone to a maximum of four different audio groups.

The Function submenu selects the following displays to use as a test signal display:

- **Monitor:** Select Monitor to display the input signal.
- **Pathological:** Select Pathological to display a SDI/HD-SDI pathological pattern checkfield.
- **Colorbar:** Select Colorbar to display a standard colorbar display.
- **Colorbar with Motion:** Select Colorbar with Motion to display a standard colorbar display with a bouncing square that moves around the display.

The video output signals that are selectable in the Video Format menu are:

- 1080i/59.94
- 1080i/50
- 1080p/59.94
- 1080p/50
- 720p/59.94
- 720p/50
- 625/50
- 525/59.94

The Audio Level menu is used to select between the -18 dBFS and -20 dBFS test tones. The selected tone is output to the selected audio groups in the ENABLE AUDIO menu.


Display Setup

The Display Setup menu is used to configure the Display colors, graticule and cursor Intensity, XGA Freeze, and Monitor.

Display Colors

The display colors are used to select the colors for the background, cursors, signals, and graticules of the VTM Series. The colors are listed in **Table 4-15** on page 158. The Display Color Selection Screen, shown in **Figure 4-3**, is used to set the colors. Any color selection that is not available is blocked out and not accessible. “X” indicates the selection on the screen.

Figure 4-3. Display Color Selection

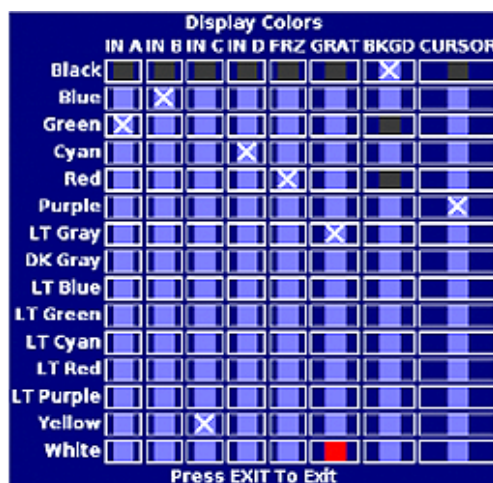

Use the NAVIGATION buttons to select the cell for the color and function. Once selected, press the ENT button to assign the color to that function. Though the same color can be used for multiple functions, each function can use only one color. Black cells in the Display Color Screen indicate color selections that can not be made for specific functions.

NOTE: The background color is selectable. There is a 50% reduction in the luminance level of the background relative to the same color of other attributes (e.g. text or graticules). This is to assure a contrast when the background color selection is the same, such as red enabled alarms over a red background.

Graticule Intensity

The Graticule Intensity submenu is used to raise or lower the brightness of the displayed graticule.

Cursor Intensity

The Cursor Intensity submenu is used to raise or lower the brightness of the displayed cursor.

XGA Freeze

The XGA Freeze Setup menu is used to determine the factors for when a display is frozen.

Freeze From Clock

The Freeze Trigger From Clock is used to create a frame capture at a specified time.

Freeze on Alarm

Freeze on Alarm is used to create a frame capture when one or more user-selectable alarms are triggered. The FREEZE ON ALARM selections are used to automatically or manually return from the frozen picture to the active picture after a frame capture is performed. Pressing the DISP button will override the FREEZE FROM CLOCK and FREEZE ON ALARM menu selections.

- If FREEZE ON ALARM is set to FIRST ALARM MANUAL RETURN TO LIVE the frozen screen is immediately displayed when an alarm is triggered. The DISP button must be pressed to return the screen to the active display.
- If FREEZE ON ALARM is set to FIRST ALARM AUTO RETURN TO LIVE, the active picture replaces the frame capture. No other captures are performed.

Monitor

The monitor menu is used to select the aspect ratio, screen saver, and output level for the monitor.

Aspect Ratio

The Aspect Ratio submenu is used to indicate to the VTM instrument the format of the monitor that is utilizing the signal from the DVI OUT port. The menu selection should always match the actual aspect ratio of the monitor. When the aspect ratio is correctly set, the vector display graticule will appear round instead of oval.

Screen Saver

The screen saver is used to provide a blank screen after there is no activity for the specified duration. The time it takes for the screen saver to activate can range from 1 to 60 minutes.

Output Level

The Output Level submenu is used to determine the monitor output level. The default monitor output level is 1V p-p. The other output level selection is 0.7V p-p.

Communications Setup

The Communications Setup menu is used to configure the communication between the VTM Series and any peripheral hardware and Software connected to the unit.

RCU Port

The RCU Port Submenu controls the termination and baud rate for the Remote Port on the back of the VTM Series.

Termination

One RCU Series connects to multiple VTM Series instruments using a multidrop straight through wire with RJ-11 connectors (not a standard telephone wire) that connects to the REMOTE ports on the back of the VTMs and to the TO MAIN UNIT connector on the back of the RCU. All VTMs must have unique unit IDs, as described in Unit ID on page 176. The REMOTE port must be terminated on the last VTM Series using this menu.

Baud Rate

The Baud Rate is used to set the baud rate for the REMOTE port. If the Baud Rate is not correct, the VTM Series will not communicate with the device that is connected to the REMOTE Port.

IP Configuration

The IP CONFIGURATION menu is used to configure the VTM Series for Ethernet communication. The Ethernet interface provides a high-speed communication link to the third party applications (such as SNMP) over standard LAN and Internet networks. The interface conforms to industry Ethernet standards:

- Connection via a standard RJ45 socket
- Automatic detection and switching between 10BaseT and 100BaseT
- SNMP Communications
- TCP/IP stack is fully compliant with RFC2500, "Internet Official Protocol Standards"
- Fully compliant with IEEE 802.3 Ethernet standard

The interface can accept a static IP address, or it can obtain an IP address dynamically from a DHCP server. The IP Address, Subnet Mask, Gateway Address, DHCP are programmable from the Unit Ethernet Setup menu system. The settings are performed in the IP Configuration screen.

IP Address

The IP Address is used to select a static IP address (unless Dynamic Host Configuration Protocol (DHCP) will be used). The IP address must not be the same address as another instrument or PC on the network. Network conflicts will occur if two devices have the same IP address. See the System Administrator to determine a static IP address that will avoid conflicts.

Subnet Mask

The Subnet Mask is used to configure the Subnet Mask on a network if DHCP is not enabled. If DHCP is not used to automatically detect the Subnet Mask on a network,

the Subnet Mask must be manually configured. Unlike the IP address, the Subnet Mask must be the same Subnet Mask as the network Subnet Mask. See the System Administrator to determine the Subnet Mask.

Gateway

The Gateway is the network address that provides access to an outside network. Use the Gateway submenu to configure the Gateway on a network if DHCP is not enabled. If DHCP is not used to automatically detect the Gateway on a network, the Gateway must be manually configured. Unlike the IP address, the Gateway must be the same Gateway address as the network Gateway address. See the System Administrator to determine the Gateway address.

DHCP

The Dynamic Host Configuration Protocol (DHCP) function is used to have the VTM Series automatically configure an IP Address, Subnet Mask, and Gateway every time the unit is powered on. The IP Address is dynamic and could change each time the VTM Series is powered on. DHCP Enable is set to OFF by default.

GPI Input Function and GPI Alarm Names

The input GPIs have selectable functions. There are selectable functions to allow external control of the unit using the default settings. Another function of the GPI is to show an onscreen alarm with a user-selected identification from an external input. The user-selected identification can be renamed in the GPI ALARM NAMES window.

To change the GPI User Identification:

1. Press SETUP to display the SETUP MENU.
2. Use the NAVIGATION buttons to move the cursor to COMMUNICATIONS SETUP menu.
3. Press the ENT button.
4. Use the NAVIGATION buttons to move the cursor to GPI ALARM NAMES.
5. Press the ENT button.
6. Use the NAVIGATION buttons to select the desired input (INPUT 1 to INPUT 9).
7. Press the ENT button. The GPI Rename Screen, shown in **Figure 4-4**, appears.

Figure 4-4. GPI Rename Screen



8. Use the RIGHT/LEFT NAVIGATION buttons to select character box.
9. Press the UP/DOWN NAVIGATION buttons to select a character.
10. Repeat until the name is complete.
11. Press the RIGHT or LEFT NAVIGATION buttons until ACCEPT is selected.

12. Press the ENT button over ACCEPT to accept the name, or CANCEL to not use the changed name. Press the EXIT button at any time to cancel the name change and return to the previous submenu.

GPI Output Function

The GPI Output Function submenu is used to determine the GPO Polarity and GPO Output Setup for each input.

GPO Out 1 and 2 Polarity

There are two OUTPUT GPIs that are associated with a list of alarms. All GPI alarm activation selections are set to the default OFF until the alarm is enabled. When an alarm is enabled, the GPI functions according to the GPO OUT 1 and 2 POLARITY setting (NORMALLY OPEN, NORMALLY CLOSED). The default polarity is NORMALLY OPEN.

- **NORMALLY OPEN:** The contact closure on the GPI board is normally open. When the contact closure closes, the GPO alarm is activated.
- **NORMALLY CLOSED:** The contact closure on the GPI board is normally closed. When the contact closure opens, the GPO is activated.

GPO Out 1 and 2 Setup

The GPO Out 1 and 2 Setup submenu is used to select what input or alarm the GPO follows. If an alarm occurs on an input associated with the GPO, the GPO will change its polarity setting. If Follow Alarms is selected, the GPO will change its polarity setting whenever an alarm occurs on any input.

GPI Alarm Reporting Setup

The GPI Alarm Reporting Setup menu accesses the GPI Alarm Reporting Matrix. In the GPI Alarm Reporting Matrix select what functions each GPI Alarm (GPI Alarm 1 through 9) will trigger when an alarm is activated. Each alarm can be selected to trigger one or more of the following: LOG, SOUND, SNMP TRAP, GPI OUT 1, GPI OUT 2, FREEZE, and DATA CAPTURE.

Router Port

There is one RJ11 router control port located on the back panel. The port is used to control Harris RS series routers. The router can be switched manually or set to scan all inputs. The router can be set to continuously scan selected inputs searching for alarm conditions. All alarm conditions detected by the VTM Series will be logged on the display (maximum 200 alarms), or a PC to produce a continuous log file.

Router control is accessed in the SETUP menu under COMMUNICATIONS > ROUTER PORT. Under the Router Port menu are the following submenus:

- **INPUT SELECTION:** Use to select which input (A, B, C, or D) the router scans.
- **CONFIGURATION:** Use to DISABLE, ENABLED ROUTER, ENABLED SCANNER. ENABLED ROUTER will allow manual control, and ENABLED SCANNER will force the router to sequentially switch through all activated inputs.

- **ROUTER MODE CHANNEL:** Select the channel manually.
- **SCANNER MODE SEQUENCE:** Selects which channels are enabled for scanner mode.
- **DWELL TIME:** Use to pause the router on each input for the selected time. Each input of the router can also be given a unique name that will be placed in the log file when an alarm is detected on that input.
- **CHANNEL NAMES:** The inputs can be renamed by selecting using the Channel Rename screen.

Unit ID

The unit ID is the identification number of the VTM Series. It can be set to any number within a range of 1 to 99 and should be different than the identification numbers of other units in the same system configuration.

System Setup Menu

The System Setup menu is used to control the system configuration selections.

Panel and Preset Lockout

The Panel Lockout feature is used to disable front panel control until the proper password is entered. The Preset Lockout feature, located within the Panel Lockout menu, is used to prevent storing settings in selected presets.

Similar to the Panel Lockout feature, the Preset Lockout is also password protected. When a user locks a preset configuration into the VTM Series, it will not be able to be altered until the password is entered. The Presets are locked and unlocked using the Password screen, shown in **Figure 4-5**.

NOTE: The default password is 0-0-0.

Figure 4-5. Panel and Preset Lock/Unlock Screen



To lock or unlock the presets or front panel:

NOTE: Once Front Panel is selected to be locked out, the front panel is locked. Press the SETUP button to enter the password to return to the Setup menu.

1. Press the SETUP button to display the SETUP MENU.

2. Use the NAVIGATION buttons to move the cursor to the SYSTEM menu.
3. Press the ENT button.
4. Use the NAVIGATION buttons to move the cursor to PANEL LOCKOUT.
5. Press the ENT button. The Enter Password screen appears.
6. Use the UP and DOWN NAVIGATION buttons to select 0-9 (first digit in password).
7. Use the RIGHT NAVIGATION button to move the cursor to select the second password number.
8. Use the UP and DOWN NAVIGATION buttons to select 0-9 (second digit in password).
9. Use the RIGHT NAVIGATION buttons to move the cursor to the third password number.
10. Use the UP and DOWN NAVIGATION buttons to select 0-9 (third digit in password). When the password is correctly entered, LOCKED will change to UNLOCK.
11. Use the RIGHT and LEFT NAVIGATION buttons to move the cursor to select UNLOCK.
12. Press the ENT button.
13. Use the UP and DOWN NAVIGATION buttons to move the cursor to select the Preset Number or front panel.
14. Press the ENT button to toggle between Lock and Unlock on the highlighted Preset Number selection.
15. Repeat the previous two steps for any other selection needed to be made.
16. After the settings are complete, press the EXIT button to exit the menu.

(If the front panel was locked in the steps above) The front panel is locked once EXIT is pressed. Any button pressed besides the SETUP button will invoke the PANEL LOCKED OUT message. Subsequent presses of the SETUP button will invoke the ENTER PASSWORD setup screen. The panel will be unlocked and the Setup menu can only be accessed after a valid password has been entered.

To unlock the locked front panel:

NOTE: The default password is 0-0-0.

1. Press the SETUP button until the Enter Password Screen appears.
2. Use the UP and DOWN NAVIGATION buttons to select 0-9 (first digit in password).
3. Use the RIGHT NAVIGATION button to move the cursor to the second password number.
4. Use the UP and DOWN NAVIGATION buttons to select 0-9 (second digit in password).

5. Use the RIGHT NAVIGATION button to move the cursor to the third password number.
6. Use the UP and DOWN NAVIGATION buttons to select 0-9 (third digit in password). When the password is correctly entered, LOCKED will change to UNLOCK.
7. Press the RIGHT NAVIGATION button to select UNLOCK and press the ENT button to unlock the front panel. Press EXIT at any time to keep the front panel locked.

To change the password:

NOTE: The default password is 0-0-0.

1. Press the SETUP button to display the SETUP menu.
2. Use the NAVIGATION buttons to move the cursor to the SYSTEM SETUP menu.
3. Press the ENT button.
4. Use the NAVIGATION buttons to move the cursor to CHANGE PASSWORD.
5. Press the ENT button. The Enter Password screen appears.
6. Use the UP and DOWN NAVIGATION buttons to select 0-9 (first digit in the current password).
7. Use the RIGHT NAVIGATION button to move the cursor to the second password number.
8. Use the UP and DOWN NAVIGATION buttons to select 0-9 (second digit in the current password).
9. Use the RIGHT NAVIGATION button to select the third password number.
10. Use the UP and DOWN NAVIGATION buttons to move the cursor to select 0-9 (third digit in the current password). When the correct password is entered, LOCKED changes to UNLOCK will appear.
11. Use the RIGHT and LEFT NAVIGATION buttons to move the cursor to UNLOCK.
12. Press the ENT button. The Enter New Password screen appears. It is time to ENTER A NEW PASSWORD.
13. Use the UP and DOWN NAVIGATION buttons to select 0-9 (first digit in the new password).
14. Use the RIGHT NAVIGATION button to move the cursor to the second password number.
15. Use the UP and DOWN NAVIGATION buttons to select 0-9 (second digit in the new password).
16. Use the RIGHT NAVIGATION button to move the cursor to the third password number.
17. Use the UP and DOWN NAVIGATION buttons to select 0-9 (third digit in the new password).

18. Use the RIGHT NAVIGATION button to move the cursor to select ACCEPT.

19. Press the ENT button. The new password has been set.

Clock Display

The Clock Display menu is used to toggle the clock display on the Main Title Bar off and on.

Set Time

When selecting Set Time, the Enter New Time Screen, shown in **Figure 4-6**, appears. The Enter New Time screen is used to set the internal clock of the unit. Press the UP and DOWN NAVIGATION button to change the values of each time selection. Press the RIGHT and LEFT NAVIGATION buttons to move between the Hour, Minute, Second, Month, Day, Year, ACCEPT, and CANCEL selections. Once the internal date and time is entered, press ENT when the accept button is highlighted to save the settings.

Figure 4-6. Enter New Time Screen



Time Code Input

The Time Code Input is used to determine the Time Code Source for each format. The VTM Series can read LTC (Longitudinal Time Code) and DVITC (Digital Vertical Interval Time Code) based on the format selected. The Time Code Input menu has three submenus:

- ANALOG: reads LTC and VITC
- SD: reads LTC and DVITC
- HD: reads LTC, ANC LTC, ANC DVITC 0, and ANC DIVTC 1

DVITC for SD and VITC for NTSC and PAL are monitored on selected lines.

- After DVITC is selected, adjust the line selection in the DVITC LINE 525 or DVITC LINE 625 submenus to the selected line. The range for DVITC LINE 525 is adjustable from Line 10 to 30, and DVITC LINE 625 is adjustable from line 6 TO 30.
- After VITC is selected, adjust the line selection in the VITC LINE NTSC or VITC LINE PAL submenus to the selected line. The range for VITC LINE NTSC is adjustable from Line 10 to 30, and VITC PAL is adjustable from line 6 TO 30.

For more information on displaying Time code see Time Code on page 169.

Aural Alert

Aural Alert is used to enable and disable the audible tone that originates from inside the VTM Series. The Aural alert sounds when a minimum or maximum menu control value is reached. The default Aural Alert setting is ON.

Exit Bypass on Alarm

The Exit Bypass on alarm submenu is used to disable Bypass when an active alarm occurs.

Control Illumination

The Control Illumination submenu is used to control the brightness of the front panel button tally states.

Brightness

Set the brightness of the buttons in a low tally state using the Brightness submenu.

Contrast

The low tally state will never be brighter than the high tally state. The Contrast menu was created to avoid this issue. The Contrast submenu is used to set the brightness of the High Tally state. The brightness of the high tally state is determined by the contrast and brightness of the low tally state.

Auto Off

Set the Auto Off to turn off the front panel LEDs when no buttons are pressed after the designated Auto Off Time.

Auto Off Time

When Auto Off is enabled, the Auto Off Time is used to turn off the front panel LEDs when no buttons are pressed after 15 SECONDS, 30 SECONDS, 45 SECONDS, 1 TO 60 MINUTES.

Diagnostics (System Fault Log)

The System Fault Log, shown in **Figure 4-7**, is used to show the faults that occur within the system.

Figure 4-7. System Fault Log


SYSTEM FAULT LOG			
FAULT NAME	TIME	LENGTH	VALUE
FC390 Locked Rotor	09:12:17	00:01:52	1
Up/Down Keys To Navigate, EXIT To Exit			

File Navigator

NOTE: The FILE NAVIGATOR menu item does not appear if a USB removable drive is not connected to a USB port on the unit.

The File Navigator is used to control the presets and frame captures for the VTM Series. Any stored preset or frame capture can be stored onto the USB removable drive. Pressing the ENT button on the FILE NAVIGATOR menu item access the File Manager Screen, shown in **Figure 4-8**.

Figure 4-8. File Navigator Screen

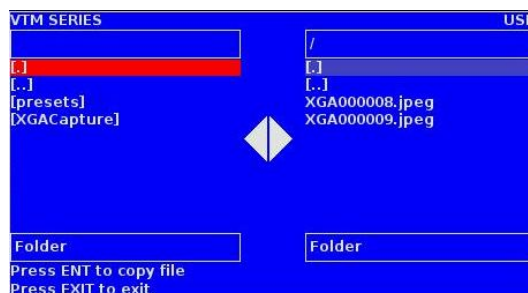

The left column of the File Navigator screen shows what is available to be transferred to the USB drive. The stored presets are located in the PRESETS folder, and the frame captures are located in the FRAME CAPTURE folder. Use the NAVIGATION buttons to move among the folders and files. Press the ENT button to enter a folder.

When a preset or XGA capture is selected, press the ENT button to copy the file over to the USB drive. When the ENT button is pressed, the Enter Name for Preset on USB Drive Screen appears. Press the UP/DOWN navigation buttons to change the character. Press the RIGHT/LEFT navigation buttons to move to the next character, ACCEPT, or CANCEL. Once the file is renamed, select ACCEPT and press ENT to copy the file to the USB drive. Press CANCEL to not copy the file. Pressing the EXIT button also will not transfer the file to the USB drive.

The right column shows what is stored on the USB memory device. The stored presets and XGA captures on the USB drive are shown in this column.

Flash Update from USB

NOTE 1: Presets are lost when performing a flash update. Ensure that the presets are saved on a USB storage device before flashing.

NOTE 2: The menu item will not appear if a USB memory device is not installed. Disregard the FAULT indication on the front panel during the flash update.

The FLASH FROM USB menu is used in coordination with a USB memory stick to update the unit. Attach the USB stick into the front or back of the unit. Access the SYSTEM > FLASH UPDATE FROM USB > PRESENT. Press the ENT button to proceed into flash mode. Flash update status is shown with the line-by-line programming and sector results. When complete, Flash Update Complete appears on the screen. Cycle the power to continue normal operation.

Feature Upgrade from USB

NOTE: The serial number on the device must match the serial number on the feature file. INSERT USB DEVICE WITH FEATURE UPGRADE appears when the serial number of the device does not match the serial number on the feature file.

The FEATURE UPGRADE FROM USB menu is used in coordination with a USB memory stick containing the feature file for the device to update the unit. Attach the USB stick into the front or back of the unit. Access the SYSTEM > FEATURE UPGRADE UPDATE FROM USB menu. Press the ENT button to proceed into feature upgrade mode. When complete, UPGRADE SUCCESSFUL appears on the screen. Cycle the power to continue normal operation.

About

The About Screen, shown in **Figure 4-9**, contains the model, serial number, module, device, and version. Press the EXIT, SETUP, ENT, LEFT NAVIGATION buttons, or press the LEFT/RIGHT CONTROL knob to exit from the screen.

Figure 4-9. About Screen

Model	VTM SERIES	
Serial Number	tvm950003	
MODULE	DEVICE	VERSION
CPU	Firmware	6.02
VPR	OPT 10	1.22
Slot 1	OPT EYE-S	1.27
	Firmware	N/A
Slot 2	OPT SDI-H	1.30
Audio Slot	A3-OPT 5 TL	1.06
	DSP	2.50
Fan Ctrl	FC390	2.00
Front Panel	Firmware	2.01
	PLD	1.00
RCU	Firmware	N/A
	PLD	N/A
OK		

Section 5 ♦ Alarm Descriptions

Setting Alarms

Most alarms monitor all lines of the video signal. The VITS alarm is an exception. The VITS alarm is used to monitor activity or the lack of activity on a particular line. The GAMUT alarm is more typical. The GAMUT alarm will monitor the entire active picture for errors over the selected limits chosen on the menu.

Limits are selected in the SETUP Menu by choosing a value using the UP/DOWN or CURVED ARROW knobs, or the UP or DOWN Navigation buttons.

Sensitivity and Duration are two general terms used in the alarm menus:

- Sensitivity

Sensitivity is set by Consecutive Error Samples (CES). When setting amplitude limits, a noise spike can exceed the limit while the video amplitude can be within the limit. With the CES set to a low number, a spike is detected and an alarm is displayed. Set the CES to a higher number to ignore the fast spike. Each CES occurs at 37ns intervals for SD and 13.5ns for HD. Use this as a guideline to select the appropriate CES value.

Not all alarms have CES associated with them; in such cases, use the duration to increase or decrease the general sensitivity.

- Duration

This value is used to determine how long an error must persist before it is reported. Set the duration to 0 to cause an error to be displayed as soon as the CES value is met.

Alarm Message Contents and Limitations

Figure 5-1. Sample Alarm Message (VTM Classic Mode Display)

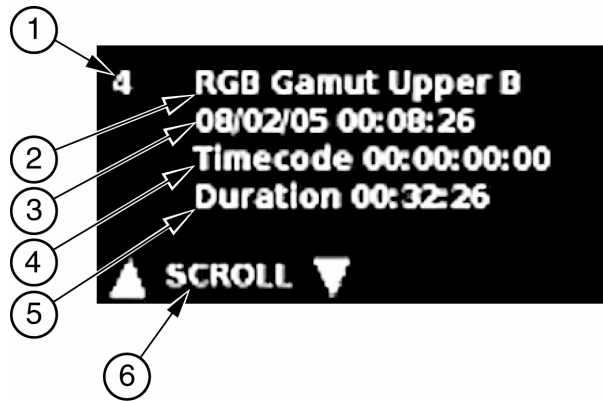


Table 5-1. Description of Sample Alarm Message

Key	Description
1	Index number, from 1-200
2	Error type, which describes the alarm
3	Date and time (the internal clock setting in month/day/year and hour:minute:second)
4	Time code, which is from the LTC/CLOCK, VITC, or D-VITC (shown in day:hour:minute:second:frame)
5	Duration, which is the length of time that the error occurred (shown in hour:minute:second)
6	Press the UP or DOWN NAVIGATION buttons to move up and down the alarm list.

When an alarm is first registered, it appears at the top of the alarm display area and is yellow. If the alarm is short term (i.e., two seconds or less), the alarm text reverts to the original graticule color after approximately two seconds. If the alarm continues longer than two seconds, the text remains yellow and the alarm duration is incremented. When the next alarm occurs, the previous alarm moves up one position.

The unit has enough memory for 200 alarms per input. When 200 different alarm events have occurred, alarm number 200 is dropped and the most recent alarm is tagged as 01.

Use the NAVIGATION UP and DOWN buttons to scroll through the alarm list. Press and hold ENT to erase the current group of alarms. A GPI output dry-contact closure can be used to alert other devices when an alarm occurs. Use the COMMUNICATIONS menu to setup the GPI.

Video Alarms Digital Descriptions

The Video Alarms Digital menu contents are listed below.

Format Change

The Format Change alarm is used to indicate that the video format has been changed.

Payload Identifier Mismatch (TVM-VTM-3GB only)

The Payload Identifier Mismatch alarm is used to indicate that the payload received from the input stream does not match the detected input format such as HD/SD and frame rate.

Loss of Payload Identifier (TVM-VTM-3GB only)

The Loss of Payload Identifier alarm is used to indicate when the video payload is not detected in the received data stream for a period in excess of the duration setting.

Digital Gamut

RGB Upper/Lower

The RGB Upper and Lower alarm occurs when any component of the transcoded RGB signal falls outside the upper or lower limits for a period in excess of the duration setting. The Sensitivity can be increased to provide immunity to fast transcoding spikes.

Lum Upper/Lower

The Luma Upper and Lower alarms scan the composite encoded signal derived from the selected digital input. The alarms occur when the luminance video falls outside the adjustable limits for a period in excess of the duration setting. The Sensitivity can be increased to provide immunity to fast noise spikes.

Peak Upper/Lower

The Peak Upper and Lower alarms scan the composite encoded signal derived from the selected digital input. The alarm occurs when the peak video falls outside the adjustable limits for a period in excess of the duration setting. The Sensitivity can be increased to provide immunity to fast noise spikes.

EDH – SD

Per SMPTE RP 165-1994; the EDH-SD alarm occurs when one or more errors are detected for a period in excess of the duration setting (Standard definition only).

CRC HD

The CRC HD alarm occurs when the internally calculated CRC value is different from the received CRC value (High definition only).

CRC Alarms

The following information is displayed when the CRC display is ON and an SD format is detected:

Display				Description
Time since Reset		00:00:00		Hr:min:sec, elapsed time since last reset
FF	CRC	Seconds	<i>value</i>	Full field CRC error in seconds
AP	CRC	Seconds	<i>value</i>	Active Picture CRC error in seconds
	F1	AP	CRC	CRC value (Check Sum) for active picture, field one
	F2	AP	CRC	CRC value (Check Sum) for active picture, field two
Embedded Audio			<i>value</i>	Detects how many groups of audio are available
Ancillary Data			Present	Detects other ancillary information
Format Errors				Detects a format error

The following information is displayed when the CRC display is ON and an HD format is detected:

Display				Description
Time since Reset		00:00:00		Hr:min:sec, elapsed time since last reset
	CRC	Error Free	<i>value</i>	Length of time in seconds CRC is error free
CHROMA				-
	Embedded Audio		<i>value</i>	Detects how many groups of audio are available
	Ancillary Data		Present	Detects other ancillary Chroma information
LUMA				-
	Ancillary Data		Present	Detects ancillary Luma information
Format Errors			Y* C*	Detects a format error

* Y=Luma and C=Chroma

The following are CRC Window Format Error types, which are further described in **Table 5-2**, and are displayed under FORMAT ERRORS when they are detected:

- SAV PLACED INCORRECTLY (sav)
- LINE LENGTH ERROR (line length)
- FIELD LENGTH ERROR (field length)
- RESERVED VALUES USED IMPROPERLY (reserved values)
- ANC DATA CHECKSUM ERROR (anc checksum)
- ANC DATA PARITY ERROR (anc parity)
- ANC DATA PLACEMENT ERROR (anc placement)
- ABSENCE OF SERIAL VIDEO INPUT (no video)

Press the ENT button to reset the CRC elapsed time to zero and clear the EDH errors.

Table 5-2. CRC Alarm Error Types

Error Type	Description
CRC ERRORED SECONDS	The integer number of seconds in which an EDH or CRC error has existed.
SAV PLACED INCORRECTLY	SAV is relative to EAV. The number of words is a constant for any given video format between EAV and SAV. EAV is detected and used as the reference. The correct number of words is counted, and then SAV is detected. The SAV Placed Incorrectly alarm occurs when a proper SAV sequence is not detected or if SAV is detected before the correct number of words between EAV and SAV.
LINE LENGTH ERROR	The Line Length Error occurs when there are an incorrect number of words between EAV and SAV.
FIELD LENGTH ERROR	The number of lines is constant between the B bit going high and the start of vertical blanking. The Field Length Error occurs when there is deviation in the line number count.
RESERVED VALUES USED IMPROPERLY	The Reserved Values Used Improperly alarm occurs when the eight most significant bits (SD) or all ten bits (HD) are all "1" or "0" in any place other than an EAV, SAV, or ancillary header.
ANCILLARY DATA CHECKSUM ERROR	The Ancillary Data Checksum Error occurs when the internal calculated CRC value is different from the received CRC value.
ANCILLARY DATA PARITY ERROR	The Ancillary Data Parity Error occurs when the internal calculated CRC value is different from the received CRC value.
ANCILLARY DATA PLACEMENT ERROR	The Ancillary Data Placement Error occurs if an ancillary header appears outside of blanking.
ABSENCE OF SERIAL VIDEO INPUT	The Absence of Serial Video Input error occurs when the signal in the serial video input is lost.

Loss of Carrier

The Loss of Carrier alarm occurs when there is no TRS (Timing Reference Signal) detected.

Loss of Video

The Loss of Video occurs when active video falls below the adjustable threshold for a period in excess of the duration setting.

Loss of Reference

The Loss of Reference alarm occurs when no sync signal is detected in the external reference for a period in excess of the duration setting. To select the appropriate external reference see Reference Selection on page 80.

Letterbox – SD

Letterbox is the top and bottom border surrounding the active video. The top border is defined as having video below the threshold on the set line and having video above on

the following line. The bottom border is defined as having video above the threshold on the previous line and video below the threshold on the set line. The Letterbox SD alarm is activated when either the top line or the bottom line deviates from the user settings (Standard definition only).

Pillarbox – HD

The PillarBox is the border to the right and left of the active video. The “End of Left Border” and “Start of Right Border” defines the set points when the video is below the threshold. If the video is outside of the threshold and CES values for the specified duration, the Pillar Box HD alarm occurs (High definition only).

Picture Shift

The Picture Shift alarm activates when the luma portion of the video does not exceed the amplitude threshold along any of the four borders of active video. The “Left/Right” and “Top/Bottom” border settings define the tolerance of the Picture Shift alarm. If one or more pixels are above the threshold for each of the four tolerance borders, no alarm will be declared. For interlaced video formats Picture Shift checks the first field only. For example, if a signal is 525/59.94 SDI video format, where “Left/Right” is set to 20 pixels, “Top/Bottom” is set to 4 lines, the threshold is set to 2 mV, and the “Duration” is set to 2 seconds, the alarm will be activated if pixels 1 through 20 or 701 through 720, or lines 1 through 4, or 240 through 244 of active video do not exceed the 2 mV threshold and exceeds the duration of 2 seconds.

Captioning

CC Not Detected – 608

The Closed Caption Not Detected 608 alarm is activated when the presence of EIA/CEA-608-B closed caption data on line 21(284) with valid parity bits is not detected for a period in excess of the duration setting.

CC Not Updating- 608

The Closed Caption Not Updating 608 alarm is activated when closed caption carrier is present and the EIA/CEA-608-B data word on line 21 is null for a period in excess of the duration setting.

CC Not Detected – 708

The Closed Caption Not Detected 708 alarm is activated when no valid DTVCC services are detected for a period in excess of the duration setting.

CC Not Updating – 708

The Closed Caption Not Updating 708 alarm is activated when data received for the active window through a DTVCC C0, G0, C1, G1 Code Set Mapping command is unchanging for a period in excess of the duration setting.

Teletext Not Detected – SD

The Teletext Not Detected SD alarm occurs when the presence of Teletext is not detected for a period in excess of the duration setting.

Teletext Not Updating – SD

The Teletext Not Updating SD alarm occurs when Teletext is not updated for a period in excess of the duration setting.

Subtitle Not Detected - SD

The Subtitle Not Detected alarm occurs when the presence of Subtitles is not detected for a period in excess of the duration setting.

Subtitle Not Updating – SD

The Subtitle Not Updating alarm occurs when Subtitles carrier is present and the subtitles are the same for a period in excess of the duration setting.

WSS (Widescreen Signaling) Not Detected

The Widescreen Signaling Not Detected alarm occurs when the presence of Widescreen Signaling for Widescreen Format is not detected for a period in excess of the duration setting.

XDS Not Detected - SD

The XDS Not Detected alarm occurs when the presence of XDS is not detected for a period in excess of the duration setting.

XDS Not Updating - SD

The XDS Not Updating alarm occurs when XDS is present and the data word is the same for a period in excess of the duration setting.

Eye Jitter

The Eye Jitter alarm occurs when the eye pattern jitter exceeds the threshold for a period in excess of the duration setting.

Timing Alarm

The Timing Alarm occurs when the Time and Line range(s) are exceeded for a period in excess of the duration setting.

Video Alarms Analog Descriptions

The Video Alarms Analog menu contents are listed below.

Loss of Signal

The Loss of Signal alarm occurs when no sync signal is detected for a period in excess of the duration setting.

Loss of Reference

The Loss of reference alarm occurs when no sync signal is detected in the external reference for a period in excess of the duration setting. To select the appropriate external reference see Reference Selection on page 80.

Loss of Video

The Loss of Video occurs when active video falls below the adjustable threshold for a period in excess of the duration setting.

Analog Gamut

Peak Upper

The Peak Upper alarm occurs when active video falls outside the upper limit for a period in excess of the duration setting. Peak video includes luminance and chrominance.

Peak Lower

The Peak Lower alarm occurs when active video falls outside the lower limit for a period in excess of the duration setting. Peak video includes luminance and chrominance.

Luma Upper

The Luma Upper alarm occurs when the luminance portion of the active picture falls outside the upper limit for a period in excess of the duration setting.

Luma Lower

The Luma Lower alarm occurs when the luminance portion of the active picture falls outside the lower limit for a period in excess of the duration setting.

Sync and Burst

H (Horizontal) Sync Upper

The H Sync Upper alarm occurs when the horizontal sync pulse falls outside the upper limit for a period in excess of the duration setting.

H (Horizontal) Sync Lower

The H Sync Lower alarm occurs when the horizontal sync pulse falls outside the lower limit for a period in excess of the duration setting.

Burst Upper

The Burst Upper alarm occurs when the peak absolute value of burst falls outside the upper limit for a period in excess of the duration setting.

Burst Lower

The Burst Lower alarm occurs when the peak absolute value of burst falls outside the lower limit for a period in excess of the duration setting.

Burst to Chroma Phase

The Burst to Chroma Phase alarm occurs when the relative phase between burst and a particular color on a selected line and location on the line exceeds a user-defined upper and lower phase tolerance for a period in excess of the duration setting.

For example, assume that the Vertical Interval Test Signal of color bars on line 17, field 2 is selected. Also, assume the line position is set to monitor the blue color packet with a range of 5° and duration of 0 seconds. If the phase error between burst and the blue vector point exceeds $\pm 5^\circ$, an alarm occurs.

Horizontal Blanking (H Blanking)

The Horizontal Blanking (H Blanking) alarm occurs when the time interval between the end of active video and the start of active video violates the specified limits for a period in excess of the duration setting. The limits are:

- NTSC: 10.7 to 11.1 μ s
- PAL: 11.8 to 12.2 μ s

For this measurement to be accurate, active video must be higher than 20 IRE (NTSC) or 350 mV (PAL).

Vertical Blanking

The Vertical Blanking alarm occurs if the number of lines during the vertical blanking period violates the selected width limit for a period in excess of the duration setting. The selectable widths are 20 Lines to 25 Lines for NTSC and 25 to 30 Lines for PAL.

SC/H Phase

The SC/H Phase alarm occurs when the phase angle of burst compared to the 50% point of the leading edge of horizontal sync on line 10 of field 1 (NTSC) or line 1 (PAL) exceeds the range setting for a period in excess of the duration setting. The range is $\pm 5^\circ$ to 90° in NTSC and $\pm 5^\circ$ to 45° in PAL.

VITS

The VITS alarm occurs when the selected lines become active or inactive as set by the amplitude threshold for a period in excess of the duration setting. One or more lines can be monitored, and they do not have to be successive. For example, line 17/E can be monitored for activity over 50 IRE while line 20/O is monitored for inactivity under 50 IRE. The threshold and duration settings are global.

Captioning

Closed Caption Not Detected - Analog

The Closed Caption Not Detected alarm is activated when the presence of a closed caption data word on line 21(284) with valid parity bits is not detected in a composite signal for a period in excess of the duration setting.

Closed Caption Not Updating - Analog

The Closed Caption Not Updating alarm is activated when closed caption carrier is present and the data word on line 21 is null in a composite signal for a period in excess of the duration setting.

Teletext Not Detected – Analog

The Teletext Not Detected - Analog alarm occurs when the presence of Teletext is not detected for a period in excess of the duration setting.

Teletext Not Updating – Analog

The Teletext Not Updating - Analog alarm occurs when Teletext carrier is present and the data word is the same for a period in excess of the duration setting.

XDS Not Detected – Analog

The XDS Not Detected - Analog alarm occurs when the presence of XDS is not detected for a period in excess of the duration setting.

XDS Not Updating – Analog

The XDS Not Updating - Analog alarm occurs when XDS is present and the data word is the same for a period in excess of the duration setting.

Time Code Alarm Descriptions

There are two type of Time Code Alarms: LTC and DVITC Time Code Alarms.

LTC Time Code Alarms

The LTC Time Code Alarms are listed below.

LTC Loss of Time Code

The Loss of Time Code alarm occurs when the peak-to-peak level of the LTC input signal falls below an adjustable limit for a period in excess of the duration setting.

LTC Time Code Level

The Time Code Level alarm occurs when the peak-to-peak level of the LTC input signal falls outside the user defined range limits for a period in excess of the duration setting.

LTC Time Code Framing

The Time Code Framing alarm occurs when the alignment of the start of LTC (ANSI/SMPTE 12M-1999) exceeds the range limit for a period in excess of the duration setting.

LTC Time Code Continuity

The Time Code Continuity alarm occurs when a break or interruption in the time-code count occurs.

LTC/VITC Compare (TC Sync)

The LTC/VITC (TC Sync) alarm occurs when LTC and VITC are compared and differ beyond the threshold (1 to 30 frames) selection for a period in excess of the duration setting.

DVITC Time Code Alarm Error Types

The DVITC Time Code Alarms are listed below.

DVITC Loss of Time Code

The DVITC Loss of Time Code alarm occurs when no DVITC Time Code in the video signal is detected for a period in excess of the duration setting.

DVITC Line

The DVITC Line alarm is used to select the line number on which the D-VITC time code is detected for the “D-VITC Continuity” and “D-VITC CRC” fields. When time code is not detected on the selected line number, the alarm activates.

DVITC Continuity

The DVITC Continuity alarm occurs when a break or interruption in the digital vertical interval time code (VITC) frames occur for a period in excess of the duration setting.

DVITC CRC

The DVITC CRC alarm occurs when the cyclic redundancy check (CRC) within the digital vertical interval time code field does not correlate with the embedded CRC for a period in excess of the duration setting.

TS Alarms Descriptions (TVM-VTM-ASI)

The TS Alarms menu contents are listed below.

Alarm Reporting Setup

The TS Alarm Reporting Setup menu is used to access the Alarm Reporting Matrix. In the Alarm Reporting Matrix select what functions each Alarm will trigger when an alarm is activated. An alarm occurrence can trigger a log indication, sound, SNMP trap, GPI OUT 1, GPI OUT 2, Freeze, and Data Capture.

Loss of Signal

The Loss of Signal alarm is activated when the signal carrier is not detected.

CRC Change

The CRC change alarm occurs when the selected table's CRC information changes. The selectable monitored tables are PAT, PMT, STT, MGT, VCT, RRT, EIT, and ETT.

ETR 290 1st Priority

The ETR 290 1st Priority menu contains the TS Sync Loss alarm, Sync Byte Error alarm, PAT Error alarm, Continuity Count Error alarm, PMT Error alarm, and PID Error alarm.

TS Sync Loss

The TS Sync Loss alarm activates when two or more consecutive corrupted sync bytes occur for a period in excess of the duration setting.

Sync Byte Error

Sync Byte Error activates as soon as the correct sync byte (0x47) does not appear after 188 or 204 bytes.

PAT Error

The PAT Error alarm activates when the PAT table is missing for a period in excess of the duration setting.

Continuity Count Error

The Continuity Count Error alarm activates on "Incorrect Packet Order" and "Lost Packet."

PMT Error

The PMT Error alarm occurs when there is no PMT and the corresponding program is not decodable.

PID Error

A Packet Identifier (PID) error occurs when a data stream for each PID is not identified for a period in excess of the range setting.

ETR 290 2nd Priority

The ETR 290 2nd Priority menu contains the Transport Error, CRC Error, PCR Error, PCR Accuracy Error, PTS Error, and CAT Error alarm settings.

Transport Error

The Transport Error alarm activates when erroneous transport stream packets are detected. The counter is intended for statistical evaluation of the errors.

CRC Error

The Cyclic Redundancy Check (CRC) checks for the Program Access Table (PAT), Conditional Access Table (CAT), Program Map Table (PMT), Service Description Table (SDT), Network Information Table (NIT), Bouquet Association Table (BAT), Time Offset Table (TOT), Event Information Table (EIT), System Time Table (STT), Master Guide Table (MGT), Virtual Channel Table (VCT), Region Rating Table (RRT), and the Extended Text Table (ETT). A CRC Error alarm indicates if the content of any selected table is corrupted.

PCR Error

A Program Clock Reference (PCR) is used to re-generate the local 27 MHz system clock. If the PCR does not have sufficient regularity, the clock can jitter or drift and the receiver/decoder can become unlocked. When irregularities occur outside the PCR Error ranges, the PCR Error alarm activates. In Digital Video Broadcasting (DVB), a repetition period of not more than 40 ms is recommended.

PCR Accuracy

A PCR Accuracy Error occurs when the synthesized color falls outside the set range. A PCR accuracy of ± 500 ns is intended to be sufficient for the color subcarrier to be synthesized from the system clock.

PTS Error

Presentation time stamps (PTS) determine the time when a picture is shown on the screen. A PTS Error occurs when PTS is not detected in a signal. The PTS should occur at least every 700 ms. The PTS are only accessible if the transport stream is not scrambled.

CAT Error

The Condition Access Table (CAT) is the pointer to the Entitlement Management Message (EMM) associated with the CA system(s) that it uses. If the CAT is not present, the receiver is not able to receive management messages, and a CAT Error alarm activates.

ETR 290 3rd Priority

The ETR 290 3rd Priority menu contains the NIT Actual Error, NIT Other Error, SDT Actual Error, SDT Other Error, EIT Actual Error, EIT Other Error, EIT PF Error, Unreferenced PID Error, Repetition Error, Base PID Error, Buffer Errors, Empty Buffer Error, and Data Delay Error alarms.

NIT Actual Error (DVB only)

The NIT Actual Error alarm activates for the following reasons:

- The NIT Error occurs when the Network Information Table is not detected for the set range.
- The NIT Error occurs when two sections of the Table ID occur faster than the set Short Range.
- The NIT table contains an invalid ID. The NIT table IDs must contain a valid ID. The IDs 0x40, 0x41, 0x72 must be present at PID (Packet Identifier) 0x0010.

NIT Other Error (DVB only)

The NIT Other Error alarm activates when Network Information Table sections with the same number appear slower than the repetition rate.

SDT Actual Error (DVB only)

The SDT Actual Error alarm activates for the following reasons:

- The SDT Error occurs when the Service Description Table is not detected for the set range.
- The SDT Error occurs when two sections of the Table ID occur faster than the set Short Range.
- The SDT table contains an invalid ID. The SDT table IDs must contain a valid ID. The IDs 0x42, 0x46, 0x4A, and 0x72 must be present at PID 0x0011.

SDT Other Error (DVB only)

The SDT Other Error alarm activates when Service Description Table sections with the same number appear slower than the repetition rate.

EIT Actual Error (DVB only)

The EIT Actual Error alarm activates for the following reasons:

- The EIT Error occurs when section zero (S0) or section one (S1) of the Event Information Table is not detected for the set range. The range parameter is independent for each section.
- The EIT Error occurs when two sections of the Table ID occur faster than the set Short Range.
- The EIT table contains an invalid ID. The EIT table IDs must contain a valid ID. The IDs 0x4E, 0x6F, or 0x72 must be present at PID 0x0012

EIT Other Error (DVB only)

The EIT Other Error alarm activates when Event Information Table sections (S0 or S1) with the same number appear slower than the repetition rate. The range parameter is independent for each section.

EIT PF Error (DVB only)

The EIT table contains two sub tables: section 0 (EIT-P) and section 1 (EIT-F). If one sub table is present, then the other table must be present. The EIT PF Error alarm occurs if section 0 (EIT-P) or section 1 (EIT-F) is missing.

Unreferenced PID Error

A PID is found in each packet and should be referenced in the PMT (Program Map Tables) or CAT (Conditional Access Table). The alarm activates when a PID that was not referenced in the PMT or CAT occurs.

Repetition Error

The Repetition Error alarm occurs when one of the following tables falls outside the maximum repetition rate or range: Running Status Table (RST), Time and Data Table (TDT).

RST Enable and Repetition

The RST table activates the Repetition Error alarm when the appearance of the Running Status Table falls outside the maximum repetition rate. Also, the RST table IDs must contain a valid ID. The IDs 0x70 or 0x72 must be present at PID 0x0013. The RST Error also occurs when the table ID is not a valid ID.

TDT Enable, TDT Short Range, and TDT Range

The TDT table activates the Repetition Error alarm for the following reasons:

- The TDT Error occurs when the TDT is not detected for the set range.
- The TDT Error occurs when two sections of the Table ID occur faster than the set Short Range.
- The TDT table contains an invalid ID. The TDT table IDs must contain a valid ID. The IDs 0x70, 0x72, or 0x73 must be present at PID 0x0014.

MGT Range

The MGT table activates the Repetition Error alarm when the appearance of the Master Guide Table falls below the minimum repetition rate.

STT Repetition

The STT table activates the Repetition Error alarm when the appearance of the System Time Table falls below the minimum repetition rate.

RRT Repetition

The RRT table activates the Repetition Error alarm when the appearance of the Rating Region Table falls below the minimum repetition rate.

VCT Repetition

The VCT table activates the Repetition Error alarm when the appearance of the Virtual Channel Table falls below the minimum repetition rate.

EIT Repetition

The EIT Error alarm activates when the appearance of the Event Information Table falls below the minimum repetition rate.

Base PID Error

The Base PID Error alarm occurs when a table other than the following tables appear at PID 0x1FFB: MGT, CVCTR, TVCT, STT, DCCT, DCC-SCT, and/or RRT. The table IDs associated with these tables are 0xC7, 0xCD, 0xC4, 0xC8, 0xC9, 0xD3, or 0xD4.

Buffer Errors

The Buffer Errors alarm occurs when an underflow or an overflow of buffers occur in the MPEG-2 reference decoder for the selected program. The buffers are the Transport Buffer (TB), Transport Buffer System Buffer (TBSB), Multiplexing Buffer (MBB), Elementary Stream Buffer (EBB), Main Buffer (BB), and PSI Input Buffer (BSB).

Empty Buffer Error

The Empty Buffer Error occurs when the Transport Buffer is not empty at least once per second.

Data Delay Error

The Data Delay Error occurs when the data through the TSTD buffer is delayed for more than one second. Also, the Data Delay Error can occur when a delay in the data through the TSTD occurs for more than one minute.

Section 6 ♦ External Control

Using the Keyboard Commands

Table 6-1 lists the keyboard commands used for remote operation of a single VTM Series or multiple VTM Series units with a USB keyboard connected.

Table 6-1. Keyboard Commands

Function	Keystroke	Description
Input	A, a	Selects INPUT A
Input	B, b	Selects INPUT B
Input	Alt+A	Selects INPUT A+B
Input	C, c	Selects INPUT C
Input	D, d	Selects INPUT D
Input	Alt+C	Selects INPUT C+D
Bypass	Ctrl+B	Toggles Bypass
EXT	X, x	Toggles Internal/External Reference
DISP	J, j	Toggles Frozen/Live Display
SDI	K, k	Toggles Frozen/Live data display
FULL	F, f	Toggles the selected quadrant full-screen/quad screen
MLT	M, m	Toggles Multi-mode/Normal-mode
UL	1	Selects the Upper Left Quadrant
UR	2	Selects the Upper Right Quadrant
LL	3	Selects the Lower Left Quadrant
LR	4	Selects the Lower Right Quadrant
WFM	W, w	Selects the Waveform display in the current quadrant
VECT	E, e	Selects the Vector display in the current quadrant
AUDIO	U, u	Selects the Audio display in the current quadrant
PICT	I, i	Selects the Picture display in the current quadrant
ALARM	9	Selects the Alarm display in the current quadrant
GAMUT	G, g	Selects the Gamut display in the current quadrant
TIMING	T, t	Selects the Timing display in the current quadrant
EYE	Y, y	Selects the Eye display in the current quadrant
OPT	O, o	Selects the Option display in the current quadrant
H	H, h	Selects the Horizontal Sweep mode
V	V, v	Selects the Vertical Sweep mode
MAG	N, n	Changes the horizontal magnification
STEP	S, s	Steps through the available gain selections
VAR	Q, q	Toggles the variable gain mode

Table 6-1. Keyboard Commands

Function	Keystroke	Description
ZOOM	Z, z	Cycles through the Zoom modes
1	F1	Selects Preset 1
2	F2	Selects Preset 2
3	F3	Selects Preset 3
4	F4	Selects Preset 4
5	F5	Selects Preset 5
6	F6	Selects Preset 6
7	F7	Selects Preset 7
8	F8	Selects Preset 8
▲	↑	Up Navigation button
►	→	Right Navigation button
▼	↓	Down Navigation button
◀	←	Left Navigation button
ENT	Enter	Enter button
SETUP	Home	Toggle Setup mode
EXIT	End	Exit menu
LINE	L, l	Toggle Line Select
PHASE	P, p	Toggle Phase control
CURS	R, r	Cycle through Cursor control
Curved Arrow CW	>	Curved Arrow knob clockwise rotation
Curved Arrow CCW	<	Curved Arrow knob counter-clockwise rotation
Curved Arrow Push	/	Curved Arrow knob push
↑ CW	Page Up	Vertical knob clockwise rotation
↑ CCW	Page Down	Vertical knob counter-clockwise rotation
↑ Push	Insert	Vertical knob push
↔ CW	]	Horizontal knob clockwise rotation
↔ CCW	[	Horizontal knob counter-clockwise rotation
↔ Push	\	Horizontal knob push
Cold Start	Ctrl+Alt+Del	Cold Start

SpyderWeb II

The *SpyderWeb II*[™] Unattended Networked Monitoring System is used to monitor and control VTM/TVM series devices from a single PC at a local or remote location. After the installation of a Harris series device, the Ethernet port can be connected directly to the Ethernet port of a PC.

SpyderWeb II has three basic functions:

- Remote control of the VTM/TVM

- Gather and organize alarm information generated by VTM/TVM
- Initiate, display, and transfer frame captures from the VTM/TVM

SpyderWeb II uses a network connection for monitoring and control of up to 30 VTM/TVM series units. The *SpyderWeb II* program runs cooperatively with other Windows[®] programs. It runs “in the background” of a PC using a Windows operating system, allowing use of the PC for other tasks. *SpyderWeb II* alarms the user of any problems detected in any of the connected VTMs/TVMs.

Browser Interface


The website for each unit is accessed by pointing the web browser at the VTM/TVM IP address. Before the default web screen appears, a password must be entered to access the instrument. Each password allows specific privileges. The following passwords are case-sensitive:

- **VTMUser:** Allows read-only access to the instrument
- **VTMSysAdmin:** Allows read/write access to instrument
- **VTMAdmin:** Allows read/write access to instrument.

Once the password has been entered, the default web page (the ABOUT Screen), is the first screen that appears. The screen indicates the model number, version, serial number, and what is installed in each slot of the instrument.

A sample Web Remote Display is shown in **Figure 6-1**, and described in **Table 6-3**. The screen is split into two sections. The sections are the Tab/Tab details section and the Web RCU section.

Figure 6-1. Sample Web Remote Display

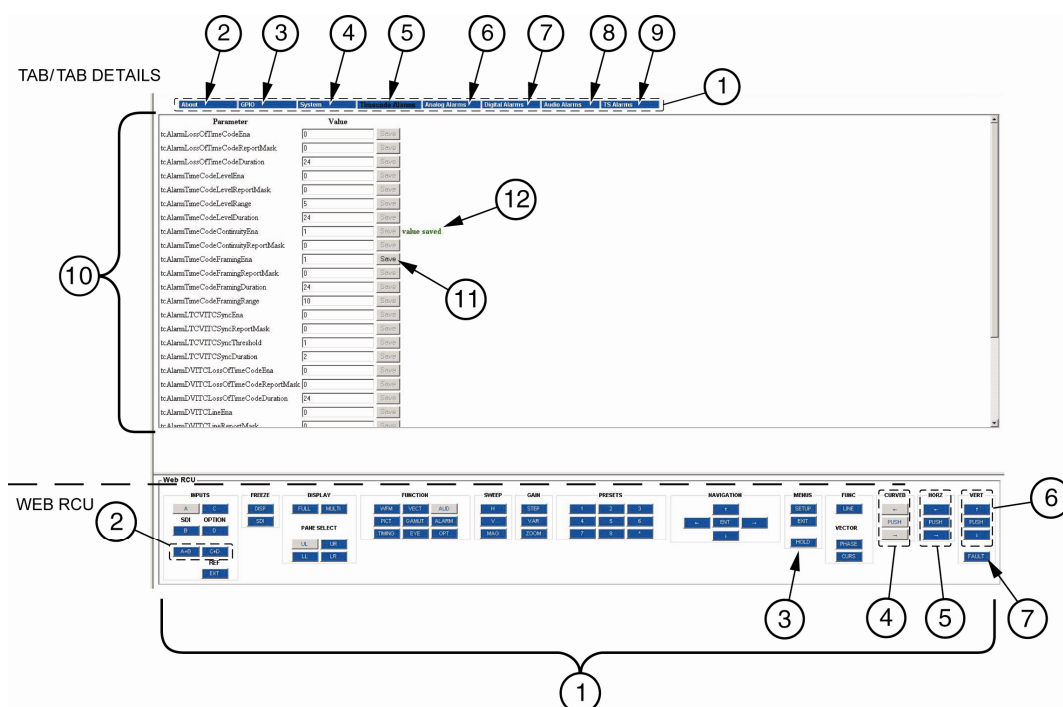

Tab/Tab Details

Clicking the Tab at the top of the screen will link to the appropriate tab page, as shown in the example in **Figure 6-1**. **Table 6-2** describes the fields shown in the Tab/Tab Details section.

Table 6-2. Tab/Tab Details Description

Key	Field	Description
1	WEB FUNCTION TABS	Click the Tab to access the appropriate Tab page for the specified tab function.
2	ABOUT	The ABOUT tab is a read-only screen that contains the Firmware Version, VPR ID, Slot 1 ID, Slot 2 ID, Audio ID, Display firmware version, Panel version, RCU version, and serial number information. This is similar to the ABOUT screen described on page 182.
3	GPIO	The GPIO tab displays the GPI Alarm Rename screen. All 9 GPI Alarm names can be changed on this screen. There is a 16-character limit for each GPI Alarm Name. This screen is similar to the section on GPI Input Function and GPI Alarm Names on page 174.
4	SYSTEM	The System Screen is used to rename the Input Source IDs and indicate the number of current monitored alarms. The Input Source ID is described on page 162. The number of current monitored alarms field is a read-only display that indicates the number of active alarms for the selected input. This field does not indicate the alarms for all the inputs at the same time.
5	TIMECODE ALARMS	The Time Code Alarms Screen indicates the Alarm Enable and Parameter Settings field for each Time Code Alarm. The Enable Field is set with a "0" for Disable Alarm or a "1" for Enable Alarm. See Table 4-10 on page 151 for the list of alarm parameters.
6	ANALOG ALARMS	The Analog Alarms Screen indicates the Alarm Enable and Parameter Settings field for each Analog Video Alarm. The Enable Field is set with a "0" for Disable Alarm or a "1" for Enable Alarm. See Table 4-9 on page 146 for the list of alarm parameters.
7	DIGITAL ALARMS	The Analog Alarms Screen indicates the Alarm Enable and Parameter Settings field for each Digital Video Alarm. The Enable Field is set with a "0" for Disable Alarm or a "1" for Enable Alarm. See Table 4-8 on page 141 for the list of alarm parameters.
8	AUDIO ALARMS	The Audio Alarms Screen indicates the Alarm Enable and Parameter Settings field for each Audio Alarm. The Enable Field is set with a "0" for Disable Alarm or a "1" for Enable Alarm. See the <i>A³-OPT 2, A³-OPT 3, A³-OPT 5, A³-4004, and A³-OPT 3/5-TL Installation and Operation Handbook</i> for the complete list of audio alarms for the selected option.
9	TS ALARMS	The TS Alarms Screen indicates the Alarm Enable and Parameter Settings field for each TS Alarm. The Enable Field is set with a "0" for Disable Alarm or a "1" for Enable Alarm. See Table 4-11 on page 152 for the list of alarm parameters.
10	TAB PAGE	Lists all the fields associated with the selected tab. To see the latest values of the instrument for the selected TAB PAGE press the F5 button to refresh the screen.

Table 6-2. Tab/Tab Details Description

Key	Field	Description
11	SAVE Button	The SAVE button is used to save the changed parameter values for the selected field. The SAVE button will not be enabled for any field until the field parameter changes. Once the SAVE button is enabled, click the SAVE button to save the changes.
12	VALUE CHANGE INDICATION	Shown as VALUE SAVED or COULD NOT SAVE VALUE. This appears after the SAVE button is pressed. It will remain on the screen until another tab or the refresh button (F5) is pressed.

Web RCU

The Web RCU is located at the bottom of the screen, as shown in **Figure 6-1**. The fields shown in the Tab/Tab Details section are described in **Table 6-3**.

The button colors in the Web RCU section provide the following indications on the status of the instrument:

- **WHITE:** The button is in use (similar to the high tally indication on the front panel).
- **BLUE:** The button is not in use (similar to low tally indications on the front panel).

Table 6-3. Web Remote Display Description

Key	Field	Description
1	WEB RCU (Virtual Control Panel)	The WEB RCU is the virtual front panel controls for the VTM/TVM instrument. All the buttons relate to specific buttons on the front panel. There are some slight differences to the WEB RCU that differ from the actual front panel of the instrument. Those differences are listed below.
2	A+B, C+D Buttons	Press to select INPUT A and B or INPUT C and D simultaneously.
3	HOLD Button	Some functions of the VTM/TVM instrument require that certain buttons need to be pressed and held. Because buttons on the virtual control panel cannot be physically pressed and held, the HOLD button on the Virtual Control Panel is used to hold the next selected button.
4	CURVED (Arrow) BUTTONS	▪ Pressing the RIGHT ARROW button is similar to turning the CURVED ARROW knob to the right (up). ▪ Pressing the LEFT ARROW button is similar to turning the CURVED ARROW knob to the left (down). ▪ Pressing the PUSH button is similar to pressing the CURVED ARROW knob to perform the selected knob function according to the menu or pane selected.
5	HORIZONTAL BUTTONS	▪ Pressing the UP ARROW button is similar to turning the RIGHT/LEFT KNOB to the right (right). ▪ Pressing the DOWN ARROW button is similar to turning the RIGHT/LEFT knob to the left (left). ▪ Pressing the PUSH button is similar to pressing the RIGHT/LEFT knob to perform the selected knob function according to the menu or pane selected.

Table 6-3. Web Remote Display Description

Key	Field	Description
6	VERTICAL BUTTONS	- Pressing the RIGHT ARROW button is similar to turning the UP/DOWN knob to the right (up). - Pressing the LEFT ARROW button is similar to turning the UP/DOWN knob to the left (down). - Pressing the PUSH button is similar to pressing the UP/DOWN knob to perform the selected knob function according to the menu or pane selected.
7	FAULT BUTTON	The fault button is used to indicate when a fault occurs in the VTM/TVM instrument. Pressing this button has no effect.

SNMP Communications

A Management Information Base (MIB) is an object database that can be monitored by a Network Management System (NMS). The protocol standardized for communicating MIB objects between an Agent and a Network Management System is the Simple Network Management Protocol (SNMP).

An object in the VTM Series MIB represents each VTM Series parameter and status, and each object can be referred to by a numeric designation called an Object ID (OID). The root OID (Enterprise ID) for Videotek MIBs is 1.3.6.1.4.1.10039. The full MIB tree is:

```
iso(1).org(3).dod(6).internet(1).private(4).enterprises(1).10039.videotekMIB(1).vtRelease(10).vtVTMSeries(1)
```

Additionally, the VTM Series supports SNMPv1 and SNMPv2c traps. The VTM Series MIB branch is called vtVTMSeries. The VTM Series MIB can be found on the SNMP Support CD that is supplied with the instrument.

Section 7 ♦ Troubleshooting



CAUTION: These instructions are for use by qualified personnel only. To reduce the risk of electric shock, do not perform this installation or any servicing unless you are qualified to do so. Refer all servicing to qualified service personnel.

NOTE: When power is applied to the unit, the display shows the startup screen for about 45 seconds.

If the VTM Series is not functioning properly, first verify that:

- The VTM Series is connected to a power source (90–264 VAC, 50/60 Hz nominal).
- All cables are correctly connected (see Section 2, “Installation”).

Initial difficulties with operation or display can be due to improper setup. Review the SETUP MENU (see Section 3, “Operation”) to ensure that the proper adjustments have been made for the signal requirements.

Cold Starting the VTM Series

NOTE: A cold start resets all front panel and Setup menu selections to the factory-default settings. All user settings are lost. See Section 3, “Operation,” for the factory-default settings.

If a problem persists after the cables are correctly connected and the unit is set up, perform a Cold Start. Two procedures can cold start the VTM Series. Only one procedure needs to be performed to cold start the unit. The first type of cold start procedure is a front panel Cold Start, as described below. The second type of cold start procedure is a Warm Start that is described on page 205. The third type of cold start is a Cold Start after a VFlash update that is described on page 206.

The Ethernet default settings for the VTM Series are:

IP: 192.0.0.100

Subnet Mask: 255.255.255.192

Gateway: 0.0.0.0

Cold Start

The Front Panel Cold Start procedure is a cold starting procedure that does not require the power to be disconnected from the unit. To perform a Front Panel Cold Start:

1. Push and hold the SETUP button, UP/DOWN knob, and RIGHT/LEFT knob. For a minimum of five seconds. The Cold Start message appears on the screen.
2. Once the message appears, the cold start is complete.

Warm Start

The Warm Start procedure is similar to a cold start. This reset will perform a cold start on the unit, but will not erase the Presets from memory. To perform a Warm Start:

1. Push and hold the SETUP button and CURVED ARROW knob for a minimum of five seconds until the Warm Start message appears on the display.
2. Once the message appears, the Warm start is complete.

Cold Start after VFlash

After a VFlash update is performed, cycle the power and perform a cold start to continue. To perform a Cold Start after a VFlash update:

1. Unplug the power to the VTM/TVM device and wait 30 seconds.
2. Plug the power back into the device while pushing and holding the SETUP button, UP/DOWN knob, and RIGHT/LEFT knob. Hold the buttons until the display appears.
3. Once the quad display appears, the cold start is complete.

Problems, Causes, and Solutions

Table 7-1. VTM Series: Problems, Causes, and Solutions

Problem/Symptom	Possible Cause	Solution or Explanation
No display on external XGA monitor	The monitor is not powered up.	Check to see that the monitor is plugged in and powered up.
	The full-screen picture display is selected but no signal is present on the input selected.	Press DISPLAY to de-select the full-screen picture display.
Display on External XGA monitor is not centered	The XGA monitor is not correctly adjusted.	Use the monitor controls to center the display.
Waveform not locked when External Reference (EXT REF) is selected	The video signal is too low in amplitude or the sync edge is too noisy.	Verify that the External Reference signal is of sufficient amplitude.
	EXT REF is selected but there is no reference input, or the External Reference is non-synchronous.	Select Internal Reference (INT REF) and/or verify that the External Reference signal is synchronous.
Problems displaying HD or SD inputs	Inputs not terminated.	Terminate Inputs
Waveform not locked when External Reference (EXT REF) is selected (cont)	External Reference inputs are not connected properly for the configuration.	Check that the external reference configuration is in the expected mode (Loop or Split). If in loop mode, there should only be one input signal. If in split mode, the Blackburst signal should be applied to the REF A input, while a Tri Level signal should be applied to the REF B input.
Audio level reading too low	The input reference level is not correctly set.	Use the SETUP MENU to check the input reference level setting.

Table 7-1. VTM Series: Problems, Causes, and Solutions

Problem/Symptom	Possible Cause	Solution or Explanation
When displaying an A&B or C&D parade, the second display is not locked or is offset	The two signals are not genlocked or are not timed.	Genlock or time the signals.
Eye Pattern not clear	There is excessive cable length.	Add digital DA to cable run. Add reclocking DA to cable run.
	There is excessive jitter.	Source is causing jitter.
Picture width not correct	The aspect ratio is not set correctly.	Change aspect ratio in the setup menu.
Input switches by itself	The router control is on.	Turn off router control in the setup menu.
No communications on remote (RCU) port	The baud rate is not correct.	Select the proper RCU baud rate.
No communications on Ethernet port	The IP address is incorrect.	Provide the correct IP address in setup menu.
	Incorrect Ethernet cable.	For a direct connection, use a crossover cable. For a network connection, use a standard Ethernet cable.

If the problem still exists after troubleshooting the VTM Series, see “Service and Support” on page 11 for further instructions.

This page is intentionally blank.

Appendix A ♦ Specifications

Specifications are subject to change without notice.

Video Input Specifications: 3Gb/s/HD-SDI/SD-SDI Option

Item	Specification
Digital inputs	Two (2) dual standards inputs accepting Standard definition, SMPTE 259 MC formats or High definition SMPTE 292M, 372M, 424M, 425M-AB formats including: 525/59.94, 625/50, 1080i/60, 1080i/59.94, 1080i/50, 1080p/60, 1080p/59.94, 1080p/50, 1080p/30, 1080p/29.97, 1080p/25, 1080p/24, 1080p/23.98, 1080/30sF, 1080/29.97sF, 1080/25sF, 1080/24sF, 1080/23.98sF, 720p/60, 720p/59.94, 720p/50, 720p/30, 720p/29.97, 720p/24 Hz, 720p/23.98, Format Standard Dual Link SMPTE 372M 4:4:4 (YCbCr) 10 bit
Data rate	270 MB/s, 1.485 Gb/s, 2.97 Gb/s, auto detect; also div by 1.001 rates
Connectors	4 BNCs, active looping inputs 1 BNC monitor output
Level	800 mV, nominal source amplitude
Input cable equalization	Up to 80 meters of Belen 1694A from 1.485 Gb/s to 2.97 Gb/s Up to 100 meters of Belden 8281 at 1.485 Gb/s Up to 250 meters of Belden 8281 at 270 Mb/s
Return loss	≤ -15 dB 5 MHz to 1.485 GHz ≤ -10 dB 1.485 GHz to 2.97 GHz
Monitor output	Follows the selected digital input
Monitor output data rate	270 Mb/s, 1.485 Gb/s and 2.97 Gb/s
Monitor output connector	BNC
Monitor output level	800 mV, nominal

Video Input Specifications: HD-SDI/SD-SDI Option

Item	Specification
Digital inputs	Two (2) dual standards inputs accepting Standard definition, SMPTE 259 MC formats or High definition SMPTE 292M, 372M, formats including: 525/59.94, 625/50, 1080i/60, 1080i/59.94, 1080i/50, 1080p/30, 1080p/29.97, 1080p/25, 1080p/24, 1080p/23.98, 1080/30sF, 1080/29.97sF, 1080/25sF, 1080/24sF, 1080/23.98sF, 720p/60, 720p/59.94, 720p/50, 720p/30, 720p/29.97, 720p/24 Hz, 720p/23.98, Format Standard Dual Link SMPTE 372M 4:4:4 (YCbCr) 10 bit
Data rate	270 MB/s, 1.485 Gb/s auto detect ; also div by 1.001 rates
Connectors	4 BNCs, Hi-Z passive looping 4 BNCs, active looping with option EYE-H
Level	800 mV, nominal source amplitude
Input EQ	Up to 100 meters of Belden 8281 at 1.485 Gb/s Up to 250 meters of Belden 8281 at 270 Mb/s

Video Input Specifications: HD-SDI/SD-SDI Option

Item	Specification
Return loss	≤ -25 dB 100 kHz to 270 MHz ≤ -15 dB 5 MHz to 1.485 GHz
Monitor output	Follows the selected digital input
Monitor output data rate	270 Mb/s and 1.485 Gb/s
Monitor output connector	BNC
Monitor output level	800 mV, nominal

Video Input Specifications: SD-SDI Option

Item	Specification
Digital inputs	Two (2) SMPTE 259M-C inputs, auto detect 525/59.94 and 625/50
Data rate	270 Mb/s auto detect
Connectors	Hi-Z looping 4 BNCs, active looping, option EYE-S
Level	800 mV, nominal source amplitude
Input cable equalization	Up to 250 meters of Belen 8281 at 270 Mb/s
Return loss	≤ -25 dB 100 kHz to 270 MHz
Monitor output	Follows the selected digital input
Monitor output data rate	270 Mb/s
Monitor output connector	BNC
Monitor output level	800 mV, nominal

Video Input Specifications: Analog Option

Item	Specification
Analog inputs (C and D only)	Two (2) NTSC/PAL composite video auto detect
Signal level	1V p-p
Input impedance	Hi-Z, looping
Return loss	≤ -45 dB 100 kHz to 5 MHz

Reference Input Specifications

Item	Specification
Inputs	Analog Blackburst, NTSC/PAL composite video, Tri-level sync auto detect per SMPTE 274M
Levels	286 mV p-p ± 6 dB (Blackburst NTSC) 300 mV p-p ± 6 dB (PAL sync and burst) 600 mV p-p ± 3 dB (Tri level Sync)
Impedance	Selectable Hi-Z looping or 75Ω terminating

EYE and Jitter/Frequency Patterns

Item	Specification
Eye display input	Displays pre-equalized waveforms
EYE display types	- SD: 3 eye or 10 eye - HD: 3 eye or 20 eye
EYE horizontal mag	- x1 - SD/HD = 3 eye displayed - SD = 10 eyes displayed - HD = 20 eyes displayed - x5 - SD/HD = 3/5 eye displayed - SD = 2 eyes displayed - HD = 4 eyes displayed - x10 - SD/HD = 3/10 eye displayed - SD = 1 eye displayed - HD = 2 eyes displayed
EYE amplitude display accuracy	± 5% @ 800mV input level
Measurement analog bandwidth	50 kHz to 2.25 GHz -3 to +1 dB relative to 750 MHz
Jitter high pass filters	- 3 db response points <i>(For EYE and jitter / frequency displays)</i> 10 Hz ± 2 Hz 100 Hz ± 10 Hz 1 KHz ± 100 Hz <i>(For jitter / frequency displays, option JEM, digitally filtered)</i> 10KHz ± 500 Hz 100 KHz ± 5 KHz <i>Jitter / frequency display follows selected eye pattern high pass filter select (10 Hz, 100 Hz, or 1 kHz)</i>
Jitter overshoot	≤ 20% of amount on input between high pass filter -3 dB frequency to 10X all high pass filter bandwidths
Intrinsic jitter	≤ 70 ps for HD ≤ 150 ps for SD <i>Jitter displayed with ideal input, default display settings with cursor measurement and 1 KHz filter selection, including crosstalk</i>
Intrinsic wander	≤ 150 ps for HD ≤ 300 ps for HD <i>With 10 Hz filter, observed over 1 hour after warm up.</i>
Lock-up time	≤ 1 second 1 KHz loop filter ≤ 5 seconds 10 Hz loop filter
Jitter display type Option JEM only	Bar graph showing jitter magnitude
Jitter display range Option JEM only	0 UI to 1.0 UI
Jitter frequency plot Option JEM only	Displays a frequency histogram from the filter setting up to a maximum frequency of 1 MHz or 5 MHz
Rise time measurement Option JEM only	± 20 ps typical 800 mV with clean signal, free of aberrations <i>Limited by eye display accuracy</i>

EYE and Jitter/Frequency Patterns

Item	Specification
Fall time measurement Option JEM only	± 20 ps typical 800 mV with clean signal, free of aberrations <i>Limited by eye display accuracy</i>
Amplitude measurement Option JEM only	± 10 mv typical 800mV with clean signal, free of aberrations <i>Limited by eye display accuracy</i>

DVI-I Output Specifications

Item	Specification
Digital levels	Per DDWG DVI rev 1
R, G, B levels	Selectable 0.7 or 1V p-p, nominal
Pixel rate	65 Mp/s
Analog R,G,B impedance	75Ω
Horizontal sync	Negative TTL pulse @ 48,363 Hz ± 1%
Vertical sync	Negative TTL pulse @ 60.004 Hz ± 1%
Display accuracy	± 1% waveform ± 1° vector ± 37 ns Timing Digital ± 300 ns Timing Analog
Connector	29-pin DVI-I, female

Audio Options

Option	Specification
Inputs (analog)	Eight monophonic or four stereo channels, balanced or unbalanced
Maximum input level	+24 dBu
Input connector	37-pin, D-sub, male
Impedance:	> 20kΩ
Inputs (digital)	Four AES/EBU serial digital pairs with input expansion option to eight. Sixteen embedded audio channels, one Dolby® E or AC-3 stream
Input connectors	Four or eight, BNC, female
Impedance	75Ω
Outputs (analog)	Eight monophonic or four stereo channels, balanced or unbalanced, follows selected audio input. Dolby inputs produce a two channel mix down and/or full eight channel decode
Output level	+24 dBu max +6 to -50 dB adjustable - For digital audio, -20 dBFS produces a +4 dBu analog output level
Output connector	37-pin D-sub, male, shared with inputs
Impedance	10Ω unbalanced or 20Ω balanced, nominal

Audio Options

Option	Specification
Signal to noise	100 dB (relative to signal level out of +24 dBu), typical
Outputs (digital)	4 AES/EBU and one Dolby® Digital, Dolby® E stream
Output connector	Four shared with input
Impedance	75Ω, BNC, female

Control

Item	Specification
GPI	Nine total with four input and five preset recall selections or individually user configured as alarm input
GPO	Two alarms, user configured
Connector	26-pin HD (high density) D-sub, female
Input impedance	10 kΩ returned to +5 VDC
Alarm output	Relay closure
Maximum relay current	350 mA @ 30 VDC
External router control	One RJ-11 female, for use with Harris RS-12 series routers
Remote	One RJ-11 female for use with the RCU-100
Peripheral interface	USB 1.1 supporting storage devices and keyboard
Connector	USB 1.1, Type A, female

Display

Item	Specification
General	A quadrant display for viewing an input on up to four different displays as picture, waveform, vector, audio, alarm status, timing, optional eye pattern, simultaneously or individually as a full screen display of each separately. Additional data analyzer display for pixel analysis. Also, view multiple waveform and vectors of the same or different inputs.
Waveform	Composite. YCbCr or RGB, parade/overlay of like formats
Sweep time base	1H or 2H with x1, x5, and x10 horizontal magnification 1V or 2V with x1, x5, and x25 horizontal magnification
Waveform accuracy	≤ 1%
Eye (optional)	Display Eye or waveform individually or paraded
Sweep time base	Overlay or 10 Eye (SD), 20 Eye (HD)
Filters	10, 100 Hz, 1 kHz
Vector	R-Y vs. B-Y for Analog C _B vs. C _R for HD or SD
Vector accuracy	≤ 1°
Gamut	Encoded or RGB gamut displays with upper and lower limit selection
Audio (optional)	2, 4, 6, or 8 channels displayed simultaneously

Time Code

Item	Specification
Input	▪ LTC via back panel connector ▪ Ancillary Time Code (HD only) ▪ DVITC extracted from SD inputs
Display	Displayed directly in picture

SDI Freeze

Item	Specification
Freeze-capable displays	▪ Waveform ▪ Vector ▪ Picture ▪ Data
Display differentiation method	Frozen waveform and vector can be set to a different color than live. All inputs (Inputs A, B, C, D) can each have a different color, and the frozen waveform and vector can be a third color.
Freeze triggers	▪ Menu selections: waveform, vector, and picture ▪ Alarm: data
Waveform and vector frozen displays	▪ Display frozen ▪ Display live ▪ Display both (not available with VTM-OPT-3GB)
Picture displays	▪ Display frozen ▪ Display live
Frozen waveform control	The following can be altered on a frozen waveform: ▪ Field select (odd or even) ▪ H Mag ▪ V Mag ▪ H pos ▪ V pos ▪ All sweep and filter settings

Data Analyzer

Item	Specification
Displays	▪ Data: Four-word (maximum) display of samples of a particular line. ▪ Pixel: Three word – Y, Cb, Cr display of a particular picture element ▪ Three modes to display Pixel Data (Pixels within the Pixel cursor): 1. 2H: displays 2 horizontal pixels 2. 8H: displays 8 horizontal pixels 3. 2H x 4V: displays 2 horizontal pixels and 4 vertical pixels
Control	▪ Front Panel selects what to display. ▪ Line Select knob selects a line. ▪ UP/DOWN buttons choose which samples/pixel to display

Data Analyzer

Item	Specification
Interaction with alarms	- Alarms can trigger data freeze. - Peak (Upper and Lower), Luminance (Upper and Lower), and RGB Gamut cause error samples to be highlighted

CRC Error Display

Item	Specification
Display position	Replaces alarm window
Display enable	By menu choice
Parameters displayed	- FF CRC Sec (full-field CRC error seconds- SD only) - AP CRC Sec (active picture CRC error seconds – SD only) - F1 AP CRC Value – displays the most recent active picture CRC for field 1 (SD only) - F2 AP CRC Value – displays the most recent active picture CRC for field 2 (SD only) - Format Errors - Time since last reset - Embedded audio presence - Other ancillary data presence
Format errors monitored	- SAV placed incorrectly - Line-length error - Field-length error - Reserved values used improperly - ANC data checksum error - ANC data parity error - ANC data placement error - Absence of serial video input
CRC error-specific controls	Errored second counter rest

Closed Captioning Displays

Item	Specification
Standards	- SD: Implements the digitized form of line 21 analog closed captioning (EIA-608B) - HD: Implements vertical ancillary captioning (EIA-708B)
Data types supported	- CC1: primary - CC3: secondary 708: Digital television caption service (HD only)

Gamut Display

Item	Specification
Monitored parameters	- Composite gamut (positive and negative chroma packet excursions about luma levels) - RGB gamut
Display type	- Polar. Angle of display always represents hue (as in a vectorscope). - Composite display amplitude plots luma plus half of saturation and luma minus half of saturation, with magnitude in IRE or units. Concentric circles represent minimum and maximum ranges. - Component display plots R, G, and B amplitudes, with magnitude in mV. Concentric circles represent minimum and maximum ranges.

Magnification

Item	Specification
Waveform sweep MAG selection	x1, x5, and x10. Pressing the MAG button will cycle through x1, x5, and x10 horizontal magnification.
Waveform step Gain selection	x1, x2.5, x5, and x15. Pressing the STEP button will cycle through x1, x2.5, x5, and x15 vertical magnification.
Waveform gain	Variable from x0.50 to x15.00.
Vector gain	Variable: x0.50 to x50.00 in .01 steps.

Ethernet

Item	Specification
Standard	10/100 Base-T conforms to IEEE802.3
Connector	RJ-45
Performance metric	Transfer a captured frame to a PC in ≤ 30 seconds, dedicated LAN
Number of simultaneous connections	6

External Routing Control

Item	Specification
Switcher protocol	RS-12X
Number of RS-XX	One
Physical interconnection standard	RS-485

Remote Control

Item	Specification
Communications	VCP
Number of multidrop inputs	10

Remote Control

Item	Specification
Physical interconnection standard	RS-422

Power Requirements

Item	Specification
AC power source	90 – 264 VAC, 50 - 60 Hz, nominal
Power consumption	150 VA maximum

Mechanical

Item	Specification
Dimensions	▪ Height: 1.75 in. (4.45 cm) ▪ Width: 19.00 in. (48.26 cm) ▪ Depth: 20.00 in. (50.80 cm)
Weight	11 lb (4.98 kg)

Environmental

Item	Specification
Operating temperature	0° to +50°C (0° to +45°C option JEM and 3Gb)
Storage temperature	-40° to +65°C
Humidity	0 to 90% (non-condensing)
Transportation	24" (9.5 cm) impact-drop survivable in original factory packaging

Standard Accessories

Item	Specification
Standard accessories	▪ <i>VTM Series Installation and Operation Handbook</i> ▪ Breakout connector for GPI/TALLY/LTC/CLOCK ▪ One Rack Mounting Kit ▪ One Power Cord ▪ DVI to VGA adaptor

Console

Item	Specification
VTM-ASX	VTM Console that included chassis, power supply, cooling system fans, system controller, front panel controls with USB port, and back panel connections for Ethernet, USB port, one router and remote control port, and LTC/GPI interface. Supports 1 graphics display driver, 1 or 2 video boards, and 1 audio board. A graphics display engine module (VTM-10 or VTM-40 and at least one input module are required to operate the console).

Display Drivers

Item	Specification
VTM-10	Graphics display engine that affords 100% digital signal processing and instrument display capability of one input source at a time.
VTM-40	Graphics display engine that affords 100% digital signal processing and instrument display capability of four input sources simultaneously.

VTM Options

Item	Specification
TVM-VTM-ACV-2	Two (2) looping analog composite video inputs for NTSC or PAL format
TVM-VTM-SDI-S	Two (2) looping inputs for SMPTE 259M-C (SD-SDI) with auto detect and monitor output. Replaces standard A / B inputs or C / D inputs.
TVM-VTM-S2H-F	Software <i>Feature Upgrade</i> to add SMPTE 292M (HD-SDI) to TVM-VTM-SDI-S
TVM-VTM-SDI-H	Two (2) looping inputs for SMPTE 292M (HD-SDI) or SMPTE 259M-C (SD-SDI) with auto detect and monitor output. Replaces standard A / B inputs or C / D inputs.
TVM-VTM-EYE-S	Two (2) looping inputs for SMPTE 259M-C (SD-SDI) with auto detect, EYE pattern and monitor output. Replaces standard A and B inputs. Must be used as inputs A and B. (Only one per unit).
TVM-VTM-ES2H-F	Software <i>Feature Upgrade</i> to add SMPTE 292M (HD-SDI) to TVM-VTM-EYE-S
TVM-VTM-EYE-H	Two (2) looping inputs for SMPTE 292M (HD-SDI) or SMPTE 259M-C (SD-SDI) with auto detect, EYE pattern and monitor output. Replaces standard A and B inputs. Must be used as inputs A and B. (Only one per unit).
TVM-VTM-JEM	Two looping inputs for SMPTE 292M (HD-SDI) or SMPTE 259M-C (SD-SDI), auto detect with EYE pattern and monitor output with advanced jitter analysis and monitor output. Must be used as inputs A and B. (Only one per unit).
TVM-VTM-3GB	Input module which accepts two active-looping triple-rate (2.97 Gb/s, 1.485 Gb/s, and 270 Mb/s) HD-SDI or SD-SDI input signals for display and analysis. One triple-rate SDI monitor output is switchable from following the selected SDI video input to becoming an internal test generator that displays color bars, pathological checkfield, and color bars with motion. The Test Signal Generator is free-running (no genlock capability). Embedded audio and Video Payload ID per SMPTE 352M-2002 ancillary data insertion is supported. Supplies additional support for dual-link HD-SDI 12-bit YCbCr and RGB video formats. Requires VTM-40
TVM-VTM-ASI	Two (2) passive-looping DVB-ASI and SMPTE310 inputs. It accepts two independent MPEG streams and analyzes one selected stream for compliance to measurement guidelines of ETSI TR-101-290 (ETR-290) first, second, and third priority standards.
TVM-VTM-DLK	Expands the Dual link capability of the TVM-VTM-SDI-H, TVM-VTM-EYE-H, TVM-VTM-JEM, and to include 10-bit RGB (4:4:4) and RGB+A (4:4:4:4) formats. Requires VTM-40

VTM Options

Item	Specification
TVM-VTM-AAP	Software <i>Feature Upgrade</i> . Advanced Analysis Package that adds data analyzer functions in quadrant or full-screen views to the VTM-10. Included in VTM-40.
VTM-A ³ -OPT 2	Advanced Audio Analysis Option. Bargraphs and CineSound®. View up to 8 audio channels. Includes 4 analog stereo inputs, 4 AES/EBU shared input/output pairs and 16 channels of embedded audio. Analog monitoring outputs of up to 8 channels simultaneously.
VTM -A ³ - 4004	Audio Expansion module. Adds 4 AES/EBU input pairs. Only available with A ³ -OPT 2.
VTM -A ³ -OPT 3	Advanced Audio Analysis Option. Bargraphs and CineSound®. View up to 8 audio channels. Includes 4 analog stereo inputs, 8 AES/EBU inputs with 4 shared output and 16 channels of embedded audio. Analog monitoring outputs of up to 8 channels simultaneously.
VTM -A3-OPT 3TL	Advanced Audio Analysis Option with 5x oversampling for enhanced True Peak detection. Bargraphs and CineSound®. View up to eight audio channels. Includes four analog stereo inputs, eight AES/EBU inputs with four-shared outputs and 16 channels of embedded audio. Analog monitoring outputs of up to eight channels simultaneously. Channel-mapping, loudness, meter labels, and peak value reporting included. All AES inputs are sample rate converted to 48 kHz.
VTM -A ³ -OPT 5	Full Dolby decoding. Advanced Audio Analysis Option. Bargraphs and CineSound®. View up to 8 audio channels. Includes 4 analog stereo inputs, 8 AES/EBU inputs with 4 shared output and 16 channels of embedded audio. Analog monitoring outputs of up to 8 channels simultaneously.
VTM -A3-OPT 5TL	Advanced Audio Analysis Option with 5x oversampling for enhanced True Peak detection and Dolby. Bargraphs and CineSound®. View up to eight audio channels. Includes four analog stereo inputs, eight AES/EBU inputs with four-shared outputs and 16 channels of embedded audio. Analog monitoring outputs of up to eight channels simultaneously. Channel-mapping, loudness, meter labels, and peak value reporting included. All AES inputs are sample rate converted to 48 kHz. It also adds full Dolby decoding to the analog output. The Dolby Output is selectable from any 1 of the 8 pairs of the assigned input type (AES or Embedded). Further, selection of an AES or embedded pair for the AUX meters is available in an eight-channel display.
VTM -A ³ -OPT3TO5	Adds Dolby decoding to existing VTM-A ³ -OPT 3 and VTM-A ³ -OPT 3-TL.
VTM -OPT V2A	Adds Lip Sync to the VTM-A ³ -OPT 3-TL or VTM-A ³ -OPT 5-TL
RCU-1000	Remote control panel for the VTM series, TVM series, instruments. Replicates all of the front panel controls. RS-422 connection, includes 50' (15m) cable with RJ-11 connectors. One RU in height.
TVM-WRTY2	Adds three years to the standard two-year warranty

This page is intentionally blank.

Appendix B ♦ Pinouts

Figure B-1. ANALOG AUDIO IN/OUT 37-Pin, Male, D-Sub Connector for Audio Options

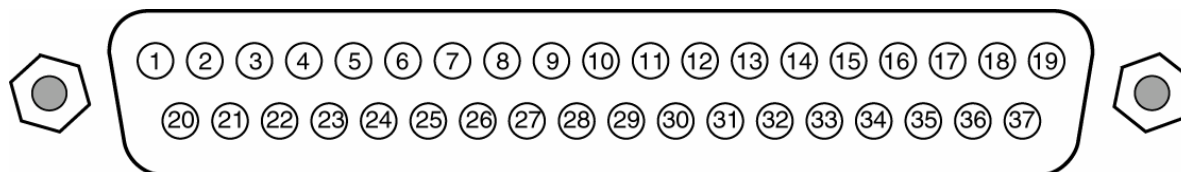


Table B-1. Pinouts for ANALOG AUDIO IN/OUT Connector and Audio Breakout Board

Pinout	Signal	Pinout	Signal
1	Analog input 1 –	20	Analog input 1 +
2	Analog input 2 –	21	Analog input 2 +
3	Analog input 3 –	22	Analog input 3 +
4	GND	23	Analog input 4 +
5	Analog input 4 –	24	Analog input 5 +
6	Analog input 5 –	25	Analog input 6 +
7	Analog input 6 –	26	GND
8	Analog input 7 –	27	Analog input 7 +
9	Analog input 8 –	28	Analog input 8 +
10	GND	29	Analog output 1 +
11	Analog output 1 –	30	Analog output 2 +
12	Analog output 2 –	31	Analog output 3 +
13	Analog output 3 –	32	Analog output 4 +
14	Analog output 4 –	33	Analog output 5 +
15	Analog output 5 –	34	Analog output 6 +
16	Analog output 6 –	35	Analog output 7 +
17	Analog output 7 –	36	Analog output 8 +
18	Analog output 8 –	37	GND
19	GND		

Figure B-2. DVI-I In/Out Connector

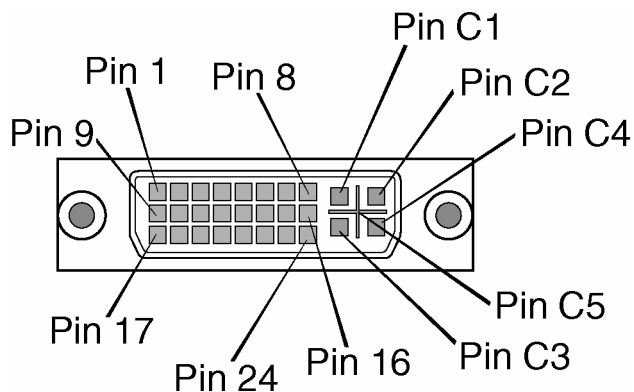


Table B-2. Pinouts for DVI-I In/Out Connector

Pinout	Signal	Pinout	Signal	Pinout	Signal
1	T.M.D.S. Data 2-	9	T.M.D.S. Data 1-	17	T.M.D.S. Data 0-
2	T.M.D.S. Data 2+	10	T.M.D.S. Data 1+	18	T.M.D.S. Data 0+
3	T.M.D.S. Data 2/4 Shield	11	T.M.D.S. Data 1/3 Shield	19	T.M.D.S. Data 0/5 Shield
4	T.M.D.S. Data 4-	12	T.M.D.S. Data 3-	20	T.M.D.S. Data 5-
5	T.M.D.S. Data 4+	13	T.M.D.S. Data 3+	21	T.M.D.S. Data 5+
6	DDC Clock	14	+5V Power	22	T.M.D.S. Clock Shield
7	DDC Data	15	Ground (return for +5V, Hsync, and Vsync)	23	T.M.D.S. Clock+
8	Analog Vertical Sync	16	Hot Plug Detect	24	T.M.D.S. Clock-
C1	Analog Red	C2	Analog Green	C3	Analog Blue
C4	Analog Horizontal Sync	C5	Analog Ground (analog, R, G, and B return)	-	-

Figure B-3. LTC/GPI 26-Pin, Female, D-Sub Connector

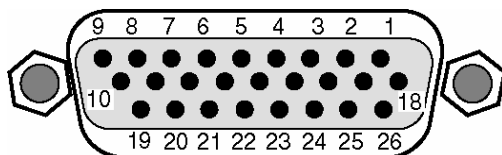


Figure B-4. LTC/GPI Breakout Board

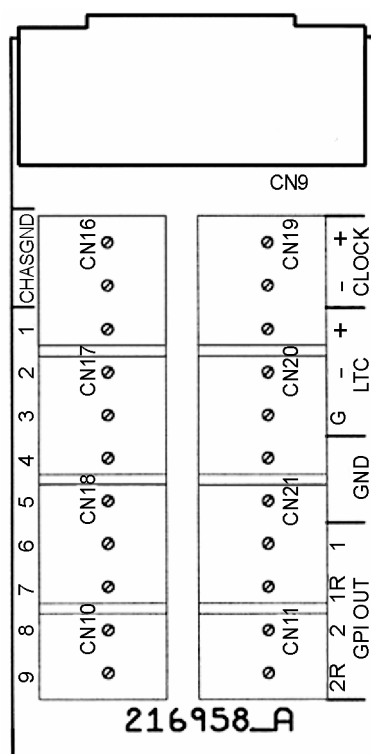
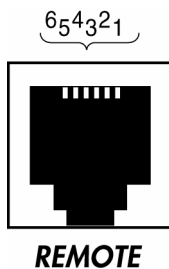



Table B-3. Pinouts for LTC/GPI Connector and LTC/GPI Breakout Board

Pinout	Signal
1	GND
2	GPI input #4 (Select input D)
3	GPI input #3 (Select input C)
4	GPI input #2 (Select input B)
5	GPI input #1 (Select input A)
6	GPI input #7 (Select Preset 3)
7	GPI input #8 (Select Preset 4)
8	GPI input #9 (Select Preset 5)
9	GPI input #6 (Select Preset 2)
10	GPI input #5 (Select Preset 1)
11	GND
12	Reserved
13	GPI output #1

Pinout	Signal
14	Return for GPI #1
15	GPI output #2
16	Return for GPI #2
17	Reserved
18	Reserved
19	Clock high in
20	Clock low in
21	Reserved
22	Reserved
23	Reserved
24	LTC high in
25	LTC ground
26	LTC low in

Figure B-5. Remote RJ-11 Control Connector**Table B-4. Remote RJ-11 Control Connector Pinouts**

Pinout	Signal	VTM Series	RCU1000
1	OPEN	Open	GND
2	RX -	Received by VTM Series	Transmit from RCU
3	RX +	Received by VTM Series	Transmit from RCU
4	TX -	Transmit from VTM Series	Received by RCU
5	TX +	Transmit from VTM Series	Received by RCU
6	GND	GND	GND

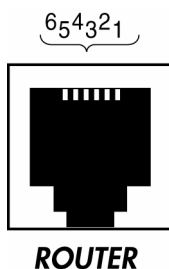Figure B-6. Router RJ-11 Control Connector**Table B-5. Router RJ-11 Control Connector Pinouts**

Pinout	Signal
1	OPEN
2	OPEN
3	TX
4	RX
5	OPEN
6	GND

Figure B-7. Ethernet RJ-45 Connector

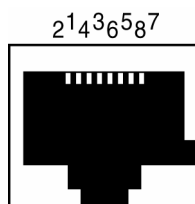


Table B-6. Ethernet RJ-45 Connector Pinouts

Pinout	Signal
1	TX+
2	TX-
3	RX+
4	N.C.

Pinout	Signal
5	N.C.
6	RX-
7	N.C.
8	N.C.

Figure B-8. USB Connector

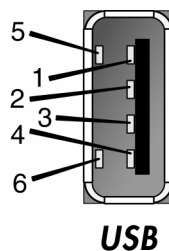


Table B-7. USB Connector Pinouts

Pinout	Signal
1	VCC
2	Data -
3	Data +
4	GND
5	GND
6	GND

This page is intentionally blank.

Appendix C ♦ Open Source Software Copyright Information

Copyright information for certain Open Source software products is provided below. Source code for all Open Source software used in the development of this product is available upon request (contact the Harris Customer Service Department). See “Service and Support” on page 11 for contact information.

FreeType License

Portions of this software are copyright © 2008 The FreeType Project (www.freetype.org). All rights reserved.

LibJPEG License

This software is based in part on the work of the Independent JPEG Group.

CMU/UCD Copyright Notice

Copyright © 1989, 1991, 1992 by Carnegie Mellon University.

Derivative Work - 1996, 1998-2000.

Copyright © 1996, 1998-2000, The Regents of the University of California. All rights reserved.

Permission to use, copy, modify and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appears in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of CMU and The Regents of the University of California not be used in advertising or publicity pertaining to distribution of the software without specific written permission.

CMU AND THE REGENTS OF THE UNIVERSITY OF CALIFORNIA DISCLAIM ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL CMU OR THE REGENTS OF THE UNIVERSITY OF CALIFORNIA BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM THE LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Networks Associates Technology, Inc. Copyright Notice (BSD)

Copyright © 2001-2003, Networks Associates Technology, Inc. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Networks Associates Technology, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Cambridge Broadband Ltd. Copyright Notice (BSD)

Portions of this code are copyright © 2001-2003, Cambridge Broadband Ltd. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- The name of Cambridge Broadband Ltd. may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Sun Microsystems, Inc. Copyright Notice (BSD)

Copyright © 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Use is subject to license terms below.

This distribution may include materials developed by third parties.

Sun, Sun Microsystems, the Sun logo and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Sun Microsystems, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Sparta, Inc. Copyright Notice (BSD)

Copyright © 2003-2008, Sparta, Inc. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of Sparta, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Cisco/BUPTNIC Copyright Notice (BSD)

Copyright © 2004, Cisco, Inc and Information Network Center of Beijing University of Posts and Telecommunications. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of Cisco, Inc, Beijing University of Posts and Telecommunications, nor the names of their contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Fabasoft R&D Software GmbH & Co. KG Copyright Notice (BSD)

Copyright © Fabasoft R&D Software GmbH & Co. KG, 2003 oss@fabasoft.com.
Author: Bernhard Penz

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- The name of Fabasoft R&D Software GmbH & Co KG or any of its subsidiaries, brand or product names may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The GNU v2 License

GNU General Public License

Version 2, June 1991

Copyright © 1989, 1991 Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA. Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU General Public License

Terms and Conditions for Copying, Distribution and Modification

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The “Program,” below, refers to any such program or work, and a “work based on the Program” means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term “modification.”) Each licensee is addressed as “you.”

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program,

the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative

works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version," you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a

version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

No Warranty

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

GNU Lesser Public License

GNU Lesser General Public License

Version 2.1, February 1999

Copyright © 1991, 1999 Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA. Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages--typically libraries--of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the “Lesser” General Public License because it does Less to protect the user’s freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users’ freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a “work based on the library” and a “work that uses the library.” The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

GNU Lesser General Public License

Terms and Conditions for Copying, Distribution and Modification

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called “this License”). Each licensee is addressed as “you.”

A “library” means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The “Library,” below, refers to any such software library or work which has been distributed under these terms. A “work based on the Library” means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term “modification.”)

“Source code” for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library’s complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) The modified work must itself be a software library.
- b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.
- c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.

d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.

This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place

satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a “work that uses the Library.” Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a “work that uses the Library” with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a “work that uses the library.” The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a “work that uses the Library” uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a “work that uses the Library” with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer’s own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

- a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine-readable “work that uses the Library,” as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)
- b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on

the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.

- c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.
- d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.
- e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the “work that uses the Library” must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

- a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.
- b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library),

you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.

11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version," you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a

license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

No Warranty

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Appendix D ♦ Glossary

601 An international standard (ITU-R BT.601) for component digital television. It defines the sampling systems, matrix values, and filter characteristics for digital television.

8 VSB Vestigial sideband modulation with 8 discrete amplitude levels.

16 VSB Vestigial sideband modulation with 16 discrete amplitude levels.

Advanced Television Systems Committee (ATSC) The parent organization that developed, tested and described the form and function of the US digital television formats.

AES/EBU A digital audio standard established jointly by the Audio Engineering Society (AES) and the European Broadcasting Union (EBU).

Artifacts Unwanted visible effects in the picture created by disturbances in the transmission or image processing, such as edge crawl or ‘hanging dots’ in analog pictures or ‘pixelation’ in digital pictures.

Aspect Ratio The ratio of horizontal to vertical dimensions. A square has an aspect of 1:1 since the horizontal and vertical measurements are always equal. Current television screen aspect ratios are 4:3 and 16:9.

Asynchronous Serial Interface (ASI) A transmission method adopted by the DVB, and called DVB-ASI. The transmission method allows for the transport of varying data payloads in a constant data stream. The DVB-ASI transport stream rate is 270 Mb/s.

Audio Breakaway Routing video and accompanying audio in separate signal paths.

Audio-Follow Routing video and accompanying audio together in the same signal path.

Active Format Description (AFD) An ancillary data packet in a digital video interface for the purpose of describing certain spatial characteristics of a high definition or standard definition video image. Formatted according to SMPTE 2016, AFD information is intended to guide video equipment regarding the presentation of video of one aspect ratio on a display of another aspect ratio. Bar Data information is used to signal the precise unused areas of active video when the active image does not completely fill the picture area, in particular widescreen cinema material carried letterboxed in a frame with bars top and bottom

Auto Trans Automatic transition. The execution of a single wipe or fade from current picture to another picture by way of an automatic device.

Bandwidth The range of frequencies used to transmit information such as picture and sound.

Baseband Video An unmodulated video signal.

Black Also color black, blackburst. A composite color video signal that has the composite sync, reference burst, and a black video signal.

Blanking Processor A circuit which removes sync, burst and blanking from the program video and then replaces it with sync, burst and blanking from the reference input. The process ensures constant sync and burst levels on program video.

Border An electronically-generated picture member that is used in wipes to separate the two video sources used in the wipe. It is of even thickness and has color produced by the matte generator.

Broadcast Legal Encoding video signal parameters to conform to prescribed limits for broadcast. Encoding rules vary by NTSC, PAL, country and broadcast facility.

BTSC Broadcast Television Standards Committee. A US standard for stereo audio encoding in NTSC broadcast television.

CAV Component Analog Video

CES Consecutive Errored Samples

Composite Video A single video signal that includes all color video and timing information. A composite signal includes luminance, chrominance, blanking pulses, sync pulses and color burst information.

Chrominance The color portion of a video signal that represents the saturation and hue. Black, gray and white have no chrominance; color signals have both chrominance and luminance.

CH Chroma

Chrominance/Luminance Delay (C/L Delay) A measurement that indicates the amount to which chrominance and luminance are aligned with respect to each other. A low C/L delay figure can minimize the effects of ghosts or color offset on the received picture.

Clipping The electronic process of shearing off the peaks of either the white or black excursions of a video signal for limiting purposes. Clipping is often performed prior to modulation to limit the signal.

CMRR Common Mode Rejection Ratio

Color Burst The portion of a color video signal which contains a short sample of the color subcarrier. It is used as a color synchronization signal to establish a reference for the color information following it and is used by a color monitor to decode the color portion of a video signal. The color burst acts as both amplitude and phase reference for color hue and intensity. The color oscillator of a color television receiver is phase locked to the color burst.

Composite Sync A signal consisting of horizontal sync pulses, vertical sync pulses and equalizing pulses only.

CRC Cyclical Redundancy Check

Crosspoint An electronic switch, usually controlled by a button on the panel. Control logic will allow for only one crosspoint, for each bus, to be switched "ON" on at a time.

D/A Conversion of digital to analog signals.

DA Distribution Amplifier

Data Element An item of data as represented before encoding and after decoding.

Decoded Stream The decoded reconstruction of a compressed bit stream.

Decibel (dB) A logarithmic measure of the ratio between two powers, voltages, currents, sound intensities, etc. Signal-to-noise ratios are expressed in decibels.

Default A factory preset value or condition.

Demodulator A receiver, such as for television broadcast, cable, and closed circuit applications. A TV demodulator receives and processes off-air or cable RF signals and provides baseband video and audio outputs.

DHCP Dynamic Host Configuration Protocol

Differential Gain A measurement that specifies how much the chrominance gain is affected by the luminance level. Expressed as a percentage showing the largest amplitude change between any two levels, it indicates how much color saturation variance occurs when the luminance level changes.

Differential Phase A peak-to-peak measurement that specifies the extent to which the chrominance phase is affected by the luminance level. Expressed in degrees of subcarrier phase, it indicates how much hue shift occurs with luminance level changes.

Digital Video Broadcasting (DVB) A specific project office of the European Broadcast Union. This group has produced a set of digital broadcasting standards.

Display On VTM Series units, the output that appears on the DVI/XGA monitor

DSK Down Stream Key, a keyer which is electronically located after (or down stream from) all other functions of a switcher. The key resulting will appear to be on top of all other pictures from the switcher.

D-VITC Digital Vertical Interval Time Code. Timecode information stored on specific lines in the vertical blanking interval of a television signal.

EAV End of Active Video in component digital systems.

EBU European Broadcasting Union

Editor A device or system which controls video tape recorders, video switchers, and other related devices in order to electronically splice segments of recorded video into a finished production.

EDH Error Detection and Handling. A recommended practice defined in SMPTE RP 165. A system to generate and then detect video data errors in serial digital video systems.

Effects Keyer A keyer which is electronically located in the mix/wipe generator portion of a switcher. The resulting key would appear under the down stream key.

EIA Rack Space or Unit A specific size as designated by the Electronics Industry Association. The rack unit is 19 inches wide, and is 1.75 inches tall. A device which requires 3 EIA rack units is 19 inches wide and 5.25 inches ($3 \times 1.75 = 5.25$) tall.

Elementary Stream (ES) A generic term for one of the coded video, audio or other variable length bit streams which are packetized to form MPEG-2 transport streams. Consists of compressed data from a single source (audio, video, data, etc.). One elementary stream is carried in a sequence of PES packets with one and only one stream ID.

Embedded Audio Digital audio information multiplexed onto a serial digital data stream. Up to sixteen channels can be multiplexed on a single stream of 601 video, minimizing cabling and routing requirement.

ENG Electronic News Gathering

Encoded Clip Softness In the encoded legalization process, “softness,” as applied to encoded clips, refers to the processing of the video at the point of the clip. The clips are applied in YCbCr color space. The clip point is either an immediate limit (no softness) or will have a range of values leading to the clip point, all reduced to smooth the clip point to a less immediate limit (softness).

Encoded Legalization Limiting of the luminance and color difference signals such that, once encoded into a composite video signal, the resultant encoded video does not violate the maximum or minimum signal levels as defined by the specific encoding rules. NTSC and PAL video plus various users of these types of video have many varied rules for maximum and minimum encoding limits. Encoded legalization usually calculates first the encoded luminance value and then the corresponding chroma value to make legalization judgments.

Encoded Video A combined single video signal that is constructed from either separate RGB or luminance and two color difference video signals. NTSC, PAL, and SECAM are all examples of encoded video.

Envelope Detection An RF signal detection technique that does not respond to phase variations in the carrier signal, enabling measurement of a transmitter’s incidental phase. When used together with synchronous detection, envelope detection helps isolate either video and/or RF as the causes of phase distortion.

External Key Input This is an alternate source for key cut. This is usually a separate external input to a switcher

Fade-thru-Black A production technique which is a two step process. The first step will fade the program video to black. The second step will fade from black to the video selected on the preview bus. This is usually used in major scene transitions.

Fade-to-Black A production technique which simply fades the program video to black and program audio to silent. This is used to end programs and to escape from embarrassing pictures or sounds.

Field A picture or picture portion which is produced within one cycle of vertical synchronization. In interlaced systems, a full picture or frame requires two consecutive fields.

FM Trap A circuit designed to minimize potential interference from strong FM signals in receiving equipment, such as a TV demodulator. For example, an FM trap can attenuate signals between 88-108 MHz to reduce interference on NTSC television channel 6.

Frame A single full resolution picture as viewed in either a video or film system. In the case of interlaced video, two consecutive fields provide all of the information of one frame. In non-interlaced systems, one cycle of vertical synchronization produces a frame. A 60 Hz interlaced system, produces 30 frames of video in one second. A 60 Hz progressive (or non-interlaced) system, produces 60 frames of video in one second. Common frame rates are 24 (film) 25, 29.97, 30, 50, 59.94 and 60.

Frame Synchronizer An electronic device that synchronizes two or more video signals. Using one input as a reference, it locks a second signal to the reference.

Frame Store An electronic method of capturing and storing a single frame of video.

Full On VTM Series units, a full-screen display of the selected pane (non quad or multi display).

Gamma This term applies to the linearity of the change from black to white. Gamma controls adjust the gray or 50% point of the video either up or down, with the effect of changing the gray level of the video.

Gamut The whole or total of whatever is being addressed. In color space, gamut refers to all colors which are included in a particularly defined color group, such as 601 gamut.

Genlock (Generator Lock) A method of synchronization involving the generation of a video signal that is time and phase locked with another signal.

GPI General Purpose Interface

Headend In a cable TV system, the facilities where program sources (satellite, terrestrial, VTR, local) are received and remodulated for distribution through a cable plant.

High Definition Television (HDTV) High definition television has a resolution of approximately twice that of conventional television in both the horizontal (H) and vertical (V) dimensions and a picture aspect ratio (H to V) of 16:9.

High Level A range of allowed picture parameters defined by the MPEG-2 video coding specification which corresponds to high definition television.

HRC Harmonically-Related Carrier

Hue Color tint

ICPM Incidental Carrier Phase Modulation. A measurement of picture carrier phase distortion (affected by the video signal level) that occurs in the transmitter.

IP Internet Protocol

IRC Incrementally-Related Carrier

I.R.E. Refers to the Institute of Radio Engineers, and is used as a unit of measurement. In NTSC television, 1 volt of signal equals 140 IRE units.

ISP Internet Service Provider

Jitter A deformation of a signal affected by poor synchronization.

Key An effect in television where a selected portion of background video is removed and replaced with another video.

Key Cut In a key effect, this is the video which designates the portion of background video which is removed.

Key Fill In a key effect, this is the video which is used to replace the portion of background video which was removed. This may be the same video as the Key Cut video.

Key Invert In a key effect, this is an electronic action which reverses the polarity of the key cut signal. It makes black appear as white, and white appear as black.

Key Mask In a key effect, it uses a wipe pattern from the wipe pattern generator to restrict the key cut from removing video in a portion of the screen. This requires the use of the wipe pattern generator and the Mask/Preset Size controls.

Key Source Another term which is the same as key cut.

Legalization The modification of serial digital video to conform to analog color space rules, as required by users.

LCD Liquid Crystal Display

LED Light-Emitting Diode

LFE Low Frequency Effects

Lissajous A display of the amplitude and phase relationships between two input signals.

LS Left Surround

LTC Longitudinal Time Code, A SMPTE timecode standard usually recorded onto the linear audio track of a VTR.

Luminance The degree of brightness (black and white portion of the video signal) at any given point in the video image. A video signal is comprised of luminance, chrominance and sync. If luminance is high, the picture is bright and if low the picture is dark. Changing the chrominance does not affect the brightness of the picture.

Main Level A range of allowed picture parameters defined by the MPEG-2 video coding specification with maximum resolution equivalent to standard definition television.

Main Profile A subset of the syntax of the MPEG-2 video coding specification that is supported over a large range of applications. Applications include, MP@HL (Main profile at high level) and MP@ML (Main profile at main level).

Mask/Preset Size Uses the wipe pattern generator in the keyer portion of the effects generator. This is used to adjust the size of a preset pattern or for adjusting the size of a mask to block a portion of the key cut (source) from use in the keyer.

Matte Generator An internal generator which can make any color, is used for border color and may be used for key fill. It is identical to the Color Background Generator, but simply used in other areas of the switcher.

Mbps Megabits Per Second

mV Millivolts

M/E Mix/Effects System

MP@HL Main profile at high level

MP@ML Main profile at main level

MPEG Refers to standards developed by the ISO/IEC JTC1/SC29 WG11, Moving Picture Experts Group.

MPEG-2 Refers to ISO/IEC standards 13818-1 (Systems), 13818-2 (Video), 13818-3 (Audio), and 13818-4 (Compliance).

Multi On VTM Series units, contains preconfigured screens (for VTM Classic, Data Analyzer, Custom Timing, and Waveform-Vector screens only)

Multi-Level Effects Applies to any effects generator which can do more than one effect at a time. Typically, a multi level switcher can produce a Key and a Background transition in the same effects generator at one time.

NTSC National Television Systems Committee, the color television system used in the United States, Canada, Mexico and Japan.

NVRAM Nonvolatile RAM

Packet Identifier A unique integer value used to associate elementary streams of a program in a single or multi-program transport stream.

Packet A packet consists of a header followed by a number of contiguous bytes from an elementary data stream. It is a layer in the system coding syntax.

Packetized Elementary Stream The data structure used to carry elementary stream data. The packets consist of a header followed by payload data, and a stream is a series of packets which form an elementary stream and have a single stream identification.

PAL Phase Alternation Line; the standard color television system in many European and other countries.

PAT Program Association Table (see extended definition on page 254)

Pane On VTM Series units, one quadrant in a multi-quadrant screen (Quad or Multi) (see extended definition for Quad on page 254 and for Multi on page 253)

Passive Looping Video and audio signals routed through components, even if power is removed. Signals are not amplified or processed, maintaining transparency.

Payload Identifier see Video Payload ID.

PCR Program Clock Reference (see extended definition on page 254)

Pedestal Level An offset used in a video system to separate the active video from the blanking level by maintaining the black level above the blanking level by a small amount.

PES Packetized Elementary Stream (see extended definition on page 253)

PID Packet Identifier (see extended definition on page 253)

Pixel A Picture cell or Picture element representing one sample of picture information, such as an individual sample of R, G, B, luminance or chrominance.

PMT Program Map Table (see extended definition on page 254)

Preset Refers to establishing any condition prior to use on the Program output. This term is used in reference to wipe patterns and is often interchanged with Preview.

Preview The video output channel used to view the intended Program results prior to the execution of the next transition.

PRO Audio A transmitted audio channel for talent cueing via Interrupt Foldback (IFB) to ENG vans and remote applications. Some demodulators support PRO audio monitoring.

Program A transport stream combination of a video stream and one or more audio and data streams associated with that video stream. In analog terms, “Program” refers to the Base Band video and audio produced by the final output of a switcher.

Program Association Table A list of all programs that are in the ATSC data stream.

Program Map Table A listing of all elementary streams that comprise a complete (television) program.

Program Clock Reference A time reference signal that is placed in MPEG streams for the purpose of time coordinating various data streams.

Program and System Information Protocol Information sent out as part of an ATSC transport stream which lists all of the video, audio, data and program information contained in the stream. This is the “TV guide” for a given stream.

Progressive Scanning Also non-interlaced. A system of video scanning where lines of a picture are transmitted consecutively, such as with VGA monitor displays.

PSIP Program and System Information Protocol (see extended definition on page 254)

Push-Push Toggle Switch An electro-mechanical device which, when pushed, alternates the condition of the switch. Push once, it's off, push again, it's on.

Quadrature Output An output in a television demodulator used for measuring Incidental Carrier Phase Modulation (ICPM) in a transmitter.

QPSK Quadrature Phase Shift Keying, typically used by satellite downlinks.

QAM Quadrature Amplitude Modulation, the technique used by cable TV systems (64-QAM and 256-QAM) to remodulate signals for distribution in a cable plant.

Quad On VTM Series units, a screen that contains four panes.

RGB Legalization Limiting of luminance and color difference video signals such that, once transcoded into RGB component video signals, the resultant video does not violate the maximum or minimum signal levels as defined by component video level rules. Typically, the maximum value for R, G, or B is 700 mV, and the absolute minimum value for any of these signals is 0 mV.

Reclocking The process of regenerating digital data with a clock recovered from the input data.

Resolution A measure of the finest detail that can be seen, or resolved, in a reproduced image.

RS Right Surround

RS-422 Recommended Standard number 422, an E.I.A. standard which describes a type of data interchange. Television products use this standard as its communication format between the electronics frame and editors, control panel and computers. An RS-422 line may be extended up to 1,000 feet (304m).

Sampling Process by which an analog signal is sampled to convert the analog signal to digital.

SAP Secondary Audio Program, used in television broadcast for second language broadcasting, simulcasting, and separate audio programming.

Saturation Color intensity

SAW Filter Surface Acoustic Wave filter

SDTV Standard Definition Television (see extended definition on page 255.)

Segment Error Rate A calculated average of uncorrected transport stream packets vs. total packets as accumulated over a designated period of time.

SER Segment Error Rate

Signal to Noise Ratio-Analog A measurement of the noise level in a signal expressed in dB (decibels) as a ratio of between the audio or video signal's maximum peak-to-peak signal voltage and the measured voltage of noise present when the signal is removed. Higher SNR figures indicate that any noise introduced by system components will not be perceived in the picture and sound output signals.

Signal to Noise Ratio-8VSB As applies to 8VSB transmissions, this is a calculated average power of the ideal signal divided by the actual demodulated signal power.

SMPTE Society of Motion Picture and Television Engineers

SNR Signal to Noise Ratio (see extended definition on page 255)

Standard Definition Television This term is used to signify a digital television system in which the quality is approximately equivalent to that of NTSC. This equivalent quality may be achieved from pictures originated at the 4:2:2 level of ITU-R BT.601 and subjected to processing as part of the bit rate compression. The results should be such that when judged across a representative sample of program material, subjective equivalence with NTSC is achieved. The displayed picture may be either the traditional 4:3 or the wide-screen 16:9 aspect ratio.

STL Studio Transmitter Link

Synchronous Detection A common detection technique used in television demodulators that removes quadrature distortion, enabling comparison of transmitter output with video input signal.

S-Video Also Y/C. Transmits luminance and color portions separately via multiple wires, thus avoiding the color encoding process and resulting loss of picture quality.

Tally A system used to light lamps and indicate usage. Most production switchers have an internal tally system to indicate selected functions, and which selected functions are currently involved with Program.

TCP Transmission Control Protocol

Telecine A device used to convert film to video; movie film is digitally sampled and converted to video frame by frame in real-time.

TCXO Temperature Compensated Crystal Oscillator

THD Total Harmonic Distortion

Transport Stream-ATSC Consists of the following: (1) Packets: 188 bytes - fixed length with descriptive data, (2) Carries several programs, (3) has a PID which identifies the type of TS packet (video, audio, other), and (4) carries descriptive information about the program.

TS Transport Stream

UHF Ultra High Frequency

Unity Gain An electronic term indicating that a signal will be neither amplified or attenuated. One volt of signal level in results in one volt of signal level out.

Vector A measure that has two individual properties: magnitude and direction.

Vector Clip A special encoded clip version that limits only the C_B and C_R input video signals and does not affect (nor is it affected by) the luminance component. This color-only clip limits the maximum vector excursions as viewed in an encoded state and is intended for users who wish to prevent encoded vectors from ever exceeding the perimeter circle of an encoded vector display.

VHF Very High Frequency

Video Payload ID An ancillary data packet in a digital video interface for the purpose of identifying the video payload. Formatted according to SMPTE 352M the data includes the video format and interface transport, the picture rate and the picture and transport scanning methods, the sampling structure, and extended aspects of the video payload providing information about the channel assignment, dynamic range and bit-depth of the video payload.

VITC Vertical Interval Time Code, a method for recording on to video tape the timecode address for each video frame inserted in the vertical interval.

Waveform A visual representation of a signal in the shape of a wave that plots amplitude versus time.

White Level The brightest part of a video signal, corresponding to approximately 1.0 Volt.

White Balance An electronic process used to calibrate the picture for accurate color display in different lighting conditions.

Wipe A special effect in which two pictures from different video sources are displayed on one screen. Production switchers and special effects generators provide numerous wipe patterns varying from simple horizontal and vertical wipes to multi-shaped, multi-colored arrangements.

XGA High resolution 1024×768 non-interlaced (progressive) display monitor

XVGA Extended Video Graphics Adaptor

Y_PB_PR_P: CAV format composed of luminance (Y) and two color difference signals (P_B and P_R)

Y/C Also S-Video; Describes the separation of video signal luminance and chrominance components.

Zero Carrier Pulse (Chopper) In a TV demodulator, removes the carrier in the vertical interval for a short period, enabling depth of field measurement.

This page is intentionally blank.

Index

- About Screen, 182
- Alarm
 - Display, 81
 - Log, 81, 82
 - Status, 83
- Alarm Settings Display, 82, 114, 184
- Alarm Status, 85
- Alarms
 - Contents and Limitations, 184
 - CRC, 186
 - Duration, 183
 - Encoded Gamut, 70
 - Gamut, 183
 - GPI, 83, 184
 - Sample Message, 115, 184
 - Sensitivity, 183
 - Setting, 183
 - Time Code Errors, 198
 - TS Alarms, 193
 - VITS, 183
- Anamorphic, 169
- ASI, 107
 - Bandwidth and Trending, 109
- Aspect Ratio, 74
- Audio
 - ANALOG AUDIO IN/OUT
 - Connector Pinouts, 221
 - Audio Level Meters, 87
 - Configuring Display Type and Parameters, 86
 - Level, 87
 - Zoom, 97
- Audio Options
 - Specifications, 212
- Audio Setup
 - Audio Types, 86
- Audio Types, 86
 - AES/EBU, 86
 - Analog, 86
 - Dolby D, 86
 - Dolby E, 86
 - Dolby[®], 86
 - Embedded, 86
- Aural Alert, 180
- Back Panel, 10
- Connectors, 15, 47
 - A (IN), 47
 - A (OUT), 47
 - A/B MON OUT, 15, 47
 - Analog Audio In/Out, 15
 - B (IN), 47
 - B (OUT), 47
 - C/D MON OUT, 15
 - Digital Audio IN/OUT, 15
 - Digital Audio Output, 15
 - DVI Out, 16
 - ENET, 16
 - LTC/GPI, 16
 - Option C and D, 15
 - Ref, 16
 - Remote, 16
 - Router, 16
 - SDI Input A, 15
 - SDI Input B, 15
 - USB, 16
- Blanking
 - Waveform, 41
- Breakout Board
 - LTC/GPI, 223
- Bypass, 20, 23
 - Exit Bypass on Alarm, 23, 180
- Capture
 - Display, 128
 - SDI, 128
- CES, 183
- CineSound[™]
 - Audio Setup Menu, 93
 - Channels, 93
 - Input Mapping, 93
 - Left Surround, 93
 - LFE, 93
 - Right Surround, 93
- Clock, 113, 115, 184
 - Port Description, 16
- Clock Recovery Circuit, 46, 56
- Closed Caption, 76
 - Size, 168
- Closed Captioning Displays
 - Specifications, 215
- Cold Start, 205

- Communications Setup Menu, 172
- Component Sequence, 41
- Composite Gamut, 68
- Connectors
 - A/B MON OUT, 15, 47
 - Back Panel, 15, 47
 - A (IN), 47
 - A (OUT), 47
 - Analog Audio In/Out, 15
 - B (IN), 47
 - B (OUT), 47
 - Digital Audio IN/OUT, 15
 - Digital Audio Output, 15
 - DVI Out, 16
 - ENET, 16
 - LTC/GPI, 16
 - Option C and D, 15
 - Ref, 16
 - Remote, 16
 - Router, 16
 - SDI Input A, 15
 - SDI Input B, 15
 - USB, 16
 - C/D MON OUT, 15
- Console
 - Specifications, 217
- Control
 - Specifications, 213
- Controls
 - Types, 22
- Copyright Information, 227
- CRC
 - Display, 105
- CRC Alarms, 186
- CRC Error Display
 - Specifications, 215
- Cursor
 - Vector, 64
 - Waveform, 37
- Cursor Mode, 23
- Cursors
 - Eye Pattern, 44, 54
- Curved Arrow Knob, 23
- Customer Service, 11
- Data Analyzer
 - Specifications, 214
- Data Analyzer Display
 - VTM-OPT-3GB, 120
- Data Display
 - Data Search, 119
 - Format, 118
 - Menu, 117
 - Pixel Cursor, 116
 - Pixel Group, 118
 - Trigger on Alarm, 118
- Data Mode
 - Data, 115
- DISP, 23
- Display
 - Capture, 128
 - Specifications, 213
- Display Color Selection, 171
- Display Drivers
 - Specifications, 218
- Display Setup Menu, 171
- DVI-I Output
 - Specifications, 212
- Embedded Audio
 - Display, 111
- Encoded Gamut
 - Alarm, 70
- Environmental
 - Specifications, 217
- Ethernet
 - Addresses, 16
 - CAT5 Crossover Cable, 16, 17
 - Cold Started*, 205
 - Conforming to Industry Standards, 173
 - Connector Pinouts, 225
 - Dedicated Connection, 16, 17
 - Default Settings*, 205
 - Network Connection, 17
 - Recording Addresses, 16
 - Setup Instructions, 17
 - Specifications, 216
- Exit, 23
- Exit Bypass on Alarm, 23, 180
- External Reference, 27
- External Routing Control
 - Specifications, 216
- Eye Pattern, 114
 - Access, 42, 48
 - Cursors, 44, 54
 - Display, 41, 42
 - Graticules, 42, 51

- JEM Display, 48
- Jitter High Pass Filter, 46, 56
- Jitter Meter, 44, 53
- Menu, 46, 55
- Observation, 43, 52
- Parameters, 53
- Rise Time, 44
- Trigger Mode, 47, 56
- Zoom, 44, 53
- Eye Pattern Setup Menu, 164
- Eye Patterns
 - Specifications, 211
- File Navigation, 181
- Filter
 - Button, 46, 56
 - Waveform, 40
- Flash From USB, 181, 182
- Format
 - Input and Display Relationship, 41
 - Selecting, 40
- Front Panel, 10, 21
 - Controls and Indicators, 23
- Full Display, 23
- Function, 25
- Function Not Allowed, 25
- Gain
 - Vector, 62
- Gamut
 - Alarm, 183
 - Composite, 68
 - Display, 67
 - Line Select, 71
 - RGB, 70
 - Zoom, 72
- Gamut Display
 - Component, 71
 - Composite Graticule Markings, 69
 - Graticule Markings, 71
 - RGB, 70
 - Specifications, 216
- Gamut Setup Menu, 166
- Gateway, 16
- GPI
 - Alarms, 83, 184
 - Connector, 223
 - Input Setup, 174
 - Port Description, 16
- GPI Input Function, 174
- GPI Rename Screen, 174
- Graticules
 - Eye Pattern, 42, 51
 - Vector, 58
- H Sweep, 23
- Icon Descriptions, 29
- Inputs, 23
- Installation
 - Check Contents, 13
- IP Configuration, 173
- Jitter, 46, 56
 - Display, 41, 48
 - High Pass Filter Selection, 46, 56
- Jitter Display
 - Specifications, 211
- KEYBOARD
 - Commands, 199
- LFE, 100
- Line Mode, 23
- Line Select
 - Gamut, 71
 - Mode, 36, 64, 71
 - Waveform and Vector Display, 36, 63, 71
 - Vector, 63
 - Waveform, 36
- Linking Panes, 25
- Lissajous, 113
- Lockout
 - Panel, 177, 178
 - Preset, 177, 178
- LTC
 - Port Description, 16
- LTC/GPI, Connector, 223
- MAG, 23
- Magnification
 - Specifications, 216
- Mechanical
 - Specifications, 217
- Metadata
 - Dolby, 99
 - Dolby[®], 99
 - Video, 102
- MLT Display, 23
- Multi-Screen
 - Data Analyzer Display, 115
 - Selections, 112
 - Timing Custom, 123

- VTM Classic, 112
- WFM/VEC Only, 123
- NTSC Pedestal, 163
- Option
 - Display, 98
- Option Not Installed Message, 25
- Overlay
 - Waveform, 40
- Pane
 - Icons, 29
 - Input Selection, 25
 - Linking, 25
 - Navigation, 26
 - Overview, 28
 - Selection, 24
- Pane Select, 23
- Panel Lockout, 176, 177, 178
- Parade
 - Waveform, 40
- Phase
 - Bar, 88
 - Vector, 62
- Phase Mode, 23
- Picture
 - Aspect Ratio, 74
 - Closed Caption, 76
 - Delay, 75
 - Display, 73
 - Gamut, 76
 - Menu, 74
- Picture Setup Menu, 166
- Pinouts
 - ANALOG AUDIO IN/OUT
 - Connector, 221
 - Analog Audio IN/OUT Options, 221
 - DVI-I In/Out Connector, 222
 - Ethernet Connector, 225
 - LTC/GPI Connector, 223
 - Remote RJ-11 Control Connector, 224
 - Router RJ-11 Control Connector, 224
 - USB Connector, 225
- Power Requirements
 - Specifications, 217
- Preset Lockout, 177, 178
- Presets, 24, 126
 - Factory Preset, 127
- Menu, 127
- Recalling, 127
- Storing, 126
- RA. *See* Return Authorization
- Rack Mount, 14
- Reference, 79
 - Level, 113
- Remote Control
 - Configure, 18
 - Sample configurations, 18
 - Specifications, 216
- Return Authorization, 11
- RGB
 - Gamut Display, 70
- Router Control, 175
 - Access, 175
 - Configuration, 175
 - Dwell Time, 176
 - Input Selection, 175
 - Port Description, 16
- Router RJ-11 Control
 - Connector Pinouts, 224
- Scroll
 - Metadata, 100, 112
- SDI, 23
- SDI Display Freeze
 - Specifications, 214
- Service, 11
- Set Time, 179
- Setup, 23
- SETUP MENU, 113
- Shipment
 - Returning to Harris Corporation, 11
- SpyderWeb II, 200
- Standard Accessories
 - Specifications, 217
- Standards
 - Video, 6
- Step, 23
- Sweep modes, 34
- System Fault Log, 180
- System Setup Menu, 176
- Tally
 - Port Description, 16
- Teletext
 - Display, 105
- Terms, 21
- Thumbnail, 167

- Time Code
 - Sample Alarm Messages, 115, 184
 - Specifications, 214
- Timing
 - Display, 77
 - Pane Menu, 80
 - Reference Selection, 80
- Timing Display, 79
 - Horizontal, 79
 - Reference, 79
 - Test, 79
 - Vertical, 79
- Trending
 - Time Scale, 111
- Trigger Mode, 47, 56
- Troubleshooting
 - VTM Series, 205
- TS Alarms
 - Descriptions, 193
- Unit ID, 176
- Unit of Measure
 - Video Format, 29
- USB
 - Connector Pinouts, 225
- V Sweep, 23
- VAR, 23
- Variable Gain
 - Vector, 62
- Vector
 - Control, 62
 - Cursor, 64
 - Display, 57, 113
 - Expanding the Display, 72
 - Gain, 62
 - Line Select, 63
 - Pane Menu, 65
 - Phase, 62
 - Standard, 66
 - Variable Gain, 62
 - Zoom, 63
- Vector Setup Menu, 165
- Vertical Audio Meter, 87
- Video Format
 - Critical Amplitude Limits, 30
 - Unit of Measure, 29
- Video Format Menu, 161
- Video Input
 - Specifications
 - Analog, 210
 - SD-SDI, 210
 - SpecificationsHD-SDI/SD-SDI, 209
- Video Input Specifications
 - 3Gb/HD-SDI/SD-SDI, 209
- Video Setup
 - NTSC Pedestal, 163
- Video standards supported, 6
- VITS, 183
- Warm Start, 205
- Waveform, 29
 - Adjustment, 33
 - Blanking, 41
 - Center, 41
 - Component Sequence, 41
 - Cursor, 37
 - Display, 30, 114
 - Errors, 43, 52
 - Filter, 40
 - Gain, 35
 - Graticules, 31
 - Line Select Mode, 36
 - Pane Menu, 38
 - Parade and Overlay, 40
 - Sweep, 33
 - Zoom, 36
- Waveform Display, 30
- Waveform:, 40
- Web Remote Display, 201
- WFM/VEC Only
 - Display, 124
- XDS, 104
- XVGA Output, 23
- Zoom, 23
 - Audio, 97
 - Eye Pattern, 44
 - Gamut, 72
 - Vector, 63, 72

This page is intentionally blank.

