


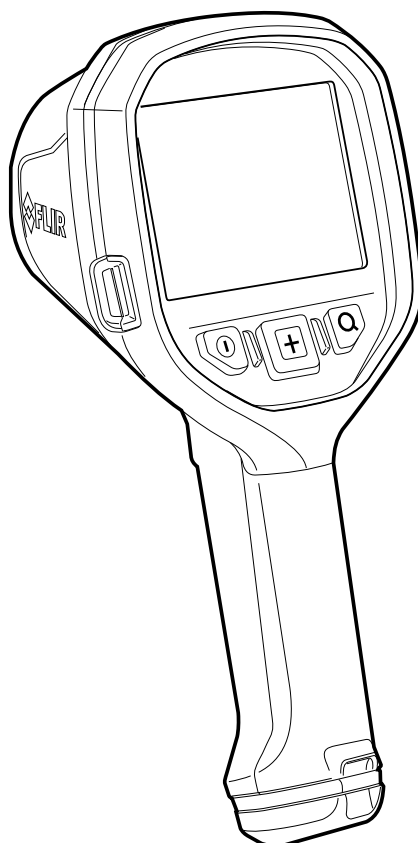

User's manual FLIR Kx5 series



Important note

Before operating the device, you must read, understand, and follow all instructions, warnings, cautions, and legal disclaimers.

Důležitá poznámka

Před použitím zařízení si přečtěte veškeré pokyny, upozornění, varování a vyvázání se ze záruky, ujistěte se, že jim rozumíte, a řiďte se jimi.

Viktig meddelelse

Før du betjener enheden, skal du læse, forstå og følge alle anvisninger, advarsler, sikkerhedsforanstaltninger og ansvarsfraskrivelser.

Wichtiger Hinweis

Bevor Sie das Gerät in Betrieb nehmen, lesen, verstehen und befolgen Sie unbedingt alle Anweisungen, Warnungen, Vorsichtshinweise und Haftungsausschlüsse

Σημαντική σημείωση

Πριν από τη λειτουργία της συσκευής, πρέπει να διαβάσετε, να κατανοήσετε και να ακολουθήσετε όλες τις οδηγίες, προειδοποιήσεις, προφυλάξεις και νομικές αποποιήσεις.

Nota importante

Antes de usar el dispositivo, debe leer, comprender y seguir toda la información sobre instrucciones, advertencias, precauciones y renunciaciones de responsabilidad.

Tärkeä huomautus

Ennen laitteen käyttämistä on luettava ja ymmärrettävä kaikki ohjeet, vakavat varoitukset, varoitukset ja lakitiedotteet sekä noudatettava niitä.

Remarque importante

Avant d'utiliser l'appareil, vous devez lire, comprendre et suivre l'ensemble des instructions, avertissements, mises en garde et clauses légales de non-responsabilité.

Fontos megjegyzés

Az eszköz használatá elött figyelmesen olvassa el és tartsa be az összes utasítást, figyelmeztetést, óvintézkedést és jogi nyilatkozatot.

Nota importante

Prima di utilizzare il dispositivo, è importante leggere, capire e seguire tutte le istruzioni, avvertenze, precauzioni ed esclusioni di responsabilità legali.

重要な注意

デバイスをご使用になる前に、あらゆる指示、警告、注意事項、および免責条項をお読み頂き、その内容を理解して従ってください。

중요한 참고 사항

장치를 작동하기 전에 반드시 다음의 사용 설명서와 경고, 주의사항, 법적 책임제한을 읽고 이해하며 따라야 합니다.

Viktig

Før du bruker enheten, må du lese, forstå og følge instruksjoner, advarsler og informasjon om ansvarsfraskrivelse.

Belangrijke opmerking

Zorg ervoor dat u, voordat u het apparaat gaat gebruiken, alle instructies, waarschuwingen en juridische informatie hebt doorgelezen en begrepen, en dat u deze opvolgt en in acht neemt.

Ważna uwaga

Przed rozpoczęciem korzystania z urządzenia należy koniecznie zapoznać się z wszystkimi instrukcjami, ostrzeżeniami, przestrożami i uwagami prawnymi. Należy zawsze postępować zgodnie z zaleceniami tam zawartymi.

Nota importante

Antes de utilizar o dispositivo, deverá proceder à leitura e compreensão de todos os avisos, precauções, instruções e isenções de responsabilidade legal e assegurar-se do seu cumprimento.

Важное примечание

До того, как пользоваться устройством, вам необходимо прочитать и понять все предупреждения, предостережения и юридические ограничения ответственности и следовать им.

Viktig information

Innan du använder enheten måste du läsa, förstå och följa alla anvisningar, varningar, försiktighetsåtgärder och ansvarsfriskrivningar.

Önemli not

Cihazı çalıştırmadan önce tüm talimatları, uyarıları, ikazları ve yasal açıklamaları okumalı, anlamalı ve bunlara uymalısınız.

重要注意事項

在操作设备之前，您必须阅读、理解并遵循所有说明、警告、注意事项和法律免责声明。

重要注意事項

操作裝置之前，您務必閱讀、了解並遵循所有說明、警告、注意事項與法律免責聲明。



User's manual FLIR Kx5 series



Table of contents

1	Legal disclaimer	1
1.1	Legal disclaimer	1
1.2	Usage statistics	1
1.3	Changes to registry	1
1.4	U.S. Government Regulations.....	1
1.5	Copyright	1
1.6	Quality assurance	1
1.7	Patents.....	1
1.8	EULA Terms	1
2	Safety information	2
2.1	Label affixed to the camera	5
2.1.1	FLIR K45 and FLIR K55.....	5
2.1.2	FLIR K65.....	5
2.2	Marking recommendations and restrictions.....	5
3	Notice to user	6
3.1	User-to-user forums	6
3.2	Disposal of electronic waste	6
3.3	Training	6
3.4	Documentation updates	6
3.5	Important note about this manual.....	6
3.6	Note about authoritative versions.....	6
4	Customer help	7
4.1	General	7
4.2	Submitting a question	7
4.3	Downloads	8
5	Important information about FLIR Kx5 series service	9
6	Starting the camera for the first time (FLIR K65)	10
7	Quick start guide	15
8	List of accessories and services	16
9	System configuration overview	17
9.1	Figure	17
9.2	Explanation	17
10	System parts	19
10.1	Camera (FLIR K45, FLIR K55)	19
10.1.1	Figure.....	19
10.1.2	Explanation.....	19
10.2	Camera (FLIR K65)	20
10.2.1	Figure.....	20
10.2.2	Explanation.....	20
10.3	Lanyard strap and retractable lanyard.....	21
10.4	Handle strap and retractable lanyard.....	21
10.5	Neck strap.....	22
11	Screen elements	23
11.1	Figure	23
11.2	Explanation	23
11.3	Battery condition indicator	24
11.4	Settings menu icons	24
12	Operation	25
12.1	Removing the battery (FLIR K45, FLIR K55)	25
12.1.1	Procedure	25
12.2	Removing the battery (FLIR K65)	26
12.2.1	Procedure	26
12.3	Charging the battery.....	26

Table of contents

12.3.1	General.....	26
12.3.2	Procedure	26
12.4	Turning on and turning off the camera.....	27
12.5	Selecting camera modes	28
12.5.1	General.....	28
12.5.2	Explanation of the different camera modes	29
12.6	Saving an image	32
12.6.1	General.....	32
12.6.2	Figure.....	32
12.6.3	Procedure	32
12.7	Recording a video clip (FLIR K55 and FLIR K65)	33
12.7.1	General.....	33
12.7.2	Figure.....	33
12.7.3	Procedure	33
12.8	Continuous video recording (FLIR K55 and FLIR K65)	34
12.8.1	General.....	34
12.9	Freezing the image.....	35
12.9.1	General.....	35
12.9.2	Figure.....	35
12.9.3	Procedure	35
12.10	Connecting the camera to a computer	36
12.10.1	General.....	36
12.10.2	Procedure (FLIR K45, FLIR K55)	36
12.10.3	Procedure (FLIR K65)	37
12.11	Viewing saved images	39
12.11.1	General.....	39
12.11.2	Procedure	39
12.12	Viewing saved video clips	40
12.12.1	General.....	40
12.12.2	Procedure	40
12.13	Changing settings (in the camera)	41
12.13.1	General.....	41
12.13.2	Procedure	41
12.14	Changing settings (in FLIR Tools)	43
12.14.1	The <i>General settings</i> tab.....	43
12.14.2	The <i>User interface</i> tab.....	43
13	In-truck charger (optional accessory)	46
13.1	Introduction	46
13.2	Parts and functions.....	46
13.3	Choosing a suitable position.....	47
13.4	Recommended cable area and fuse.....	47
13.5	Mounting instructions.....	47
13.6	Charging the camera	48
13.7	Charging a battery separately	48
13.8	Cleaning	48
13.9	Customer support	48
14	Technical data.....	49
14.1	Online field-of-view calculator	49
14.2	Note about technical data	49
14.3	Note about authoritative versions.....	49
14.4	FLIR K45	50
14.5	FLIR K55	54
14.6	FLIR K65	58
14.7	In-truck charger	62

Table of contents

15	Mechanical drawings	64
16	CE Declaration of conformity	68
17	Cleaning, decontamination and disinfection	70
17.1	Cleaning	70
17.1.1	Camera housing, cables, and other items	70
17.1.2	Infrared lens	70
17.2	Decontamination and disinfection	71
18	Maintenance, inspection, and service	72
18.1	Maintenance	72
18.2	Inspection	72
18.3	Service	72
19	Storage conditions	73
20	About FLIR Systems	74
20.1	More than just an infrared camera	75
20.2	Sharing our knowledge	75
20.3	Supporting our customers	76
21	History of infrared technology	77

1.1 Legal disclaimer

All products manufactured by FLIR Systems are warranted against defective materials and workmanship for a period of one (1) year from the delivery date of the original purchase, provided such products have been under normal storage, use and service, and in accordance with FLIR Systems instruction.

Uncooled handheld infrared cameras manufactured by FLIR Systems are warranted against defective materials and workmanship for a period of two (2) years from the delivery date of the original purchase, provided such products have been under normal storage, use and service, and in accordance with FLIR Systems instruction, and provided that the camera has been registered within 60 days of original purchase.

Detectors for uncooled handheld infrared cameras manufactured by FLIR Systems are warranted against defective materials and workmanship for a period of ten (10) years from the delivery date of the original purchase, provided such products have been under normal storage, use and service, and in accordance with FLIR Systems instruction, and provided that the camera has been registered within 60 days of original purchase.

Products which are not manufactured by FLIR Systems but included in systems delivered by FLIR Systems to the original purchaser, carry the warranty, if any, of the particular supplier only. FLIR Systems has no responsibility whatsoever for such products.

The warranty extends only to the original purchaser and is not transferable. It is not applicable to any product which has been subjected to misuse, neglect, accident or abnormal conditions of operation. Expendable parts are excluded from the warranty.

In the case of a defect in a product covered by this warranty the product must not be further used in order to prevent additional damage. The purchaser shall promptly report any defect to FLIR Systems or this warranty will not apply.

FLIR Systems will, at its option, repair or replace any such defective product free of charge if, upon inspection, it proves to be defective in material or workmanship and provided that it is returned to FLIR Systems within the said one-year period.

FLIR Systems has no other obligation or liability for defects than those set forth above.

No other warranty is expressed or implied. FLIR Systems specifically disclaims the implied warranties of merchantability and fitness for a particular purpose.

FLIR Systems shall not be liable for any direct, indirect, special, incidental or consequential loss or damage, whether based on contract, tort or any other legal theory.

This warranty shall be governed by Swedish law.

Any dispute, controversy or claim arising out of or in connection with this warranty, shall be finally settled by arbitration in accordance with the Rules of the Arbitration Institute of the Stockholm Chamber of Commerce. The place of arbitration shall be Stockholm. The language to be used in the arbitral proceedings shall be English.

1.2 Usage statistics

FLIR Systems reserves the right to gather anonymous usage statistics to help maintain and improve the quality of our software and services.

1.3 Changes to registry

The registry entry HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Control\Lsa\LmCompatibilityLevel will be automatically changed to level 2 if the FLIR Camera Monitor service detects a FLIR camera connected to the computer with a USB cable. The modification will only be executed if the camera device implements a remote network service that supports network logons.

1.4 U.S. Government Regulations

This product may be subject to U.S. Export Regulations. Please send any inquiries to exportquestions@flir.com.

1.5 Copyright

© 2016, FLIR Systems, Inc. All rights reserved worldwide. No parts of the software including source code may be reproduced, transmitted, transcribed or translated into any language or computer language in any form or by any means, electronic, magnetic, optical, manual or otherwise, without the prior written permission of FLIR Systems.

The documentation must not, in whole or part, be copied, photocopied, reproduced, translated or transmitted to any electronic medium or machine readable form without prior consent, in writing, from FLIR Systems.

Names and marks appearing on the products herein are either registered trademarks or trademarks of FLIR Systems and/or its subsidiaries. All other trademarks, trade names or company names referenced herein are used for identification only and are the property of their respective owners.

1.6 Quality assurance

The Quality Management System under which these products are developed and manufactured has been certified in accordance with the ISO 9001 standard.

FLIR Systems is committed to a policy of continuous development; therefore we reserve the right to make changes and improvements on any of the products without prior notice.











1.7 Patents











000439161; 000653423; 000726344; 000859020; 001707738; 001707746; 001707787; 001776519; 001954074; 002021543; 002021543-0002; 002058180; 002249953; 002531178; 002816785; 002816793; 011200326; 014347553; 057692; 061609; 07002405; 100414275; 101796816; 101796817; 101796818; 102334141; 1062100; 11063060001; 11517895; 1226865; 12300216; 12300224; 1285345; 1299699; 1325808; 1336775; 1391114; 1402918; 1404291; 1411581; 1415075; 1421497; 1458284; 1678485; 1732314; 17399650; 1880950; 1886650; 2007301511414; 2007303395047; 2008301285812; 2009301900619; 20100060357; 2010301761271; 2010301761303; 2010301761572; 2010305959313; 2011304423549; 2012304717443; 2012306207318; 2013302676195; 2015202354035; 2015304259171; 204465713; 204967995; 2106017; 2107799; 2115696; 2172004; 2315433; 2381417; 2794760001; 3006596; 3006597; 303330211; 4358936; 483782; 484155; 4889913; 4937897; 4995790001; 5177595; 540838; 579475; 584755; 599392; 60122153; 6020040116815; 602006006500.0; 6020080347796; 6020110003453; 615113; 615116; 664580; 664581; 665004; 665440; 67023029; 6707044; 677298; 68657; 69036179; 70022216; 70028915; 70028923; 70057990; 7034300; 710424; 7110035; 7154093; 7157705; 718801; 723605; 7237946; 7312822; 7332716; 7336823; 734803; 7544944; 7606484; 7634157; 7667198; 7809258; 7826736; 8018649; 8153971; 8212210; 8289372; 8340414; 8354639; 8384783; 8520970; 8565547; 8595689; 8599262; 8654239; 8660468; 8803093; 8823803; 8853631; 8933403; 9171361; 9191583; 9279728; 9280812; 9338352; 9423940; 9471970; 9595087; D549758.










1.8 EULA Terms






- You have acquired a device ("INFRARED CAMERA") that includes software licensed by FLIR Systems AB from Microsoft Licensing, GP or its affiliates ("MS"). Those installed software products of MS origin, as well as associated media, printed materials, and "online" or electronic documentation ("SOFTWARE") are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved.
- IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT ("EULA"), DO NOT USE THE DEVICE OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT FLIR Systems AB FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. **ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).**
- GRANT OF SOFTWARE LICENSE.** This EULA grants you the following license:
 - You may use the SOFTWARE only on the DEVICE.
 - NOT FAULT TOLERANT.** THE SOFTWARE IS NOT FAULT TOLERANT. FLIR Systems AB HAS INDEPENDENTLY DETERMINED HOW TO USE THE SOFTWARE IN THE DEVICE, AND MS HAS RELIED UPON FLIR Systems AB TO CONDUCT SUFFICIENT TESTING TO DETERMINE THAT THE SOFTWARE IS SUITABLE FOR SUCH USE.
 - NO WARRANTIES FOR THE SOFTWARE.** THE SOFTWARE is provided "AS IS" and with all faults. THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY, AND EFFORT (INCLUDING LACK OF NEGLIGENCE) IS WITH YOU. ALSO, THERE IS NO WARRANTY AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE OR AGAINST INFRINGEMENT. **IF YOU HAVE RECEIVED ANY WARRANTIES REGARDING THE DEVICE OR THE SOFTWARE, THOSE WARRANTIES DO NOT ORIGINATE FROM, AND ARE NOT BINDING ON, MS.**
 - No Liability for Certain Damages. **EXCEPT AS PROHIBITED BY LAW, MS SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. IN NO EVENT SHALL MS BE LIABLE FOR ANY AMOUNT IN EXCESS OF U.S. TWO HUNDRED FIFTY DOLLARS (U.S.\$250.00).**
 - Limitations on Reverse Engineering, Decompilation, and Disassembly.** You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.
 - SOFTWARE TRANSFER ALLOWED BUT WITH RESTRICTIONS.** You may permanently transfer rights under this EULA only as part of a permanent sale or transfer of the Device, and only if the recipient agrees to this EULA. If the SOFTWARE is an upgrade, any transfer must also include all prior versions of the SOFTWARE.
 - EXPORT RESTRICTIONS.** You acknowledge that SOFTWARE is subject to U.S. export jurisdiction. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and destination restrictions issued by U.S. and other governments. For additional information see <http://www.microsoft.com/exporting/>.

Safety information

	WARNING
Applicability: Cameras with one or more batteries.	
Do not disassemble or do a modification to the battery. The battery contains safety and protection devices which, if damage occurs, can cause the battery to become hot, or cause an explosion or an ignition.	
	WARNING
Applicability: Cameras with one or more batteries.	
If there is a leak from the battery and you get the fluid in your eyes, do not rub your eyes. Flush well with water and immediately get medical care. The battery fluid can cause injury to your eyes if you do not do this.	
	WARNING
Applicability: Cameras with one or more batteries.	
Do not continue to charge the battery if it does not become charged in the specified charging time. If you continue to charge the battery, it can become hot and cause an explosion or ignition. Injury to persons can occur.	
	WARNING
Applicability: Cameras with one or more batteries.	
Only use the correct equipment to remove the electrical power from the battery. If you do not use the correct equipment, you can decrease the performance or the life cycle of the battery. If you do not use the correct equipment, an incorrect flow of current to the battery can occur. This can cause the battery to become hot, or cause an explosion. Injury to persons can occur.	
	WARNING
Make sure that you read all applicable MSDS (Material Safety Data Sheets) and warning labels on containers before you use a liquid. The liquids can be dangerous. Injury to persons can occur.	
	CAUTION
Do not point the infrared camera (with or without the lens cover) at strong energy sources, for example, devices that cause laser radiation, or the sun. This can have an unwanted effect on the accuracy of the camera. It can also cause damage to the detector in the camera.	
	CAUTION
Applicability: Cameras with one or more batteries.	
Do not attach the batteries directly to a car's cigarette lighter socket, unless FLIR Systems supplies a specific adapter to connect the batteries to a cigarette lighter socket. Damage to the batteries can occur.	
	CAUTION
Applicability: Cameras with one or more batteries.	
Do not connect the positive terminal and the negative terminal of the battery to each other with a metal object (such as wire). Damage to the batteries can occur.	
	CAUTION
Applicability: Cameras with one or more batteries.	
Do not get water or salt water on the battery, or permit the battery to become wet. Damage to the batteries can occur.	
	CAUTION
Applicability: Cameras with one or more batteries.	
Do not make holes in the battery with objects. Damage to the battery can occur.	

 CAUTION
Applicability: Cameras with one or more batteries. Do not hit the battery with a hammer. Damage to the battery can occur.
 CAUTION
Applicability: Cameras with one or more batteries. Do not put your foot on the battery, hit it or cause shocks to it. Damage to the battery can occur.
 CAUTION
Applicability: Cameras with one or more batteries. Do not put the batteries in or near a fire, or into direct sunlight. When the battery becomes hot, the built-in safety equipment becomes energized and can stop the battery charging procedure. If the battery becomes hot, damage can occur to the safety equipment and this can cause more heat, damage or ignition of the battery.
 CAUTION
Applicability: Cameras with one or more batteries. Do not put the battery on a fire or increase the temperature of the battery with heat. Damage to the battery and injury to persons can occur.
 CAUTION
Applicability: Cameras with one or more batteries. Do not put the battery on or near fires, stoves, or other high-temperature locations. Damage to the battery and injury to persons can occur.
 CAUTION
Applicability: Cameras with one or more batteries. Do not solder directly onto the battery. Damage to the battery can occur.
 CAUTION
Applicability: Cameras with one or more batteries. Do not use the battery if, when you use, charge, or put the battery in storage, there is an unusual smell from the battery, the battery feels hot, changes color, changes shape, or is in an unusual condition. Speak with your sales office if one or more of these problems occurs. Damage to the battery and injury to persons can occur.
 CAUTION
Applicability: Cameras with one or more batteries. Only use a specified battery charger when you charge the battery. Damage to the battery can occur if you do not do this.
 CAUTION
Applicability: Cameras with one or more batteries. Only use a specified battery for the camera. Damage to the camera and the battery can occur if you do not do this.
 CAUTION
Applicability: Cameras with one or more batteries. The temperature range through which you can charge the battery is 0°C to +45°C (+32°F to +113°F). If you charge the battery at temperatures out of this range, it can cause the battery to become hot or to break. It can also decrease the performance or the life cycle of the battery.

 CAUTION	
<p>Applicability: Cameras with one or more batteries.</p> <p>The temperature range through which you can remove the electrical power from the battery is -15°C to +50°C (+5°F to +122°F), unless other information is specified in the user documentation or technical data. If you operate the battery out of this temperature range, it can decrease the performance or the life cycle of the battery.</p>	
 CAUTION	
<p>Applicability: Cameras with one or more batteries.</p> <p>When the battery is worn, apply insulation to the terminals with adhesive tape or equivalent materials before you discard it. Damage to the battery and injury to persons can occur if you do not do this.</p>	
 CAUTION	
<p>Applicability: Cameras with one or more batteries.</p> <p>Remove any water or moisture on the battery before you install it. Damage to the battery can occur if you do not do this.</p>	
 CAUTION	
<p>Do not apply solvents or equivalent liquids to the camera, the cables, or other items. Damage to the battery and injury to persons can occur.</p>	
 CAUTION	
<p>Be careful when you clean the infrared lens. The lens has an anti-reflective coating which is easily damaged. Damage to the infrared lens can occur.</p>	
 CAUTION	
<p>Do not use too much force to clean the infrared lens. This can cause damage to the anti-reflective coating.</p>	
<p>Note The encapsulation rating is only applicable when all the openings on the camera are sealed with their correct covers, hatches, or caps. This includes the compartments for data storage, batteries, and connectors.</p>	
 CAUTION	
<p>Do not change the standard fire-fighting procedures when you use a FLIR K series camera. The FLIR K series camera is not a replacement technology.</p>	
 CAUTION	
<p>Do not use the FLIR K series camera without the correct training. If the persons that operate the camera do not have the correct training, an incorrect analysis of the infrared images can occur. Thus, incorrect decisions during the firefighting can be made.</p> <p>The training must include:</p> <ul style="list-style-type: none"> • How a thermal camera operates and its limits • How to interpret an image • How to work safely with the camera. 	
 CAUTION	
<p>Make sure that you do not use a torque value that is more than 80 Ncm on the Torx T20 screw. Damage to the camera can occur if you do not obey this.</p>	


	CAUTION
Only use the equipment as given in the applicable manufacturer's instructions. If you do not obey this, the protection that the equipment gives can become unsatisfactory. Damage to the equipment can occur.	
	CAUTION
Only use with batteries that have the part number T198310 on them (that FLIR Systems AB supplies). Damage to the equipment can occur if you do not obey this.	
	WARNING
Make sure that you only change the batteries in a known safe area. If you do not obey this, an explosion can occur. An explosion can cause death or injury to persons and damage to the equipment.	
	CAUTION
Do not open unless you are sure that there are no flammable materials in the area. A fire or an explosion can occur. This can cause injury or death to persons and damage to the equipment.	
	CAUTION
Do not use the connection port while it is in a classified (danger) area. Injury to persons and damage to the equipment can occur.	

2.1 Label affixed to the camera

2.1.1 FLIR K45 and FLIR K55



2.1.2 FLIR K65

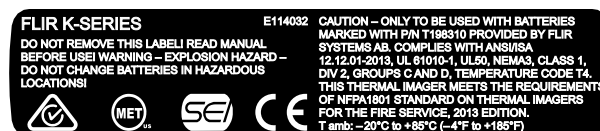

2.2 Marking recommendations and restrictions

Applicability: FLIR K65

The camera body may not be physically marked. Such markings include labels, engravings, printing, melting, etc. If the camera needs to be identified or tracked, such identification shall be carried out by adding a custom boot image in the camera firmware, using FLIR Tools.

See section 12.14.2 *The User interface tab*, page 43 for more information.

3.1 User-to-user forums

Exchange ideas, problems, and infrared solutions with fellow thermographers around the world in our user-to-user forums. To go to the forums, visit:

<http://forum.infraredtraining.com/>

3.2 Disposal of electronic waste



As with most electronic products, this equipment must be disposed of in an environmentally friendly way, and in accordance with existing regulations for electronic waste.

Please contact your FLIR Systems representative for more details.

3.3 Training

To read about infrared training, visit:

- <http://www.infraredtraining.com>
- <http://www.irtraining.com>
- <http://www.irtraining.eu>

3.4 Documentation updates

Our manuals are updated several times per year, and we also issue product-critical notifications of changes on a regular basis.

To access the latest manuals, translations of manuals, and notifications, go to the Download tab at:

<http://support.flir.com>

It only takes a few minutes to register online. In the download area you will also find the latest releases of manuals for our other products, as well as manuals for our historical and obsolete products.

3.5 Important note about this manual

FLIR Systems issues generic manuals that cover several cameras within a model line.

This means that this manual may contain descriptions and explanations that do not apply to your particular camera model.

3.6 Note about authoritative versions

The authoritative version of this publication is English. In the event of divergences due to translation errors, the English text has precedence.

Any late changes are first implemented in English.

FLIR Customer Support Center

Home Answers Ask a Question Product Registration Downloads My Stuff Service

FLIR Customer support

Get the most out of your FLIR products

Get Support for Your FLIR Products

Welcome to the FLIR Customer Support Center. This portal will help you as a FLIR customer to get the most out of your FLIR products. The portal gives you access to:

- The FLIR Knowledgebase
- Ask our support team (requires registration)
- Software and documentation (requires registration)
- FLIR service contacts












Find Answers
We store all resolved problems in our solution database. Search by product, category, keywords, or phrases.

Search by Keyword


[Search All Answers](#)


[See All Popular Answers](#)

To find a datasheet for a current product, click on a picture.
To find a datasheet for a legacy product, click [here](#).

[FLIR Ex](#) [FLIR Exx](#) [FLIR Kxx](#) [FLIR T4xx](#) [FLIR T6xx](#) [FLIR G3xx](#)
     
[ThermaCAM™ GasFindIR](#) [FLIR GF3xx](#) [FLIR AX](#) [FLIR Ax5](#) [FLIR A3xx](#) [More...](#)
    

Product catalog
Please right-click the links below and select Save Target As... to save the file.

 US Letter (28 Mb)
A4 (27.4 Mb)

Accessories


[Important legal disclaimer, dangers, warnings, and cautions](#)

4.1 General

For customer help, visit:

<http://support.flir.com>

4.2 Submitting a question

To submit a question to the customer help team, you must be a registered user. It only takes a few minutes to register online. If you only want to search the knowledgebase for existing questions and answers, you do not need to be a registered user.

When you want to submit a question, make sure that you have the following information to hand:

- The camera model
- The camera serial number
- The communication protocol, or method, between the camera and your device (for example, SD card reader, HDMI, Ethernet, USB, or FireWire)
- Device type (PC/Mac/iPhone/iPad/Android device, etc.)
- Version of any programs from FLIR Systems

- Full name, publication number, and revision number of the manual

4.3 Downloads

On the customer help site you can also download the following, when applicable for the product:

- Firmware updates for your infrared camera.
- Program updates for your PC/Mac software.
- Freeware and evaluation versions of PC/Mac software.
- User documentation for current, obsolete, and historical products.
- Mechanical drawings (in *.dxf and *.pdf format).
- Cad data models (in *.stp format).
- Application stories.
- Technical datasheets.
- Product catalogs.

Important information about FLIR Kx5 series service

- Contact the service department before shipping the camera. Many problems can be resolved on the phone—if so, the camera does not need to be shipped.
- The camera must be thoroughly cleaned, decontaminated and disinfected before shipping to our service department. No hazardous residues are allowed on cameras. Such residues include—but are not limited to—chemical fire-extinguishing compounds, radioactivity, biohazardous materials, and residues from chemical fires.
- FLIR Systems reserves the right to charge the full cost for the decontamination and disinfection of contaminated cameras that are shipped to our service department.


Starting the camera for the first time (FLIR K65)

Applicability: FLIR K65

The first time you start the camera, you need to unlock the camera by entering a camera unique code. The code is based on the serial number of the camera. To get the camera unique code, you must log in using a FLIR Customer Support account and register the camera. If you already have an existing FLIR Customer Support account, you can use the same login credentials.

Follow this procedure:


1. Charge the battery for 4 hours before starting the camera for the first time, or until the blue battery condition LED glows continuously.
2. Push the on/off button to turn on the camera. This displays the following dialog box:

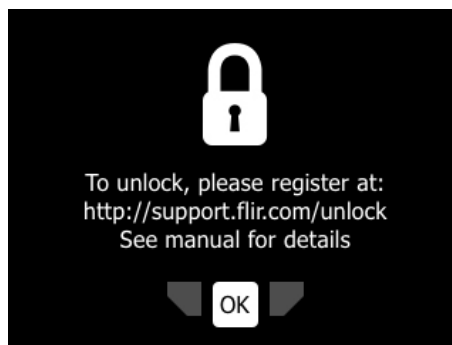

3. Use a computer or other device with internet access and go to the following website:

<http://support.flir.com/unlock>

This displays the following dialog:

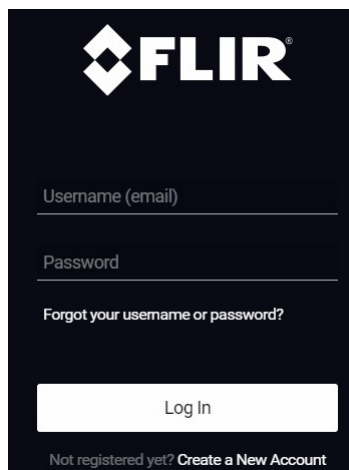

4. To log in with your existing FLIR Customer Support account, do the following:
 - 4.1. Enter your *Username* and *Password*.
 - 4.2. Click *Log In*.

5. To create a new FLIR Customer Support account, do the following:

- 5.1. Click *Create a New Account*.
- 5.2. Enter the required information and click *Create Account*.

FLIR Customer Support Center

Home | Answers | Ask a Question | Product Registration | Downloads | My Stuff | Service

Create Account

* Denotes a required field.

New Account

Username (email) *

Password *
Must be at least 6 characters

Verify Password *

Contact Information

First Name *

Last Name *

Email Address *

Telephone

Company *

Address

City

State

Postal Code

Country *

When You are Done...

6. On the camera, push the *Mode* button. This displays a dialog box. The serial number (S/N) of the camera is displayed at the top of the screen.



7. On the computer, enter the serial number of the camera and click *Validate*.

FLIR Customer Support Center

The screenshot shows the 'FLIR Product Registration' page. At the top, there is a navigation bar with links: Home, Answers, Ask a Question, Product Registration, Downloads, My Stuff, and Service. Below the navigation bar is a blue header with the text 'FLIR Product Registration'. Underneath the header, there is a message: 'Please see this [FAQ](#) answer for information on registration of FLIR Security products'. Below this message is a text input field labeled 'Serial number'. Below the input field is the instruction: 'Enter your serial number in the textbox and click Validate'. At the bottom of the form is a blue button labeled 'Validate'.

8. When the serial number is validated, click *Continue*.

FLIR Customer Support Center

The screenshot shows the 'FLIR Product Registration' page after successful validation. The navigation bar and header are the same as in the previous screenshot. The message below the header is the same. The 'Serial number' input field now contains the value '72204950'. Below the input field is the instruction: 'Enter your serial number in the textbox and click Validate'. To the right of the input field, there is a table with two columns: 'Part number' and 'Description'. The table contains one row with the values '72202-0303' and 'FLIR'. Below the table is the message: 'Your serial number is validated and was found, please click Continue.'. At the bottom of the form, there are two blue buttons: 'Validate' and 'Continue'.

Part number	Description
72202-0303	FLIR

9. Enter the required information and click *Register Product*.

FLIR Customer Support Center

Home Answers Ask a Question Product Registration Downloads My Stuff Service

FLIR Product Registration

*** Required Information**

First name *

Last name *

Title

Email *

Telephone *

Country *

Company *

Address *

City *

State/Province

Postal Code *

Choose Industry The core business of your company *

Choose Application The main application for your FLIR product *

Click the button to register
FLIR
Serial number 72204950

Register Product

10. When the registration is completed, the four-digit code is displayed.

FLIR Customer Support Center

Home Answers Ask a Question Product Registration Downloads My Stuff Service

FLIR Product Registration

Thank you for registering your product.

Use the code below to unlock your camera:
Code: 2198

Your warranty has been extended to two (2) years.

Your product will be visible under My Stuff - Products

Note

- The code is also sent by e-mail to the address registered with your FLIR Customer Support account.
- The code is also displayed in your FLIR Customer Support portal under *My Stuff > Products*.

11. On the camera, do the following to enter the code:

- Push the *Mode* button repeatedly to change a digit.
- Push the *Zoom* button to navigate to the next digit.
- When all of the digits have been entered, push the *Zoom* button to select ✓. Push the *Zoom* button again to confirm.



12. Depending on the entered code, one of the following will happen:

- If the entered code is correct, ✓ is momentarily displayed. Then the unlock dialog box closes.
- If the entered code is incorrect, ✗ is momentarily displayed. Then the unlock dialog is zeroed and you can enter the code again.

13. The camera is now fully operational and an infrared image is displayed.

14. To turn off the camera, push and hold the on/off button for more than 10 seconds.

Note The next time you turn on the camera, it will be fully operational from its start-up. You do not have to go through the unlock procedure again.

Follow this procedure to get started right away:


1. Charge the battery for 4 hours before starting the camera for the first time, or until the blue battery condition LED glows continuously.
2. Push the on/off button to turn on the camera.
3. Aim the camera toward the object of interest.
4. Select a suitable camera mode by pushing the Mode button.
5. Pull the trigger to save an image.
6. Connect the camera to a computer, using the USB cable.
7. Do one of the following:
 - Move the image to the computer using a drag-and-drop operation in Microsoft Windows Explorer.
Note Moving an image using a drag-and-drop operation does not delete the image in the camera.
 - Move the image to the computer using FLIR Tools. In FLIR Tools you can analyze the images and create PDF reports.

Note The function of the trigger is configured by a setting in FLIR Tools, see section 12.14.2 *The User interface tab*, page 43.

Product name	Part no.
Battery charger, incl. power supply with multi plugs (Exx, Kxx)	T198125
Battery Li-ion 3.6 V, 4.4 Ah, 16 Wh	T199368ACC
Carabiner strap	T129915ACC
Cigarette lighter adapter kit, 12 VDC, 1.2 m/3.9 ft.	T198509
FLIR K65 accessory kit	T199398
In-truck charger	T198322ACC
Lanyard strap	T198416ACC
Li-Ion Battery pack 3.6 V 16 Wh	T198310ACC
Neck strap	T127724ACC
Retractable lanyard	T127722ACC
Screwdriver TX20	T911309ACC
Transport case Kxx	T198441ACC
Tripod Adapter, Kxx	T198457ACC
USB cable Std A <-> Mini-B	1910423

Note FLIR Systems reserves the right to discontinue models, parts or accessories, and other items, or to change specifications at any time without prior notice.

9.1 Figure

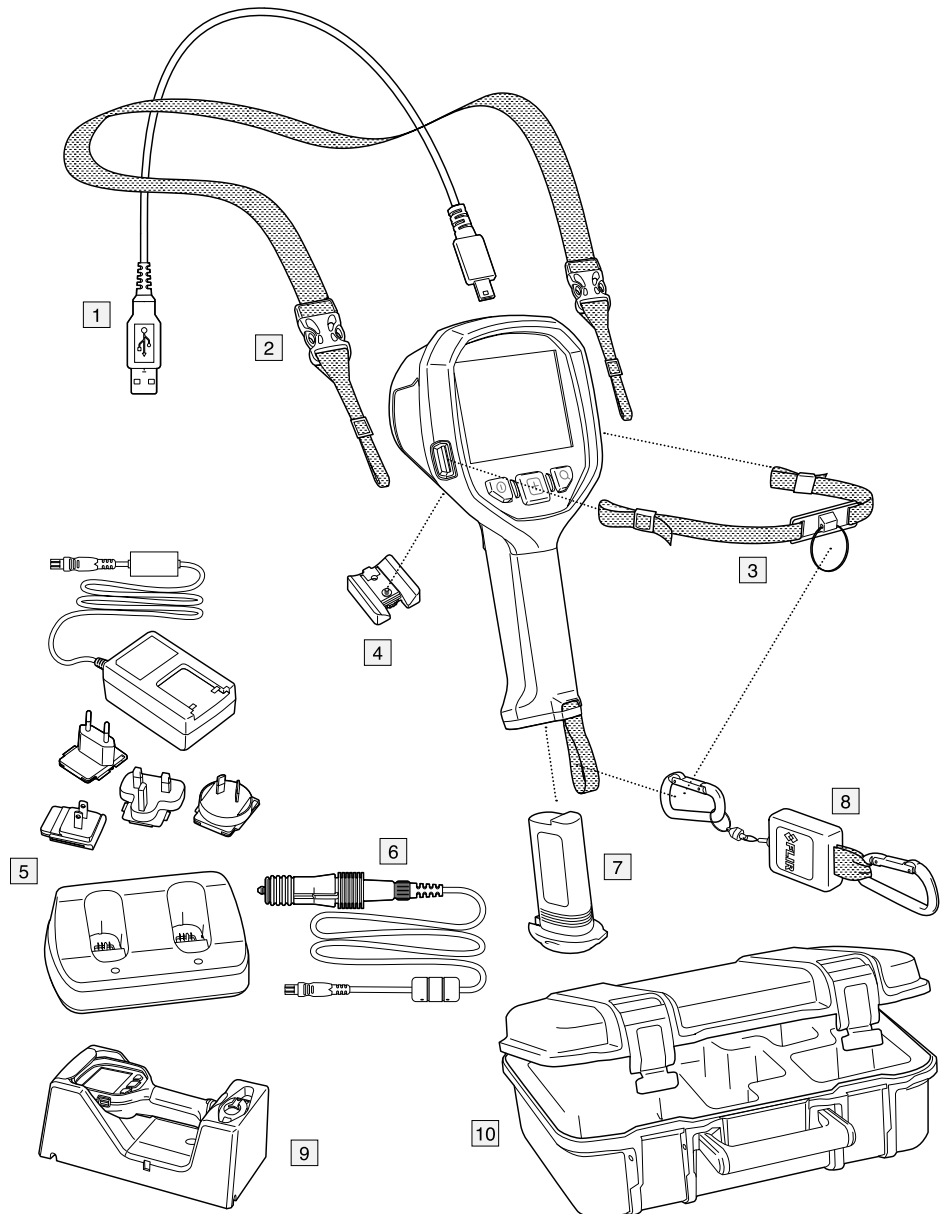

9.2 Explanation


1. FLIR P/N: 1910423, USB cable Std A <-> Mini-B
2. FLIR P/N: T127724ACC, Neck strap¹
3. FLIR P/N: T198416ACC, Strap lanyard¹
4. FLIR P/N: T198457ACC, Tripod Adapter, Kxx¹
5. FLIR P/N: T198125, Battery charger, incl. power supply with multi plugs
6. FLIR P/N: T198509, Cigarette lighter adapter kit, 12 VDC, 1.2 m/3.9 ft
7. FLIR P/N: T198310ACC, Li-Ion Battery pack 3.6 V 16 Wh
8. FLIR P/N: T127722ACC, Retractable lanyard¹

1. The inclusion of this item is dependent on model.

- 9. FLIR P/N: T198322ACC, In-truck charger
- 10. FLIR P/N: T198441ACC, Transport case Kxx

10.1 Camera (FLIR K45, FLIR K55)

10.1.1 Figure

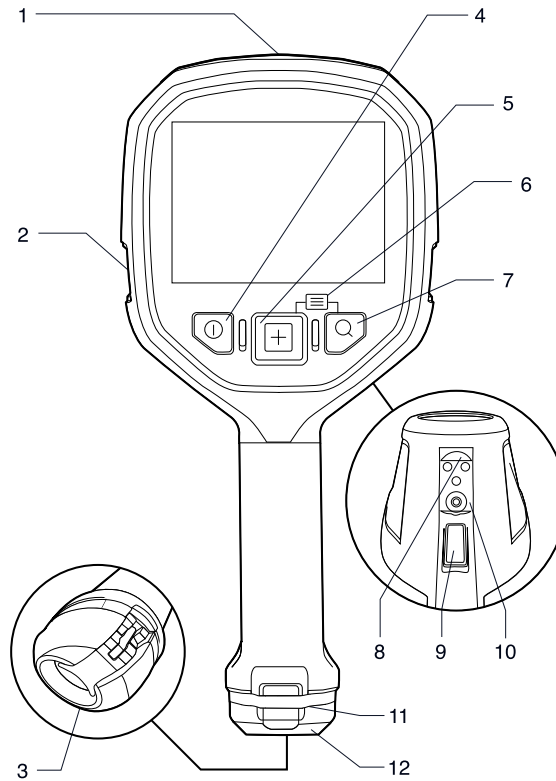


10.1.2 Explanation

1. USB Mini-B connector: Connect to a computer to download images using FLIR Tools.
2. Attachment point for the lanyard strap/neck strap (left and right sides).
3. Eccentric latch to secure the battery.
4. On/off button. This button has three functions:
 - Push the on/off button to turn on the camera.
 - Push and hold the on/off button for more than 3 seconds but less than 10 seconds to put the camera into standby mode. The camera then automatically turns off after 6 hours.
 - Push and hold the on/off button for more than 10 seconds to turn off the camera.
5. Mode button: Push repeatedly to select camera modes.
6. Access to setup menus and stored images: Push Mode + Zoom button.
7. Zoom button (zoom factor 2×).
8. Connectors for in-truck charger.
9. Trigger.
10. Mount for tripod adapter.
11. Attachment point for the retractable lanyard.
12. Battery.

10.2 Camera (FLIR K65)

10.2.1 Figure

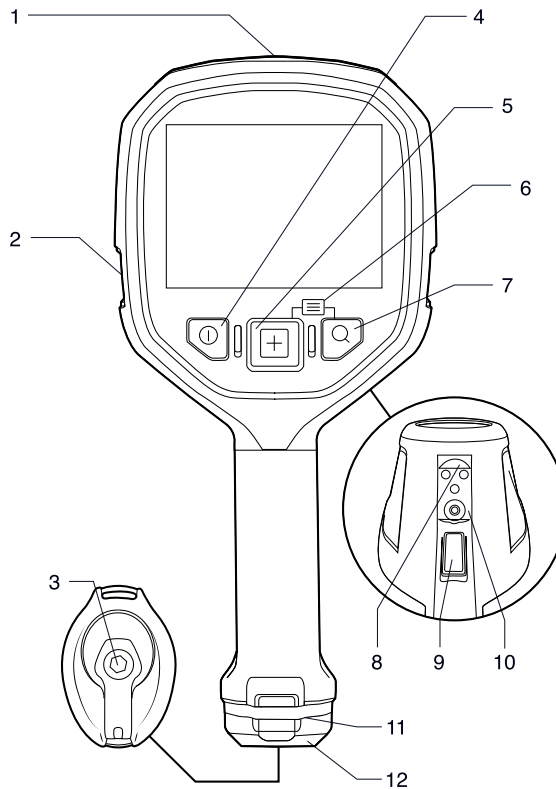

10.2.2 Explanation

1. USB Mini-B connector: Connect to a computer to download images using FLIR Tools. The USB Mini-B connector is protected by a plastic cover that is fastened with a Torx screw (T20).



CAUTION

Make sure that you do not use a torque value that is more than 80 Ncm on the Torx T20 screw. Damage to the camera can occur if you do not obey this.

2. Attachment point for lanyard strap/neck strap (left and right sides).
3. Latch to secure the battery. The latch is fastened with a Torx screw (T20).




CAUTION

Make sure that you do not use a torque value that is more than 80 Ncm on the Torx T20 screw. Damage to the camera can occur if you do not obey this.


4. On/off button. This button has three functions:
 - Push the on/off button to turn on the camera.
 - Push and hold the on/off button for more than 3 seconds but less than 10 seconds to put the camera into standby mode. The camera then automatically turns off after 6 hours.
 - Push and hold the on/off button for more than 10 seconds to turn off the camera.
5. Mode button: Push repeatedly to select camera modes.
6. Access to the setup menus and stored images: Push the Mode + Zoom buttons.
7. Zoom button (zoom factor $\times 2$).
8. Connectors for the in-truck charger.

- 9. Trigger.
- 10. Mount for the tripod adapter.
- 11. Attachment point for the retractable lanyard.
- 12. Battery.


10.3 Lanyard strap and retractable lanyard

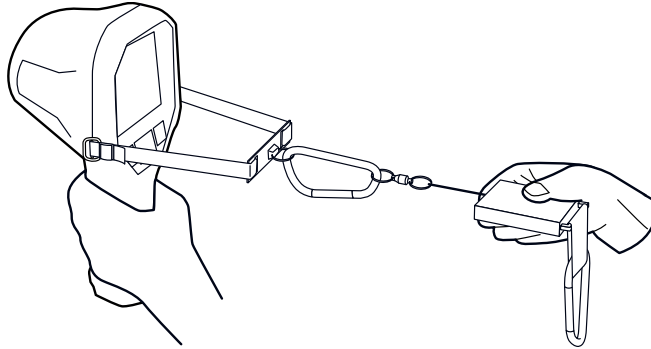


10.4 Handle strap and retractable lanyard

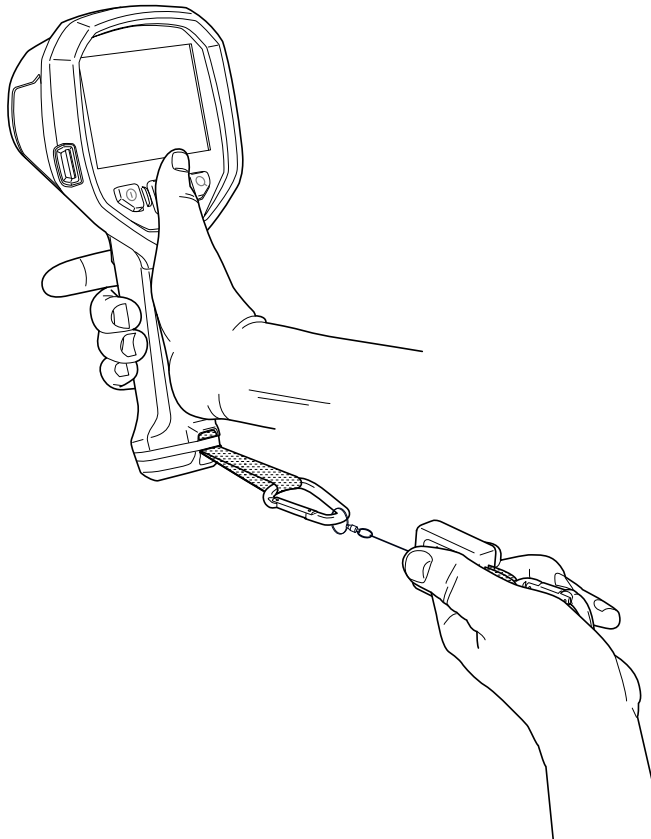

10.5 Neck strap

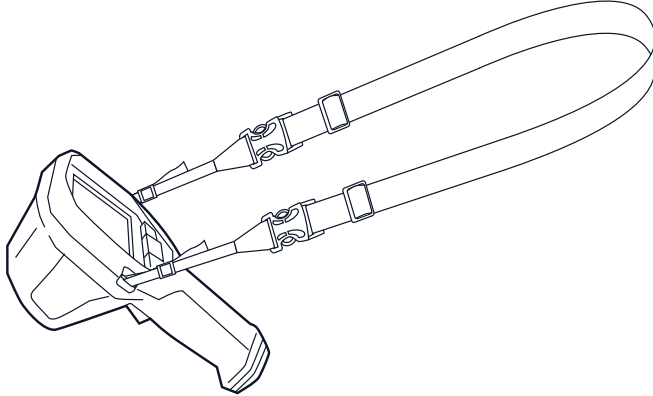

11.1 Figure

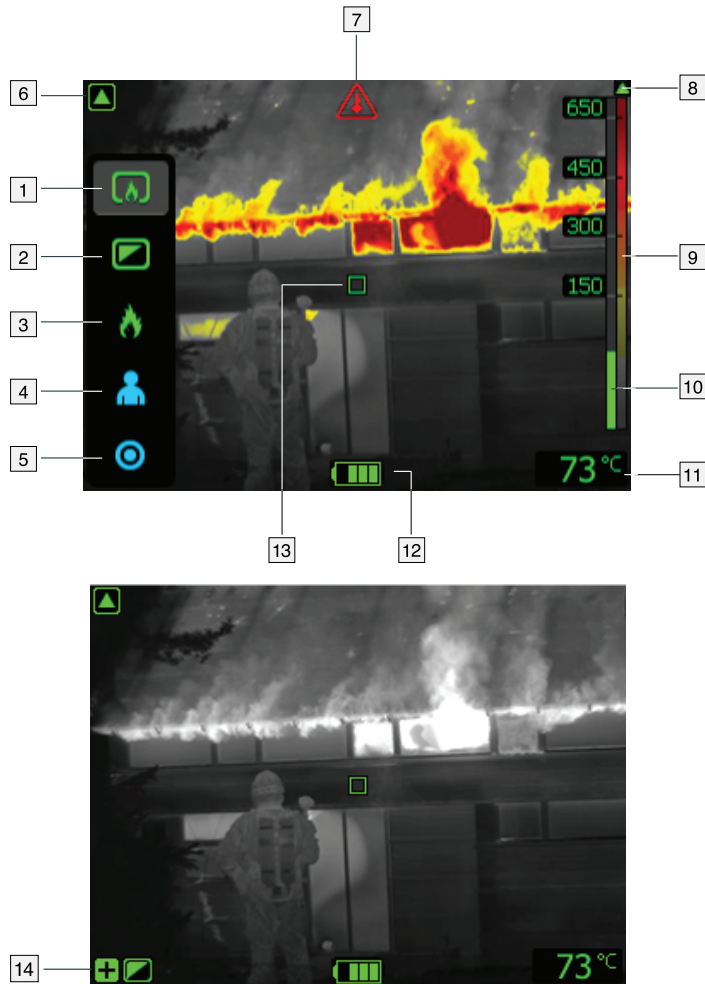

11.2 Explanation









1. Basic mode. A multipurpose mode for the initial fire attack with life-saving operations and control of the fire.
2. Black and white firefighting mode. A multipurpose mode for the initial fire attack with life-saving operations and control of the fire.
3. Fire mode. Similar to Basic mode but with a higher-temperature starting point for the heat colorization.
4. Search and rescue mode. Optimized for maintaining high contrast in the infrared image while searching for people.
5. Heat detection mode. Optimized for searching hotspots during overhaul after the fire is out.
6. Low-sensitivity mode indicator. The indicator is displayed when the camera identifies a hot area and automatically switches to low-sensitivity mode in Basic mode, Black and white firefighting mode, or Fire mode.
7. Overheating indicator. The indicator provides a visual warning to the user that the thermal imager is about to shut down due to internal overheating.
8. Change in the color reference indicator symbol. When a new mode is selected, a change in the color temperature reference triangle appears above the reference bar. The triangle remains visible for 1 second.

-
9. Reference bar.
 10. Temperature bar.
 11. Spotmeter temperature.
 12. Battery condition indicator.
 13. Spotmeter.
 14. Plus sign, indicating that the camera is not in Basic mode.






Note

- The green icon color indicates that the camera automatically switches between the high-sensitivity range and the low-sensitivity range, depending on the object.
- The blue icon color indicates that the temperature range is locked.
- Working in camera modes other than Basic mode may require additional training.

11.3 Battery condition indicator

Auto range	High sensitivity range	Explanation
		75% power.
		50% power.
		25% power.
		Flashing indicator. At least 5 minutes of available power remains.

11.4 Settings menu icons

Icon	Explanation
	Temperature unit settings.
	Temperature indication settings.
	Date settings.
	Time settings.
	Factory default settings.

**CAUTION**

Do not use the FLIR K series camera without the correct training. If the persons that operate the camera do not have the correct training, an incorrect analysis of the infrared images can occur. Thus, incorrect decisions during the firefighting can be made.

The training must include:

- How a thermal camera operates and its limits
- How to interpret an image
- How to work safely with the camera.

12.1 Removing the battery (FLIR K45, FLIR K55)


12.1.1 Procedure

Follow this procedure:

1. Pull the eccentric latch.



2. Pull out the battery from the battery compartment.

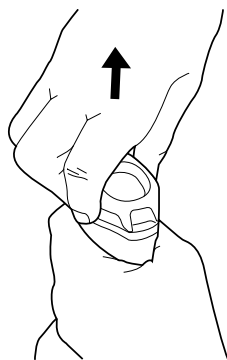

12.2 Removing the battery (FLIR K65)

12.2.1 Procedure

Follow this procedure:


1. Unscrew the Torx T20 screw and pull up the latch.

**CAUTION**

Make sure that you do not use a torque value that is more than 80 Ncm on the Torx T20 screw. Damage to the camera can occur if you do not obey this.



2. Pull out the battery from the battery compartment.

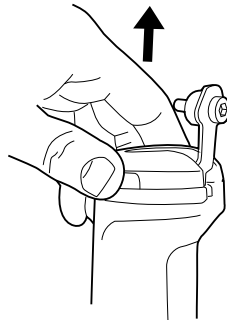

12.3 Charging the battery

**WARNING**

Make sure that you install the socket-outlet near the equipment and that it is easy to get access to.

12.3.1 General

Charge the battery for 4 hours before starting the camera for the first time, or until the blue battery condition LED glows continuously.

12.3.2 Procedure

Follow this procedure:

1. Put the battery in the standalone battery charger.
2. Connect the power supply cable plug to the connector on the standalone battery charger.
3. Connect the power supply mains-electricity plug to a mains socket.
4. Disconnect the power supply cable plug when the blue battery condition LED glows continuously.

12.4 Turning on and turning off the camera

- Push the on/off button to turn on the camera.
- Push and hold the on/off button for more than 3 seconds but less than 10 seconds to put the camera into standby mode. The camera then automatically turns off after 6 hours.
- Push and hold the on/off button for more than 10 seconds to turn off the camera.

12.5 Selecting camera modes

12.5.1 General

The camera features five different camera modes. You select the camera mode by pushing the *Mode* button.

The five different camera modes are:

1. Basic mode.
2. Black and white firefighting mode.
3. Fire mode.
4. Search and rescue mode.
5. Heat detection mode.

Each mode is optimized for a certain type of firefighting application. In addition, the modes differ in the following way:

- Modes with green icons (1–3 in the list): The camera switches between the high-sensitivity range (–20 to +150°C (–4 to +302°F)) and the low-sensitivity range (0 to +650°C (+32 to +1202°F)) automatically when objects with a temperature above 150°C (302°F) enter the field of view of the camera.
- Modes with blue icons (4–5 in the list): The temperature range is locked to the high-sensitivity range (–20 to +150°C (–4 to +302°F)). This is useful if you need to maintain the best possible image for objects with a temperature below 150°C (302°F), even if there are objects with a temperature above 150°C (302°F) in the field of view of the camera.

12.5.1.1 Automatic temperature range selection


12.5.1.1.1 General

The automatic temperature range selection is based on a measured area defined by a rectangle covering (x1, y1) = (15% of the width, 15% of the height) to (x2, y2) = (85% of the width, 85% of the height) of the LCD area. See the figure in section 12.5.1.1.2.

An automatic change from the high-sensitivity range to the low-sensitivity range occurs if more than 2% of the pixels within the measured area constantly (for more than 1 second) have a temperature above the maximum temperature of the high-sensitivity range.

An automatic change from low-sensitivity range to high-sensitivity range occurs if more than 98% of the pixels within the measured area constantly have, for more than 1 second, a temperature lower than 50°C (122°F) below the maximum temperature of the high-sensitivity range.

12.5.1.1.2 Figure

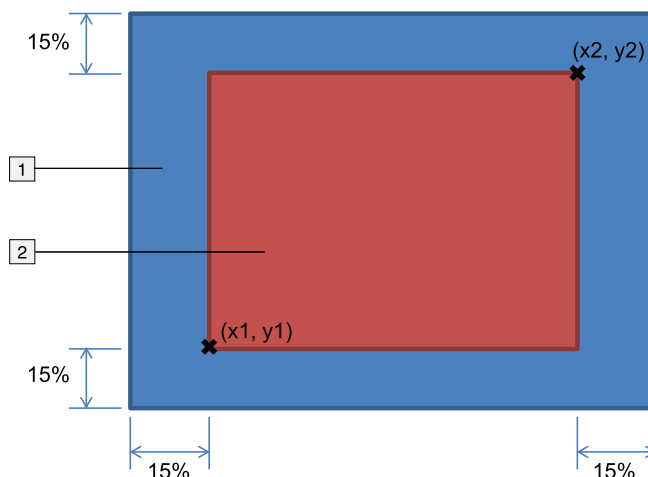

12.5.1.1.3 Explanation

1. LCD area.
2. Area activating the automatic range change.

12.5.2 Explanation of the different camera modes

12.5.2.1 Basic mode

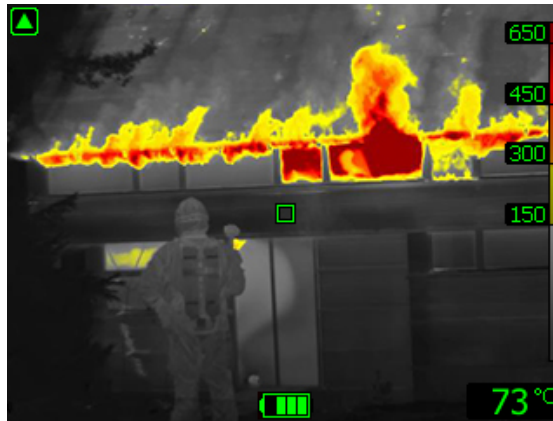


Figure 12.1 Basic mode.

Basic mode is the default mode of the camera. It is a multipurpose mode for the initial fire attack with life-saving operations and control of the fire. The camera automatically switches between the high-sensitivity range and the low-sensitivity range, to maintain an optimal infrared image while at the same time maintaining a safe and consistent heat colorization of the fire scene.

- Automatic range.
- Colorization of heat: +150 to +650°C (+302 to +1202°F).
- High-sensitivity range: -20 to +150°C (-4 to +302°F).
- Low-sensitivity range: 0 to +650°C (+32 to +1202°F).

Note To go to Basic mode from any other mode, push and hold the on/off button for less than 1 second.

12.5.2.2 Black and white firefighting mode



Figure 12.2 Black and white firefighting mode.

Black and white firefighting mode is a standardized firefighting mode based on Basic mode. It is a multipurpose mode for the initial fire intervention that includes life-saving operations and control of the fire. It is specifically designed for fire services that do not want to use the heat colorization feature.

The camera automatically switches between the high-sensitivity range and the low-sensitivity range, to maintain an optimal infrared image.

- Automatic range.
- High-sensitivity range: -20 to $+150^{\circ}\text{C}$ (-4 to $+302^{\circ}\text{F}$).
- Low-sensitivity range: 0 to $+650^{\circ}\text{C}$ ($+32$ to $+1202^{\circ}\text{F}$).

12.5.2.3 Fire mode

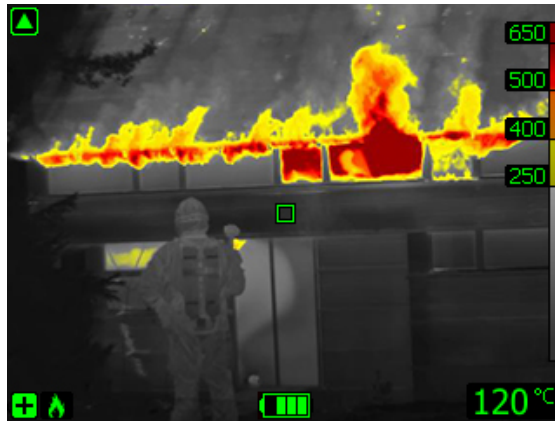


Figure 12.3 Fire mode.

Fire mode is similar to Basic mode, but with a higher-temperature starting point for the heat colorization. It is suitable for fire scenes with higher background temperatures, where there are already a lot of open flames and a high background temperature. The camera automatically switches between the high-sensitivity range and the low-sensitivity range, to maintain an optimal infrared image while at the same time maintaining a safe and consistent heat colorization.

- Automatic range.
- Colorization of heat: $+250$ to $+650^{\circ}\text{C}$ ($+482$ to $+1202^{\circ}\text{F}$).
- High-sensitivity range: -20 to $+150^{\circ}\text{C}$ (-4 to $+302^{\circ}\text{F}$).
- Low-sensitivity range: 0 to $+650^{\circ}\text{C}$ ($+32$ to $+1202^{\circ}\text{F}$).

12.5.2.4 Search and rescue mode

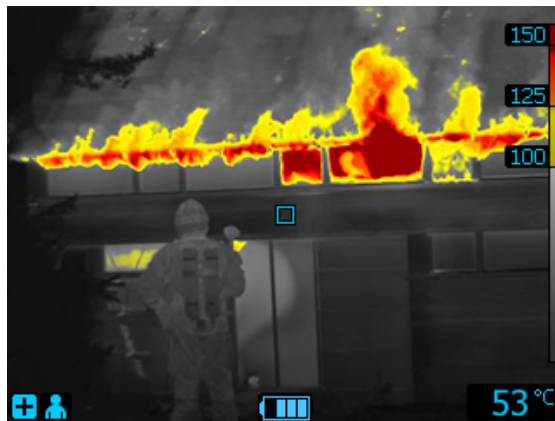


Figure 12.4 Search and rescue mode.

Search and rescue mode is optimized for maintaining high contrast in the infrared image while searching for people in landscapes, buildings, or traffic accident scenes.

- High-sensitivity range only.
- Colorization of heat: $+100$ to $+150^{\circ}\text{C}$ ($+212$ to $+302^{\circ}\text{F}$).
- High-sensitivity range: -20 to $+150^{\circ}\text{C}$ (-4 to $+302^{\circ}\text{F}$).

12.5.2.5 Heat detection mode



Figure 12.5 Heat detection mode.

Heat detection mode is optimized for searching hotspots during overhaul after the fire is out—typically to ensure that there is no remaining hidden fire. This mode can also be used to find thermal patterns (e.g., signs of people in car seats after accidents), to ensure that everyone has been found. This mode can also be used to search for people in water and open landscapes.

- High-sensitivity range only.
- Colorization of heat: the 20% highest temperatures in the scene.
- High-sensitivity range: -20 to $+150^{\circ}\text{C}$ (-4 to $+302^{\circ}\text{F}$).


12.6 Saving an image

12.6.1 General

You can save images to the camera's archive.

Note The maximum number of images that can be saved in the archive is 200. When the number of images exceeds 200, images are deleted on a *first-in, first-out basis*, i.e., the 201st image will delete the 1st image, the 202nd image will delete the 2nd image, and so on.

12.6.2 Figure

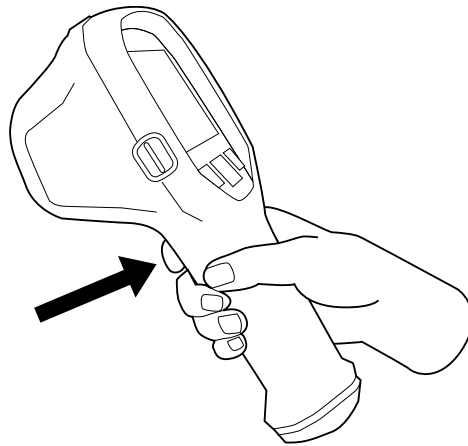

12.6.3 Procedure

Note The function of the trigger is configured by a setting in FLIR Tools, see section 12.14.2 *The User interface tab*, page 43.

Follow this procedure:


1. Aim the camera toward an object of interest.
2. To save an image, pull the trigger.

12.7 Recording a video clip (FLIR K55 and FLIR K65)

12.7.1 General

You can record video clips and save them to the camera's archive.

12.7.2 Figure

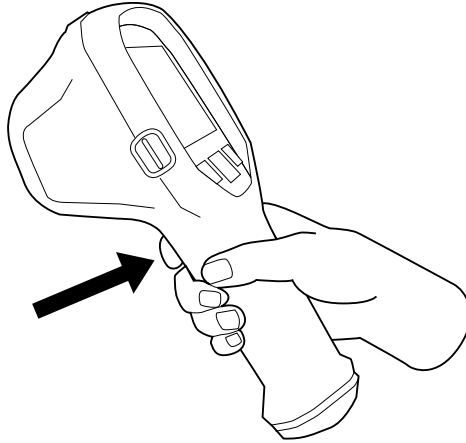

12.7.3 Procedure

Note The function of the trigger is configured by a setting in FLIR Tools, see section 12.14.2 *The User interface tab*, page 43.

Follow this procedure:

1. Aim the camera toward an object of interest.
2. Depending on the *Trigger button* setting in FLIR Tools, do one of the following to start the recording:
 - With the *Rec. on/off* setting, pull the trigger.
 - With the *Record video* setting, pull and hold the trigger.
3. A blinking circle in the middle left part of the screen indicates that the camera is currently recording a video clip.
4. Depending on the *Trigger button* setting in FLIR Tools, do one of the following to stop the recording:
 - With the *Rec. on/off* setting, pull the trigger.
 - With the *Record video* setting, release the trigger.

12.8 Continuous video recording (FLIR K55 and FLIR K65)

12.8.1 General

You can configure the camera to start a continuous video recording when you turn on the camera. The recording cannot be stopped.


Note The continuous video recording functionality is configured by a setting in FLIR Tools, see section 12.14.2 *The User interface tab*, page 43.

12.9 Freezing the image

12.9.1 General

You can freeze the image.

12.9.2 Figure

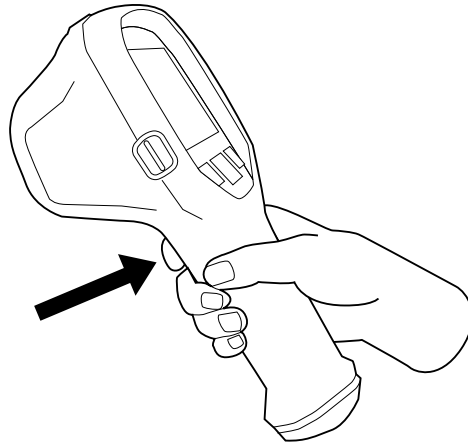

12.9.3 Procedure

Note The function of the trigger is configured by a setting in FLIR Tools, see section 12.14.2 *The User interface tab*, page 43.

Follow this procedure:

1. Aim the camera toward an object of interest.
2. Do the following:
 - To freeze the image, pull and hold the trigger.
 - To return to the live image, release the trigger.

12.10 Connecting the camera to a computer


12.10.1 General

You can connect the camera to a computer, using the USB cable. Once connected, you can move the images from the camera's archive to the computer. You can also import the images into the FLIR Tools software. A download card for FLIR Tools is included in the transport case.


12.10.2 Procedure (FLIR K45, FLIR K55)

Follow this procedure:


1. Fold up the rubber cover at the top of the camera.

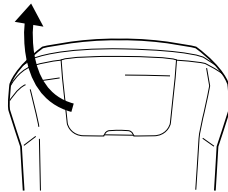


2. Hold the metal ring firmly.

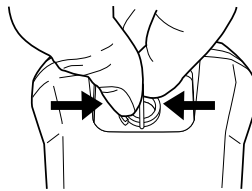

3. Rotate the ring about 90° counter-clockwise.

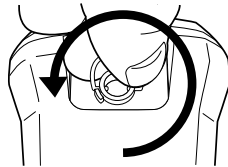


4. Pull out the plastic insert.

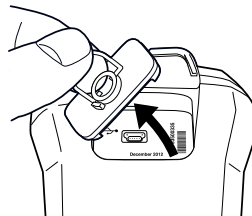

CAUTION

The plastic insert has an O-ring seal. Do not damage the O-ring seal.

5. Connect the USB cable to the USB Mini-B connector in the connector bay.

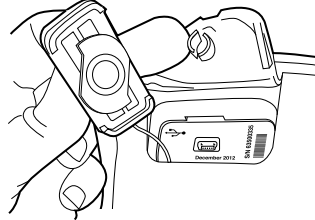

6. Do one of the following:

- Move the images to the computer using a drag-and-drop operation in Microsoft Windows Explorer.


Note Moving an image using a drag-and-drop operation does not delete the image in the camera.

- Move the images to the computer using FLIR Tools.


12.10.3 Procedure (FLIR K65)

Follow this procedure:

1. Fold up the rubber cover at the top of the camera.

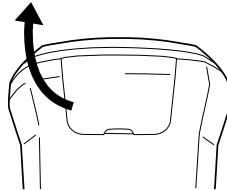

2. Fold up the metal ring.

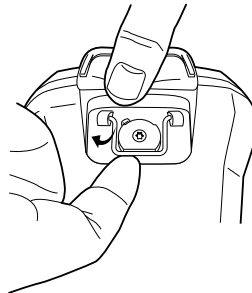


3. Unscrew the Torx T20 screw.




CAUTION

Make sure that you do not use a torque value that is more than 80 Ncm on the Torx T20 screw. Damage to the camera can occur if you do not obey this.

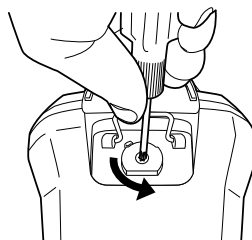


-
- Pull out the plastic insert.

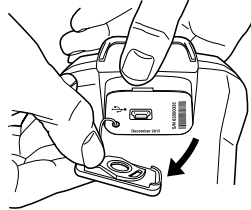**CAUTION**

The plastic insert has an O-ring seal. Do not damage the O-ring seal.

- Connect the USB cable to the USB Mini-B connector in the connector bay.

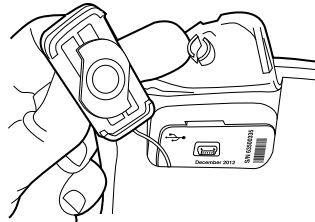

- Do one of the following:

- Move the images to the computer using a drag-and-drop operation in Microsoft Windows Explorer.

Note Moving an image using a drag-and-drop operation does not delete the image in the camera.

- Move the images to the computer using FLIR Tools.

12.11 Viewing saved images


12.11.1 General


When you save an image, the image is stored in the camera's archive. To display the image again, you can recall it from the archive.


12.11.2 Procedure

Follow this procedure:

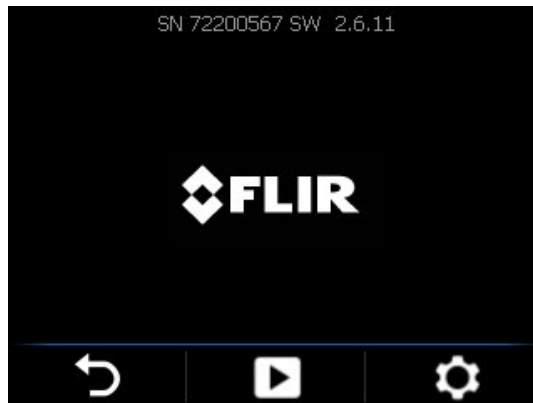

1. Push the *Mode* and *Zoom* buttons at the same time. This displays the main menu.

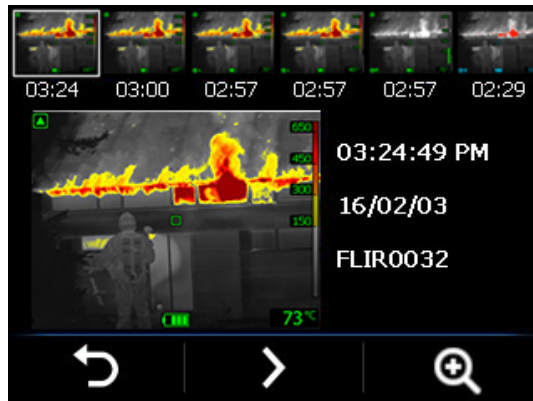

2. Select  by pushing the *Mode* button. This displays the screen below.



3. In the archive, do the following:

- Select  by pushing the *Mode* button to navigate to the next image.
- Pull the trigger to navigate to the previous image.
- Select  by pushing and holding the *Zoom* button to enlarge a specific image.

4. Select  by pushing the *On/off* button to exit the archive.

12.12 Viewing saved video clips


12.12.1 General


When you save a video clip, it is stored in the camera's archive. To view the video clip, you can recall it from the archive.


12.12.2 Procedure

Follow this procedure:


1. Push the *Mode* and *Zoom* buttons at the same time. This displays the main menu.

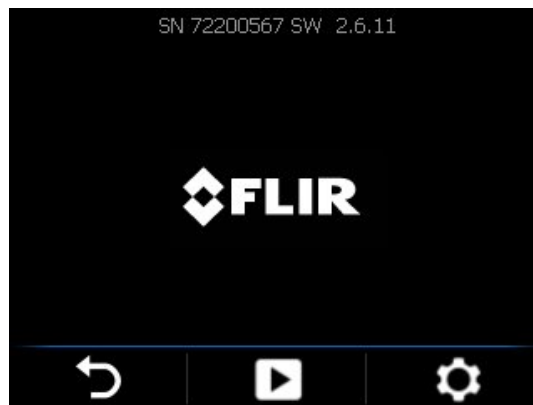

2. Select  by pushing the *Mode* button. This displays the screen below. Video clips are indicated by a filmstrip icon.

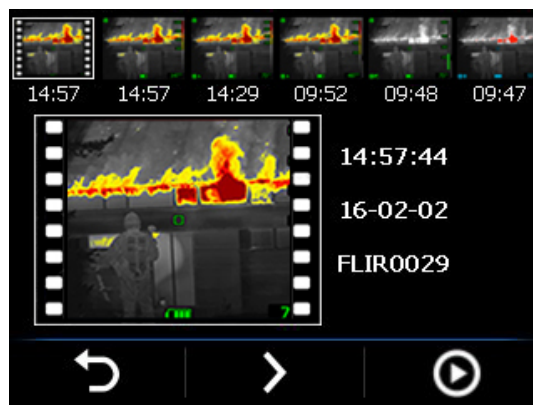

3. Do the following:

- To navigate to the next item in the archive, select  by pushing the *Mode* button.
- To navigate to the previous item in the archive, pull the trigger.

4. Do the following:






- To start viewing the video clip, select  by pushing and holding the *Zoom* button.
- To stop viewing the video clip, release the *Zoom* button.

5. To exit the archive, select  by pushing the *On/off* button.

12.13 Changing settings (in the camera)

12.13.1 General


You can change a variety of settings. These settings include the following:


-  Temperature unit.
-  Temperature indication.
-  Date.
-  Time.
-  Factory default settings.


12.13.2 Procedure




Follow this procedure:

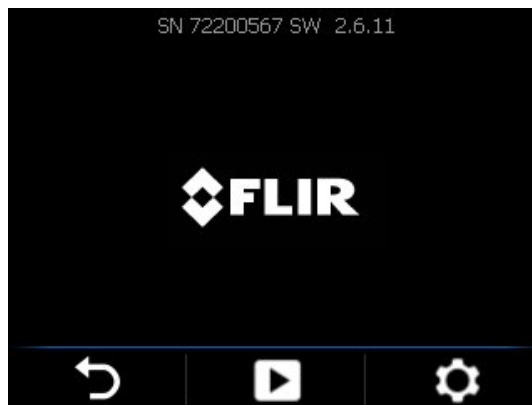1. Push the *Mode* and *Zoom* buttons at the same time. This displays the main menu.

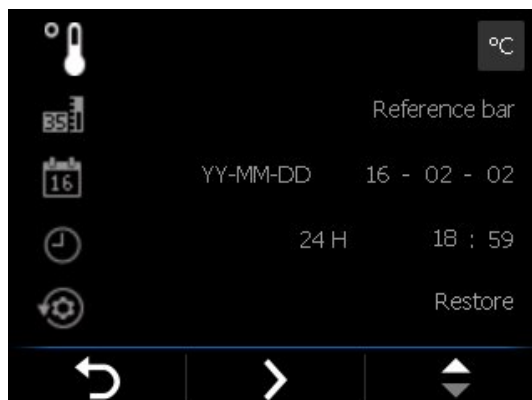

2. Select  by pushing the *Zoom* button. This displays the settings menu.





3. Select  by pushing the *Mode* button to navigate to the parameter that you want to change.
4. Select  by pushing the *Zoom* button to change the value.
5. Select  by pushing the *On/off* button to confirm the choice and exit the dialog box.


12.13.2.1 Restore factory default settings



You can restore all camera settings to the factory defaults.

Note This will also restore settings that have been changed using FLIR Tools.

Follow this procedure:

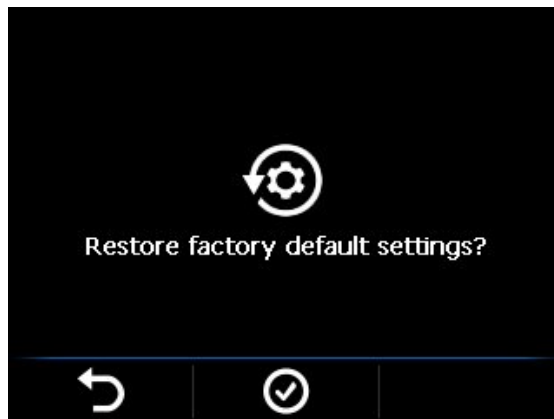1. Push the *Mode* and *Zoom* buttons at the same time. This displays the main menu.
2. Push the *Zoom* button to select . This displays the settings menu.
3. Push the *Mode* button repeatedly until *Restore* is selected.
4. Push the *Zoom* button to select . This displays a dialog box.




5. Do one of the following:
 - Select  by pushing the *Mode* button to restore the factory default settings.
 - Select  by pushing the *On/off* button to cancel the restore action and exit the settings menu.

12.14 Changing settings (in FLIR Tools)

12.14.1 The *General settings* tab

12.14.1.1 *Figure*

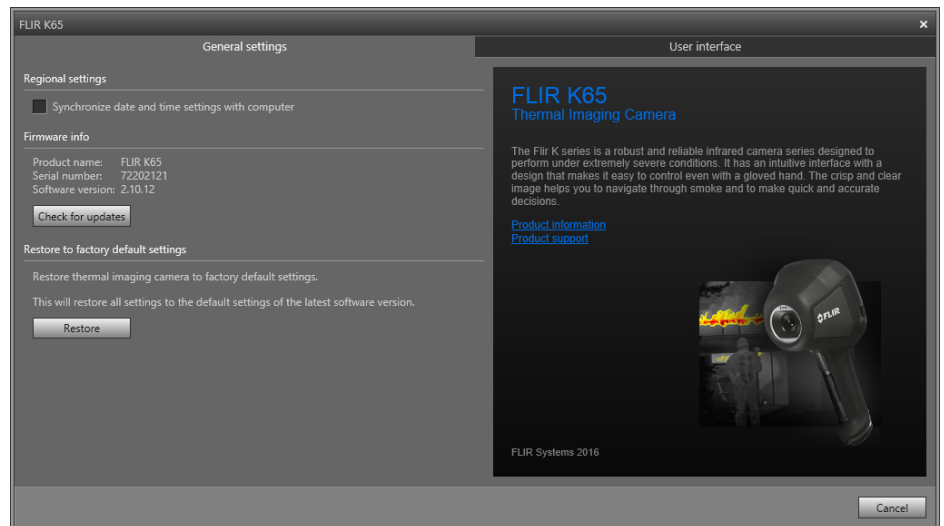

12.14.1.2 *Explanation*

Regional settings area: To synchronize the camera's date and time settings with the computer, select the checkbox.

Firmware info area: To check whether a newer version of the camera firmware exists, click *Check for updates* and follow the on-screen instructions.

Restore to factory default area: To restore all camera settings to the factory defaults, click *Restore*.

12.14.2 The *User interface* tab

12.14.2.1 *Figure*



12.14.2.2 Explanation

Camera modes area: To define which camera modes to enable in the camera, select the camera mode. For more information on each camera mode, see section 12.5.2 *Explanation of the different camera modes*, page 29.

Trigger button area: The camera has a trigger button. With the settings in the *Trigger button* area, you can select the function of the trigger button. You select what will happen when you click (short press) the trigger button and what will happen when you hold (long press) the trigger button.

- *No action, No action:* Select to disable any functionality of the trigger button. Nothing will happen when you press the trigger.
- *No action, Freeze image:* Select to make the camera freeze the image when you press and hold the trigger. The image will unfreeze when you release the trigger. Nothing will happen when you press the trigger momentarily.
- *No action, Record video* (not applicable to the FLIR K45): Select to make the camera start a recording when you press and hold the trigger. The recording will stop when you release the trigger. Nothing will happen when you press the trigger momentarily.
- *Save image, No action:* Select to make the camera save an image when you press the trigger momentarily. Nothing will happen when you press and hold the trigger.
- *Save image, Freeze image:* Select to make the camera save an image when you press the trigger momentarily and freeze the image when you press and hold the trigger. The image will unfreeze when you release the trigger.
- *Save image, Record video* (not applicable to the FLIR K45): Select to make the camera save an image when you press the trigger momentarily and start a recording when you press and hold the trigger. The recording will stop when you release the trigger.
- *Rec. on/off, No action* (not applicable to the FLIR K45): Select to make the camera start a recording when you press the trigger and stop the recording when you press the trigger again. Nothing will happen when you press and hold the trigger.
- *Continuous rec. (trigger disabled)* (not applicable to the FLIR K45): Select to make the camera start a continuous video recording when you turn on the camera. The recording cannot be stopped. Nothing will happen when you press the trigger.

Gain mode area:

- *Auto gain mode:* Select to make the camera automatically switch between the high-sensitivity range and the low-sensitivity range, depending on the scene temperature. The temperature level at which the camera switches between the two modes is 150°C (302°F).
- *Low gain mode:* Select to make the camera operate in the low-sensitivity range only. This has the advantage that the camera does not perform a non-uniformity correction (NUC) when an object with a temperature higher than 150°C (302°F) enters the scene. However, the disadvantage is lower sensitivity and a higher level of signal noise.

Temperature unit area: To select a different temperature unit, click *Celsius* or *Fahrenheit*.

Thermal indication area:

- *Digital readout only:* Select to display the thermal information in the image as the temperature of the spotmeter only. In modes with automatic heat colorization, the colorization of the image will remain but the static heat color reference icon will not be displayed.
- *Reference bar:* In modes with automatic heat indication colorization, a vertical heat color reference bar is displayed in the thermal indication area. This static icon shows how heat colors are applied to the range of the camera mode. The colors yellow, orange, and red correspond to a temperature-dependent change in hue as the temperature increases.
- *Temp bar:* Select to display the thermal information in the image as a temperature bar, similar to a thermometer. This displays a dynamic vertical temperature bar on the right-hand side of the image. The top of the dynamic bar represents the temperature of the measured spot. In modes with automatic heat colorization, the colorization of

the image will remain, with a static heat color reference bar displayed next to the temperature bar.

Add custom boot image area: To select an image of your choice to appear during start-up, click *Browse*, and navigate to the image file. This is useful for, for example, identifying your fire department's cameras. By incorporating your fire department's logo, and a unique identity number in the image, you can keep track of your cameras. This image can also be accessed from the camera menu.

In-truck charger (optional accessory)

13.1 Introduction




Thank you for choosing the FLIR Kx5 series in-truck charger from FLIR Systems.

The in-truck charger is intended to be mounted on a flat surface in the cab, in one of the equipment lockers, or in another suitable compartment on the fire engine. The in-truck charger has five ports for cable routing—one through the rear of the metal bracket and one port on each side of the in-truck charger.

The in-truck charger can also be powered using a standard FLIR Systems power supply, and has a battery charger located at the lower front of the unit.

13.2 Parts and functions

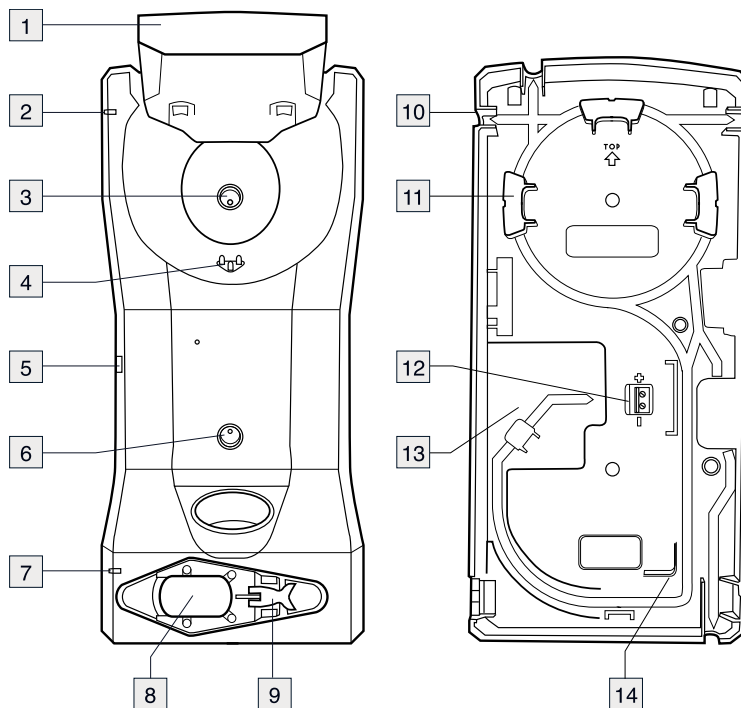

1. Top cover.
2. LED indicator for the camera charger.

-
3. Hole for attaching the charger housing to the metal bracket.
 4. Connectors in the cradle.
 5. Connector to power the charger using a standard FLIR Systems power supply.
 6. Hole for attaching the charger housing to the metal bracket.
 7. LED indicator for the battery charger.
 8. Battery slot.
 9. Eccentric latch to secure the battery during charging.
 10. Cable port (1 of 4).

Note There is also one port through the rear of the metal bracket.

11. Routing support.
12. 12–24 VDC cable plinth.
13. Recess for the cable.
14. Routing support.

13.3 Choosing a suitable position

Before mounting the in-truck charger, take a few minutes to think about a suitable position.

The mounting position should be protected from rain and road splash, and it should be reasonably easy to install a permanent cable running from the fire engine's 12–24 VDC system to the in-truck charger.

Additional considerations may be important, e.g., getting access to panels and equipment behind the in-truck charger.

13.4 Recommended cable area and fuse

Cable area	1.5 mm ² (No. 15 AWG)
Fuse	5 A

13.5 Mounting instructions

Follow this procedure:

1. Permanently install a cable running from the fire engine's 12–24 VDC system to the selected mounting position of the in-truck charger. Do not connect this cable to the 12–24 VDC system at this time. The routing must include a fuse installed close to the battery. See above for the fuse recommendation.
2. Remove the two screws that hold the metal bracket.
3. Remove the metal bracket.
4. Use the metal bracket as a template to mark where the mounting holes should be drilled.
5. Drill the holes.
6. Mount the metal bracket using the rivets and/or screws that come with the in-truck charger.
7. Connect the cable to the cable plinth on the rear of the in-truck charger.

Note Take note of the polarity when you connect the cable to the cable plinth.
8. Route the cable so that it exits through the cable port of your choice.
9. Mount the in-truck charger to the metal bracket using the two screws that you removed in Step 2 above.
10. Permanently connect the cable to the fire engine's 12–24 VDC system.

13.6 Charging the camera

Follow this procedure:

1. Pull up the top cover of the in-truck charger.
2. Push the camera into position.
3. Push down the top cover.

The charging of the camera has now started, and is finished when the blue light glows continuously. Charging a fully depleted camera takes approximately 4 hours.

13.7 Charging a battery separately

FLIR Kx5 series batteries can be charged separately using the battery charger at the lower front of the unit.

Follow this procedure:

1. Pull the eccentric latch on the bottom of the camera.
2. Pull out the battery from the camera.
3. Push the battery into the slot at the lower front of the charger.
4. Secure the battery using the eccentric latch on the charger.

The charging of the battery has now started, and is finished when the blue light glows continuously. Charging a fully depleted battery takes approximately 4 hours.

13.8 Cleaning



CAUTION

Disconnect the in-truck charger from the fire engine's 12–24 VDC system before cleaning.

The in-truck charger can be cleaned using warm water or a weak detergent solution. Do not use solvents or similar liquids.

13.9 Customer support

Should you experience any problems, do not hesitate to contact our Customer Support at <http://support.flir.com>.

Table of contents

14.1	Online field-of-view calculator.....	49
14.2	Note about technical data.....	49
14.3	Note about authoritative versions.....	49
14.4	FLIR K45	50
14.5	FLIR K55	54
14.6	FLIR K65	58
14.7	In-truck charger	62

14.1 Online field-of-view calculator

Please visit <http://support.flir.com> and click the photo of the camera series for field-of-view tables for all lens-camera combinations.

14.2 Note about technical data

FLIR Systems reserves the right to change specifications at any time without prior notice. Please check <http://support.flir.com> for latest changes.

14.3 Note about authoritative versions

The authoritative version of this publication is English. In the event of divergences due to translation errors, the English text has precedence.

Any late changes are first implemented in English.

14.4 FLIR K45

P/N: 72201-0106

Rev.: 41168

General description	
<p>The FLIR K45 is a robust and reliable infrared camera designed to perform under extremely severe conditions. The FLIR K45 has an intuitive interface with a design that makes it easy to control even with a gloved hand. The crisp and clear image helps you to navigate through smoke and to make quick and accurate decisions.</p>	
Benefits:	
<ul style="list-style-type: none"> • Robust and reliable: The FLIR K45 is designed to meet tough operating conditions. It can withstand a drop from 2 m (6.5 ft.) onto a concrete floor, is water resistant to IP67, and is fully operational up to +85°C (+185°F), or +260°C (+500°F) for 5 min. • Clear and crisp thermal images: The maintenance-free uncooled microbolometer sensor produces clear and detail-rich images of 240 × 180 pixels which have been further improved with FSX, a digital image processing enhancement technique. Thermal images are presented on a large, bright 4" display, helping you to navigate and to make quick and accurate decisions. • Easy-to-use—also in a gloved firefighter's hand: An intuitive and simple user interface allows you to focus on the job. The FLIR K series can be controlled by just three large buttons on top of the unit. Ideal for a gloved firefighter's hand. 	
Imaging and optical data	
IR resolution	240 × 180 pixels
Thermal sensitivity/NETD	< 40 mK @ +30°C (+86°F)
Field of view (FOV)	51° × 38°
Depth of field	0.84 m to infinity (33 in. to infinity)
Focal length	9 mm (0.35 in.)
Spatial resolution (IFOV)	3.6 mrad
F-number	1.25
Image frequency	60 Hz
Focus	Fixed
Zoom	2× digital zoom
Detector data	
Detector type	Focal plane array (FPA), uncooled microbolometer
Spectral range	7.5–13 μm
Pitch	25 μm
Image presentation	
Display	4 in. LCD, 320 × 240 pixels, backlit
Auto range	Yes, selectable on/off using FLIR Tools
Contrast optimization	Digital image enhancement using FSX
Image presentation modes	
Image modes	<ul style="list-style-type: none"> • IR image <ul style="list-style-type: none"> ◦ TI Basic fire-fighting mode ◦ Black-and-white fire-fighting mode ◦ Fire mode ◦ Search-and-rescue mode ◦ Heat detection mode • Thumbnail gallery

Measurement	
Object temperature range	<ul style="list-style-type: none"> • -20°C to +150°C (-4°F to +302°F) • 0°C to +650°C (+32°F to +1202°F)
Accuracy	±4°C (±7.2°F) or ±4% of reading, for ambient temperature 10°C to 35°C (+50°F to 95°F)
Measurement analysis	
Spotmeter	1
Automatic hot detection	Heat detection mode (the hottest 20% of the of scene is colorized)
Isotherm	Yes
Set-up	
Set-up commands	Local adaptation of units, date and time formats
Languages	English
Storage of images	
Image storage	Standard JPEG
Storage media	Internal flash memory
Image storage capacity	200 images
Image storage mode	IR only
File formats	Standard JPEG
Image annotations	
Report generation	Separate software (FLIR Tools)
Video streaming	
Non-radiometric IR video streaming	Uncompressed colorized video using USB
USB	
USB	USB Mini-B
Compatibility	
Compatible with FLIR software	FLIR Tools
Data communication interfaces	
Interfaces	<ul style="list-style-type: none"> • Update from PC devices • Data transfer to and from PC
Power system	
Battery type	Li Ion
Battery voltage	3.6 V
Battery capacity	4.4 Ah, at +20°C to +25°C (+68°F to +77°F)
Battery operating time	Approx. 4 hours at +25°C (+77°F) ambient temperature and typical use
Charging system	<ul style="list-style-type: none"> • Battery is charged inside the camera • 2-bay charger • Optional In-truck charger
Charging time	2 h to 85% capacity, charging status indicated by LEDs
Charging temperature	0°C to +45°C (+32°F to +113°F)
Power management	Automatic shutdown and sleep mode

Power system	
Start-up time from sleep mode	< 4 s.
Start-up time	< 17 s. (IR image, no GUI)
Environmental data	
Operating temperature range	<ul style="list-style-type: none"> • -20°C to +85°C (-4°F to +185°F) • +150°C (+302°F): 15 min. • +260°C (+500°F): 5 min.
Storage temperature range	-40°C to +85°C (-40°F to +185°F)
Humidity (operating and storage)	IEC 60068-2-30/24 h 95% relative humidity +25°C to +40°C (+77°F to +104°F) / 2 cycles
Relative humidity	95% relative humidity +25°C to +40°C (+77°F to +104°F) non-condensing
Directives	Designed to meet NFPA 1801:2013 specification: <ul style="list-style-type: none"> • Vibration • Impact acceleration resistance • Corrosion • Viewing surface abrasion • Heat resistance • Heat and flame • Product label durability
EMC	<ul style="list-style-type: none"> • EN 61000-6-2:2005 (Immunity) • EN 61000-6-3: 2011 (Emission) • FCC 47 CFR Part 15 B (Emission)
Magnetic fields	EN 61 000-4-8, Test level 5 for continuous field (severe industrial environment)
Encapsulation	IP 67 (IEC 60529)
Shock	25 g (IEC 60068-2-27)
Vibration	2 g (IEC 60068-2-6)
Drop	2 m (6.6 ft.) on concrete floor (IEC 60068-2-31)
Safety (power supply)	CE/EN/UL/CSA/PSE 60950-1
Physical data	
Camera weight, incl. battery	1.1 ±0.05 kg (2.4 ±0.1 lb.)
Battery weight	0.152 kg (0.3 lb.)
Camera size (L × W × H)	120 × 125 × 280 mm (4.7 × 4.9 × 11 in.)
Tripod mounting	UNC ¼"-20 (adapter needed)
Material	<ul style="list-style-type: none"> • PPSU • Silicon rubber • Aluminium, cast • Flame-resistant magnesium alloy
Shipping information	
List of contents	<ul style="list-style-type: none"> • Infrared camera • Battery (2 ea.) • Battery charger • Hard transport case • Lanyard strap • Neck strap • Power supply • Printed documentation • Retractable lanyard • Tripod adapter • USB cable
Packaging, weight	5.7 kg (12.6 lb.)

Shipping information	
Packaging, size	500 × 190 × 370 mm (19.7 × 7.5 × 14.6 in.)
EAN-13	4743254002005
UPC-12	845188010898
Country of origin	Estonia

Supplies and accessories:



- 1910423; USB cable Std A <-> Mini-B
- T198509; Cigarette lighter adapter kit, 12 VDC, 1.2 m/3.9 ft.
- T198125; Battery charger, incl. power supply with multi plugs (Exx, Kxx)
- T198310ACC; Li-Ion Battery pack 3.6 V 16 Wh
- T127724ACC; Neck strap
- T127722ACC; Retractable lanyard
- T198416ACC; Lanyard strap
- T198457ACC; Tripod Adapter, Kxx
- T198441ACC; Transport case Kxx
- T198322ACC; In-truck charger
- T199368ACC; Battery Li-ion 3.6 V, 4.4 Ah, 16 Wh
- T129915ACC; Carabiner strap

14.5 FLIR K55

P/N: 72201-0206

Rev.: 41168

General description	
<p>The FLIR K55 is a robust and reliable infrared camera designed to perform under extremely severe conditions. The FLIR K55 has an intuitive interface with a design that makes it easy to control even with a gloved hand. The crisp and clear image helps you to navigate through smoke and to make quick and accurate decisions.</p>	
Benefits:	
<ul style="list-style-type: none"> • Robust and reliable: The FLIR K455 is designed to meet tough operating conditions. It can withstand a drop from 2 m (6.5 ft.) onto a concrete floor, is water resistant to IP67, and is fully operational up to +85°C (+185°F), or +260°C (+500°F) for 5 min. • Clear and crisp thermal images: The maintenance-free uncooled microbolometer sensor produces clear and detail-rich images of 320 × 240 pixels which have been further improved with FSX, a digital image processing enhancement technique. Thermal images are presented on a large, bright 4" display, helping you to navigate and to make quick and accurate decisions. • Easy-to-use—also in a gloved firefighter's hand: An intuitive and simple user interface allows you to focus on the job. The FLIR K series can be controlled by just three large buttons on top of the unit. Ideal for a gloved firefighter's hand. • Recording 	
Imaging and optical data	
IR resolution	320 × 240 pixels
Thermal sensitivity/NETD	< 30 mK @ +30°C (+86°F)
Field of view (FOV)	51° × 38°
Depth of field	0.84 m to infinity (33 in. to infinity)
Focal length	9 mm (0.35 in.)
Spatial resolution (IFOV)	2.8 mrad
F-number	1.25
Image frequency	60 Hz
Focus	Fixed
Zoom	2× digital zoom
Detector data	
Detector type	Focal plane array (FPA), uncooled microbolometer
Spectral range	7.5–13 μm
Pitch	25 μm
Image presentation	
Display	4 in. LCD, 320 × 240 pixels, backlit
Auto range	Yes, selectable on/off using FLIR Tools
Contrast optimization	Digital image enhancement using FSX
Image presentation modes	
Image modes	<ul style="list-style-type: none"> • IR image <ul style="list-style-type: none"> ◦ TI Basic fire-fighting mode ◦ Black-and-white fire-fighting mode ◦ Fire mode ◦ Search-and-rescue mode ◦ Heat detection mode • Thumbnail gallery

Measurement	
Object temperature range	<ul style="list-style-type: none"> • -20°C to +150°C (-4°F to +302°F) • 0°C to +650°C (+32°F to +1202°F)
Accuracy	±4°C (±7.2°F) or ±4% of reading, for ambient temperature 10°C to 35°C (+50°F to 95°F)
Measurement analysis	
Spotmeter	1
Automatic hot detection	Heat detection mode (the hottest 20% of the of scene is colorized)
Isotherm	Yes
Set-up	
Set-up commands	Local adaptation of units, date and time formats
Languages	English
Storage of images	
Image storage	Standard JPEG
Storage media	Internal flash memory
Image storage capacity	200 files in total <div style="border: 1px solid black; padding: 5px; margin-top: 5px;">  NOTE The total number of files is co-dependent on the number of saved video clips. </div>
Image storage mode	IR only
File formats	Standard JPEG
Image annotations	
Report generation	Separate software (FLIR Tools)
Video recording in camera	
Non-radiometric IR video recording	MPEG-4 to internal flash memory
Storage capacity	200 files in total, with a maximum duration of 5 minutes each. <div style="border: 1px solid black; padding: 5px; margin-top: 5px;">  NOTE The total number of files is co-dependent on the number of saved images. </div>
Video streaming	
Non-radiometric IR video streaming	Uncompressed colorized video using USB
USB	
USB	USB Mini-B
Compatibility	
Compatible with FLIR software	FLIR Tools
Data communication interfaces	
Interfaces	<ul style="list-style-type: none"> • Update from PC devices • Data transfer to and from PC

Power system	
Battery type	Li Ion
Battery voltage	3.6 V
Battery capacity	4.4 Ah, at +20°C to +25°C (+68°F to +77°F)
Battery operating time	Approx. 4 hours at +25°C (+77°F) ambient temperature and typical use
Charging system	<ul style="list-style-type: none"> • Battery is charged inside the camera • 2-bay charger • Optional In-truck charger
Charging time	2 h to 85% capacity, charging status indicated by LEDs
Charging temperature	0°C to +45°C (+32°F to +113°F)
Power management	Automatic shutdown and sleep mode
Start-up time from sleep mode	< 4 s.
Start-up time	< 17 s. (IR image, no GUI)
Environmental data	
Operating temperature range	<ul style="list-style-type: none"> • -20°C to +85°C (-4°F to +185°F) • +150°C (+302°F): 15 min. • +260°C (+500°F): 5 min.
Storage temperature range	-40°C to +85°C (-40°F to +185°F)
Humidity (operating and storage)	IEC 60068-2-30/24 h 95% relative humidity +25°C to +40°C (+77°F to +104°F) / 2 cycles
Relative humidity	95% relative humidity +25°C to +40°C (+77°F to +104°F) non-condensing
Directives	Designed to meet NFPA 1801:2013 specification: <ul style="list-style-type: none"> • Vibration • Impact acceleration resistance • Corrosion • Viewing surface abrasion • Heat resistance • Heat and flame • Product label durability
EMC	<ul style="list-style-type: none"> • EN 61000-6-2:2005 (Immunity) • EN 61000-6-3: 2011 (Emission) • FCC 47 CFR Part 15 B (Emission)
Magnetic fields	EN 61 000-4-8, Test level 5 for continuous field (severe industrial environment)
Encapsulation	IP 67 (IEC 60529)
Shock	25 g (IEC 60068-2-27)
Vibration	2 g (IEC 60068-2-6)
Drop	2 m (6.6 ft.) on concrete floor (IEC 60068-2-31)
Safety (power supply)	CE/EN/UL/CSA/PSE 60950-1
Physical data	
Camera weight, incl. battery	1.1 ±0.05 kg (2.4 ±0.1 lb.)
Battery weight	0.152 kg (0.3 lb.)
Camera size (L × W × H)	120 × 125 × 280 mm (4.7 × 4.9 × 11 in.)

Physical data	
Tripod mounting	UNC ¼"-20 (adapter needed)
Material	<ul style="list-style-type: none"> • PPSU • Silicon rubber • Aluminium, cast • Flame-resistant magnesium alloy
Shipping information	
List of contents	<ul style="list-style-type: none"> • Infrared camera • Battery (2 ea.) • Battery charger • Hard transport case • Lanyard strap • Neck strap • Power supply • Printed documentation • Retractable lanyard • Tripod adapter • USB cable
Packaging, weight	5.7 kg (12.6 lb.)
Packaging, size	500 × 190 × 370 mm (19.7 × 7.5 × 14.6 in.)
EAN-13	4743254002012
UPC-12	845188010904
Country of origin	Estonia

Supplies & accessories:


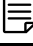
- 1910423; USB cable Std A <-> Mini-B
- T198509; Cigarette lighter adapter kit, 12 VDC, 1.2 m/3.9 ft.
- T198125; Battery charger, incl. power supply with multi plugs (Exx, Kxx)
- T198310ACC; Li-Ion Battery pack 3.6 V 16 Wh
- T127724ACC; Neck strap
- T127722ACC; Retractable lanyard
- T198416ACC; Lanyard strap
- T198457ACC; Tripod Adapter, Kxx
- T198441ACC; Transport case Kxx
- T198322ACC; In-truck charger
- T199368ACC; Battery Li-ion 3.6 V, 4.4 Ah, 16 Wh
- T129915ACC; Carabiner strap




14.6 FLIR K65

P/N: 72202-0303

Rev.: 41168

General description	
<p>The FLIR K65 is a robust and reliable infrared camera designed to perform under extremely severe conditions. The FLIR K65 has an intuitive interface with a design that makes it easy to control even with a gloved hand. The crisp and clear image helps you to navigate through smoke and to make quick and accurate decisions.</p>	
Benefits:	
<ul style="list-style-type: none"> • Compliance with NFPA 1801-2013. • Robust and reliable: The FLIR K65 is designed to meet tough operating conditions. It can withstand a drop from 2 m (6.5 ft.) onto a concrete floor, is water resistant to IP67, and is fully operational up to 85°C (185°F), and operational up to +150°C (+302°F) for 15 minutes, and +260°C (+500°F) for 5 minutes. • Clear and crisp thermal images: The maintenance-free uncooled microbolometer sensor produces clear and detail-rich images of 320 × 240 pixels which have been further improved with FSX, a digital image-processing enhancement technique. Thermal images are presented on a large, bright 4" display, helping you to navigate and to make quick and accurate decisions. • Easy-to-use—also in a gloved firefighter's hand: An intuitive and simple user interface allows you to focus on the job. The FLIR K series can be controlled by just three large buttons on top of the unit. Ideal for a gloved firefighter's hand. • Recording. 	
Imaging and optical data	
IR resolution	320 × 240 pixels
Thermal sensitivity/NETD	< 30 mK @ +30°C (+86°F)
Field of view (FOV)	51° × 38°
Depth of field	0.84 m to infinity (33 in. to infinity)
Focal length	9 mm (0.35 in.)
Spatial resolution (IFOV)	2.8 mrad
F-number	1.25
Image frequency	60 Hz
Focus	Fixed
Zoom	2× digital zoom
Detector data	
Detector type	Focal plane array (FPA), uncooled microbolometer (VOx)
Spectral range	8–14 μm
Pitch	25 μm
Image presentation	
Display	4 in. LCD, 320 × 240 pixels, backlit
Auto range	Yes, selectable on/off using FLIR Tools
Contrast optimization	Digital image enhancement using FSX

Image presentation modes	
Image modes	<ul style="list-style-type: none"> • IR image <ul style="list-style-type: none"> ◦ TI Basic NFPA fire-fighting mode ◦ Black-and-white fire-fighting mode ◦ Fire mode ◦ Search-and-rescue mode ◦ Heat detection mode • Thumbnail gallery
Measurement	
Object temperature range	<ul style="list-style-type: none"> • -20°C to +150°C (-4°F to +302°F) • 0°C to +650°C (+32°F to +1202°F)
Accuracy	±4°C (±7.2°F) or ±4% of reading, for ambient temperature 10°C to 35°C (+50°F to 95°F)
Measurement analysis	
Spotmeter	1
Automatic hot detection	Heat detection mode (the hottest 20% of the of scene is colorized)
Isotherm	Yes, according to NFPA
Set-up	
Set-up commands	Local adaptation of units, date and time formats
Languages	English
Storage of images	
Image storage	Standard JPEG
Storage media	Internal flash memory
Image storage capacity	200 files in total <div style="border: 1px solid black; padding: 5px; margin-top: 5px;">  NOTE The number of files is co-dependent on the number of saved video clips. </div>
Image storage mode	IR only
File formats	Standard JPEG
Image annotations	
Report generation	Separate software (FLIR Tools)
Video recording in camera	
Non-radiometric IR video recording	MPEG-4 to internal flash memory
Storage capacity	200 files in total, with a maximum duration of 5 minutes each. <div style="border: 1px solid black; padding: 5px; margin-top: 5px;">  NOTE The total number of files is co-dependent on the number of saved images. </div>
Video streaming	
Non-radiometric IR video streaming	Uncompressed colorized video using USB
USB	
USB	USB Mini-B

Compatibility			
Compatible with FLIR software	FLIR Tools		
Data communication interfaces			
Interfaces	<ul style="list-style-type: none"> • Update from PC devices • Data transfer to and from PC 		
Power system			
Battery type	Li Ion		
Battery voltage	3.6 V		
Battery capacity	4.4 Ah, at +20°C to +25°C (+68°F to +77°F)		
Battery operating time	<p>Approx. 4 hours at +25°C (+77°F) ambient temperature and typical use</p> <table border="1"> <tr> <td> NOTE</td> </tr> <tr> <td>This operating time is independent of camera mode.</td> </tr> </table>	 NOTE	This operating time is independent of camera mode.
 NOTE			
This operating time is independent of camera mode.			
Charging system	<ul style="list-style-type: none"> • Battery is charged inside the camera • 2-bay charger • Optional In-truck charger 		
Charging time	2 h to 85% capacity, charging status indicated by LEDs		
Charging temperature	0°C to +45°C (+32°F to +113°F)		
Power management	Automatic shutdown and sleep mode		
Start-up time from sleep mode	< 4 s.		
Start-up time	< 17 s. (IR image, no GUI)		
Environmental data			
Operating temperature range	<ul style="list-style-type: none"> • -20°C to +85°C (-4°F to +185°F) • +150°C (+302°F): 15 min. • +260°C (+500°F): 5 min. 		
Storage temperature range	-40°C to +85°C (-40°F to +185°F)		
Humidity (operating and storage)	IEC 60068-2-30/24 h 95% relative humidity +25°C to +40°C (+77°F to +104°F) / 2 cycles		
Relative humidity	95% relative humidity +25°C to +40°C (+77°F to +104°F) non-condensing		
Directives	<p>Certified according to NFPA1801:2013 specification:</p> <ul style="list-style-type: none"> • Vibration • Impact acceleration resistance • Corrosion • Viewing surface abrasion • Heat resistance • Heat and flame • Product label durability 		
EMC	<ul style="list-style-type: none"> • EN 61000-6-2:2005 (Immunity) • EN 61000-6-3: 2011 (Emission) • FCC 47 CFR Part 15 B (Emission) 		
Magnetic fields	EN 61 000-4-8, Test level 5 for continuous field (severe industrial environment)		
Encapsulation	IP 67 (IEC 60529)		
Shock	25 g (IEC 60068-2-27)		
Vibration	2 g (IEC 60068-2-6)		

Environmental data	
Drop	2 m (6.6 ft.) on concrete floor (IEC 60068-2-31)
Safety (power supply)	CE/EN/UL/CSA/PSE 60950-1
Certifications	
Compliance	NFPA1801:2013 Ex-certified according to ANSI/ISA 12.12.01-2013 and meets Class I Division 2 Gas Groups C and D T4.
Physical data	
Camera weight, incl. battery	1.1 ±0.05 kg (2.4 ±0.1 lb.)
Battery weight	0.152 kg (0.3 lb.)
Camera size (L × W × H)	120 × 125 × 280 mm (4.7 × 4.9 × 11 in.)
Tripod mounting	UNC ¼"-20 (adapter needed)
Material	<ul style="list-style-type: none"> • PPSU • Silicon rubber • Aluminium, cast • Flame-resistant magnesium alloy
Shipping information	
List of contents	<ul style="list-style-type: none"> • Infrared camera • Battery (2 ea.) • Battery charger • Hard transport case • Power supply • Printed documentation • Torx screwdriver (T20) • USB cable
Packaging, weight	5.7 kg (12.6 lb.)
Packaging, size	500 × 190 × 370 mm (19.7 × 7.5 × 14.6 in.)
EAN-13	4743254001992
UPC-12	845188010881
Country of origin	Estonia

Supplies & accessories:

- 1910423; USB cable Std A <-> Mini-B
- T198509; Cigarette lighter adapter kit, 12 VDC, 1.2 m/3.9 ft.
- T198125; Battery charger, incl. power supply with multi plugs (Exx, Kxx)
- T198310ACC; Li-Ion Battery pack 3.6 V 16 Wh
- T127724ACC; Neck strap
- T127722ACC; Retractable lanyard
- T198416ACC; Lanyard strap
- T198457ACC; Tripod Adapter, Kxx
- T198441ACC; Transport case Kxx
- T911309ACC; Screwdriver TX20
- T198322ACC; In-truck charger
- T199398; FLIR K65 accessory kit
- T199368ACC; Battery Li-ion 3.6 V, 4.4 Ah, 16 Wh
- T129915ACC; Carabiner strap

14.7 In-truck charger

P/N: T198322

Rev.: 28825

Power system	
Charging time	< 4 hours
Charging temperature	0°C to +45°C (+32°F to +113°F)
External power, connector type	Screw terminal or HRS_UK60-3PT
DC operation	12/ 24 V DCnominal (11.1 - 28.0 V DC)
Power	Max 36 Watts or 3000 mA at 12 VDC (5 amps fuse)

Environmental data	
Operating temperature range	-40°C to +85°C (-40°F to +185°F)
Storage temperature range	-40°C to +85°C (-40°F to +185°F)
Relative humidity	Operational for non-condensing humidity between 5% and 95%.
EMC	<ul style="list-style-type: none"> • EN61000-6-3 Emission • EN61000-6-2 Immunity • FCC47CFR part 15 class B • NFPA requirements • ISO 7637-2 Road vehicles - Electrical disturbances from conduction and coupling Part 2: Electrical transient conduction along supply lines only
Encapsulation	IP 20
Bump	Operational after exposed to: 5 pulses/ in each axis/ direction (30 total) of 30g 11ms half sine profile
Vibration	Operational after exposed to: 4, 3g rms random profile. 8 hours in each axis.

Physical data	
Weight	1.050 kg
Size (L x W x H)	380 mm x 180 mm x 153 mm (15 in. x 7.1 in. x 6 in.)
Material	PC / ABS
Color	Grey / black


Shipping information	
List of contents	<ul style="list-style-type: none"> • Charger • Documentation • Card board box
Packaging, weight	3.2 kg (7.0 lb.)
Packaging, size	435 x 245 x 167 mm (17.1 x 9.6 x 6.6 in.)
EAN-13	7332558005446 4743254001282 (Estonia plant)
UPC-12	845188005368
Country of origin	Estonia

Compatible with the following products

- 72201-0106; FLIR K45

- 72201-0206; FLIR K55
- 72202-0303; FLIR K65



[See next page]

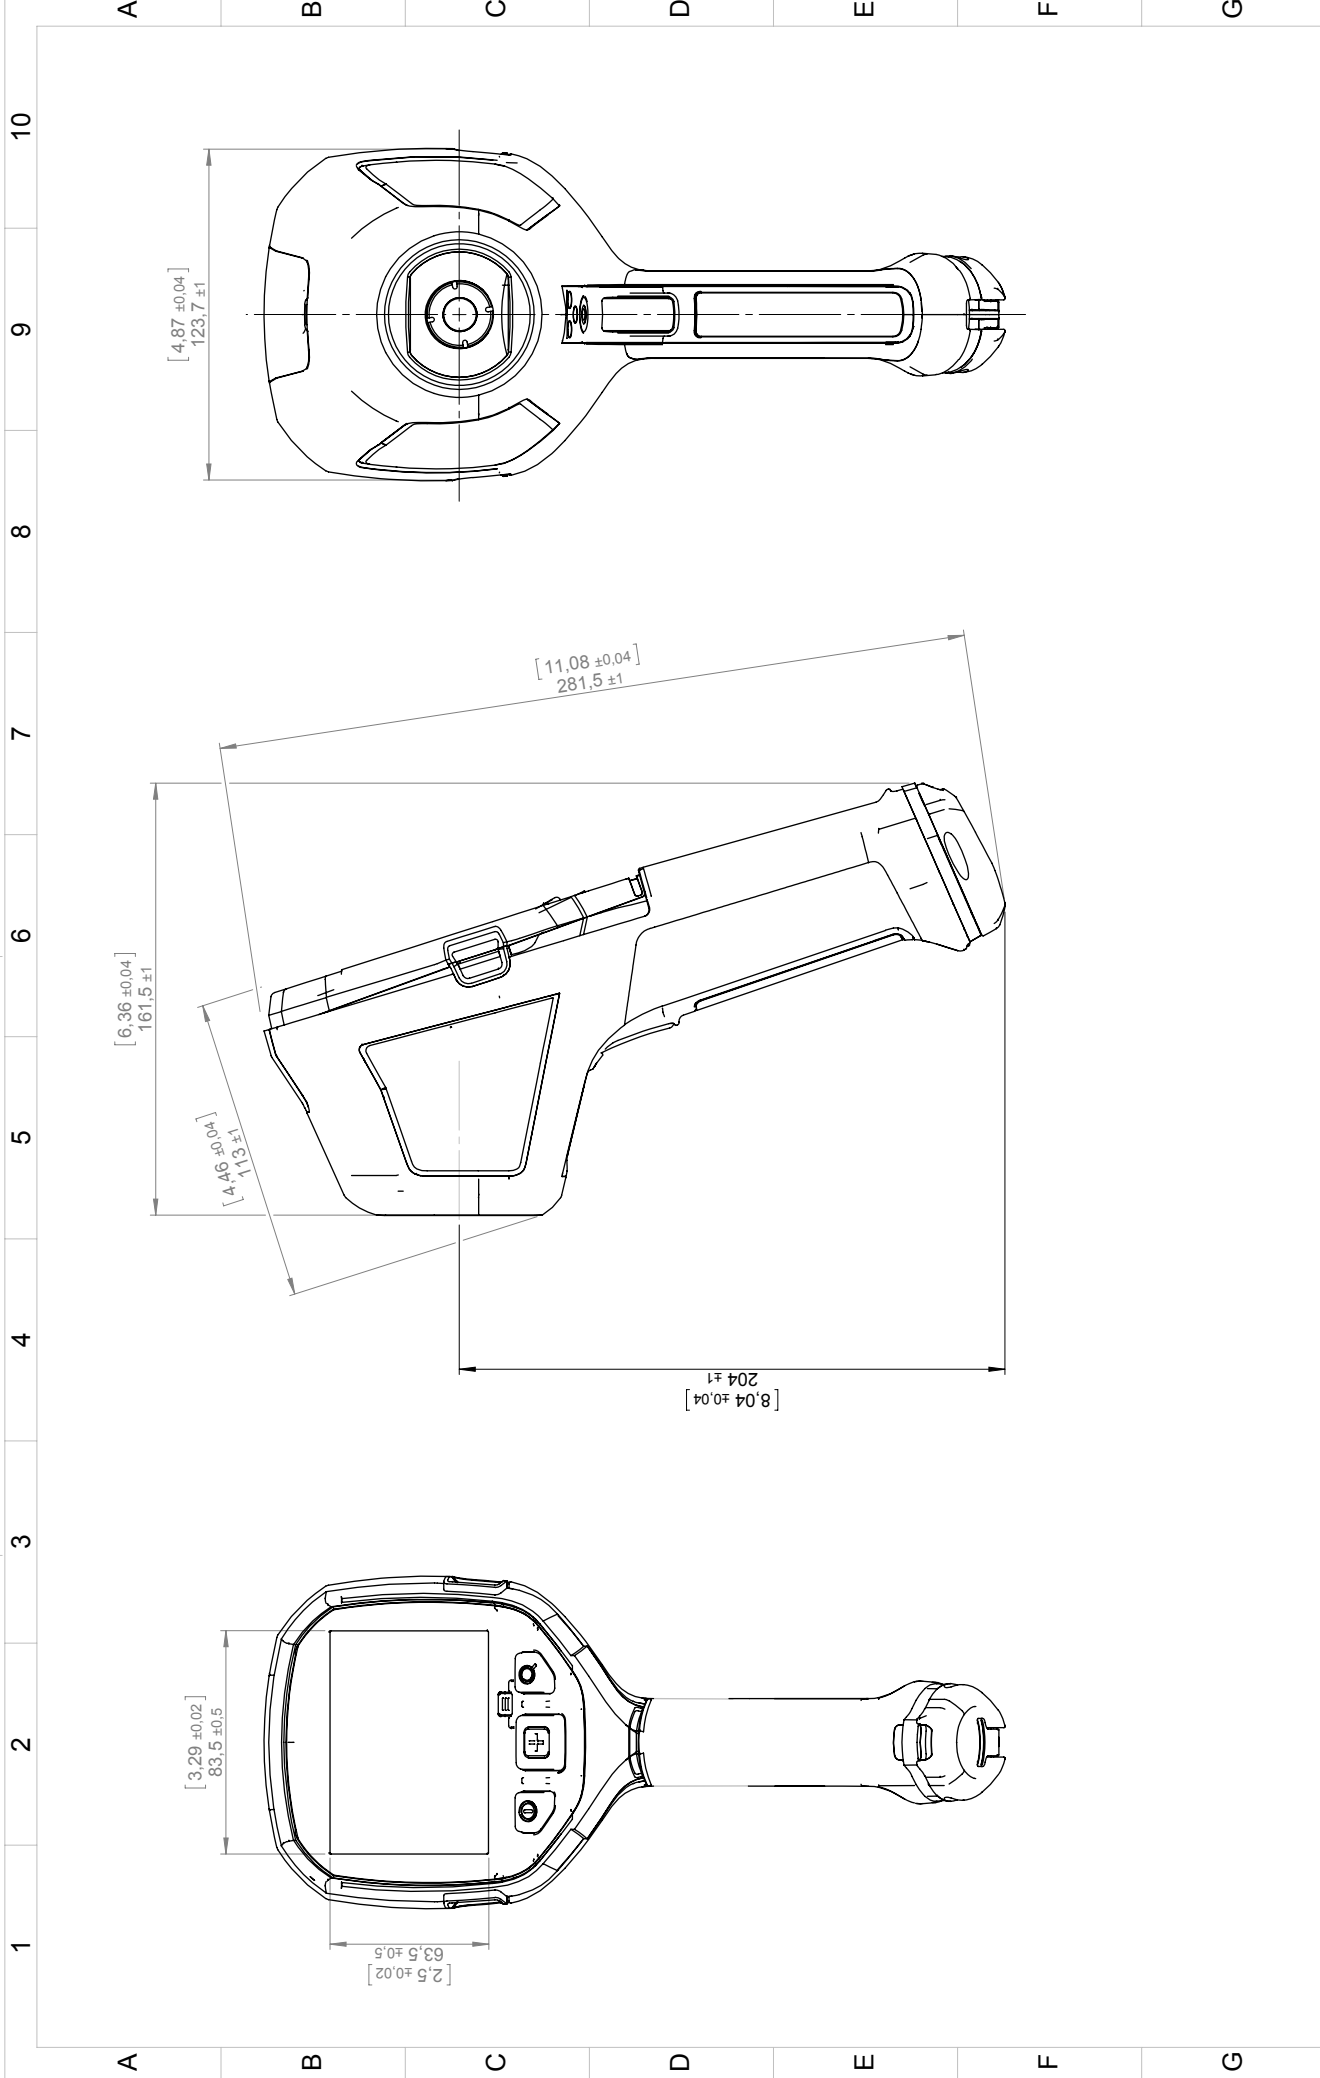

Konstr/Drawn P. MARCUS		Datum/Date 2013-01-23	Kontr/Check -	Material -
Ändrad av/Modified by P. MARCUS		Ändrad/Modified 2013-01-23	Ytjämnhet/Roughness Ra	Ytbehandling/Surface treatment
Där ej annat anges/Unless otherwise stated Gen tol ISO 2768-mk		Benämning/Denomination		
0-5-6 ±0,1 Hålkälsradier (6)-30 ±0,2 Fillet radii (20)-400 ±0,5 Kanter brutna (400)-1000 ±0,8 Edges broken		Skala/Scale 1:2		
		Aritm. A3		
		BladSheet 1(2)		
		Ritn nr/Drawing No T-127798		
		Rev		

Basic dimension drawing



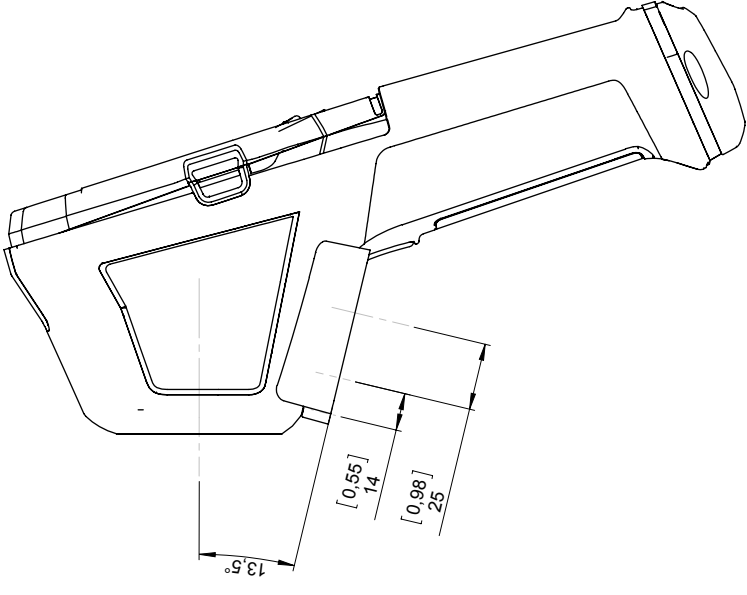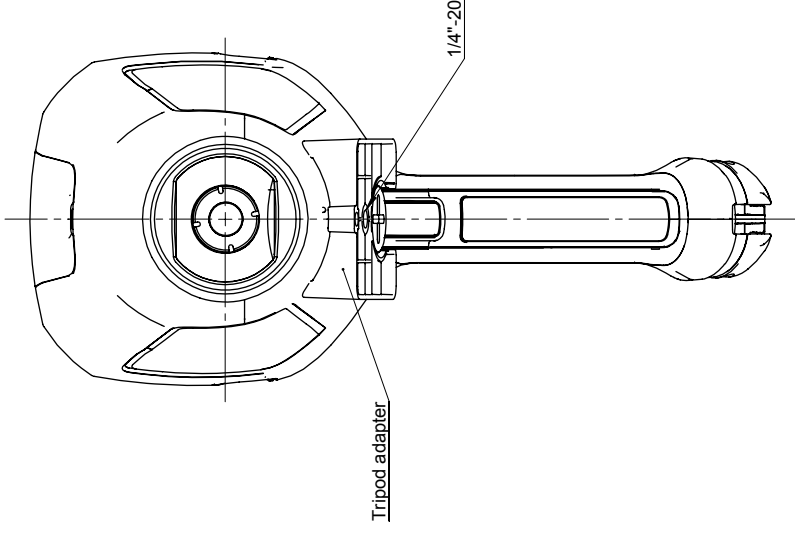




FLIR

Blad/Sheet 2(2)
SFS
A3
Rev

Scale/Scale 1:2
ArNo.
Rin nr/Drawing No. T127798

Konstr/Drawn P. MARCUS	Datum/Date 2013-01-23	Kontr/Check -	Material -
Ändrad av/Modified by P. MARCUS	Ändrad/Modified 2013-01-23	Ytjämnhet/Roughness Ra	Ytbehandling/Surface treatment µm
Där ej annat anges/Unless otherwise stated			
Utdrag ur/Excerpt from ISO 2768-m			
0,5-6 ±0,1 Hålkälsradier			
6,3-30 ±0,2 Fillet radii			
(120)-400 ±0,5 Kanter brutna			
(400)-1000 ±0,8 Edgese broken			
Basic dimension drawing			

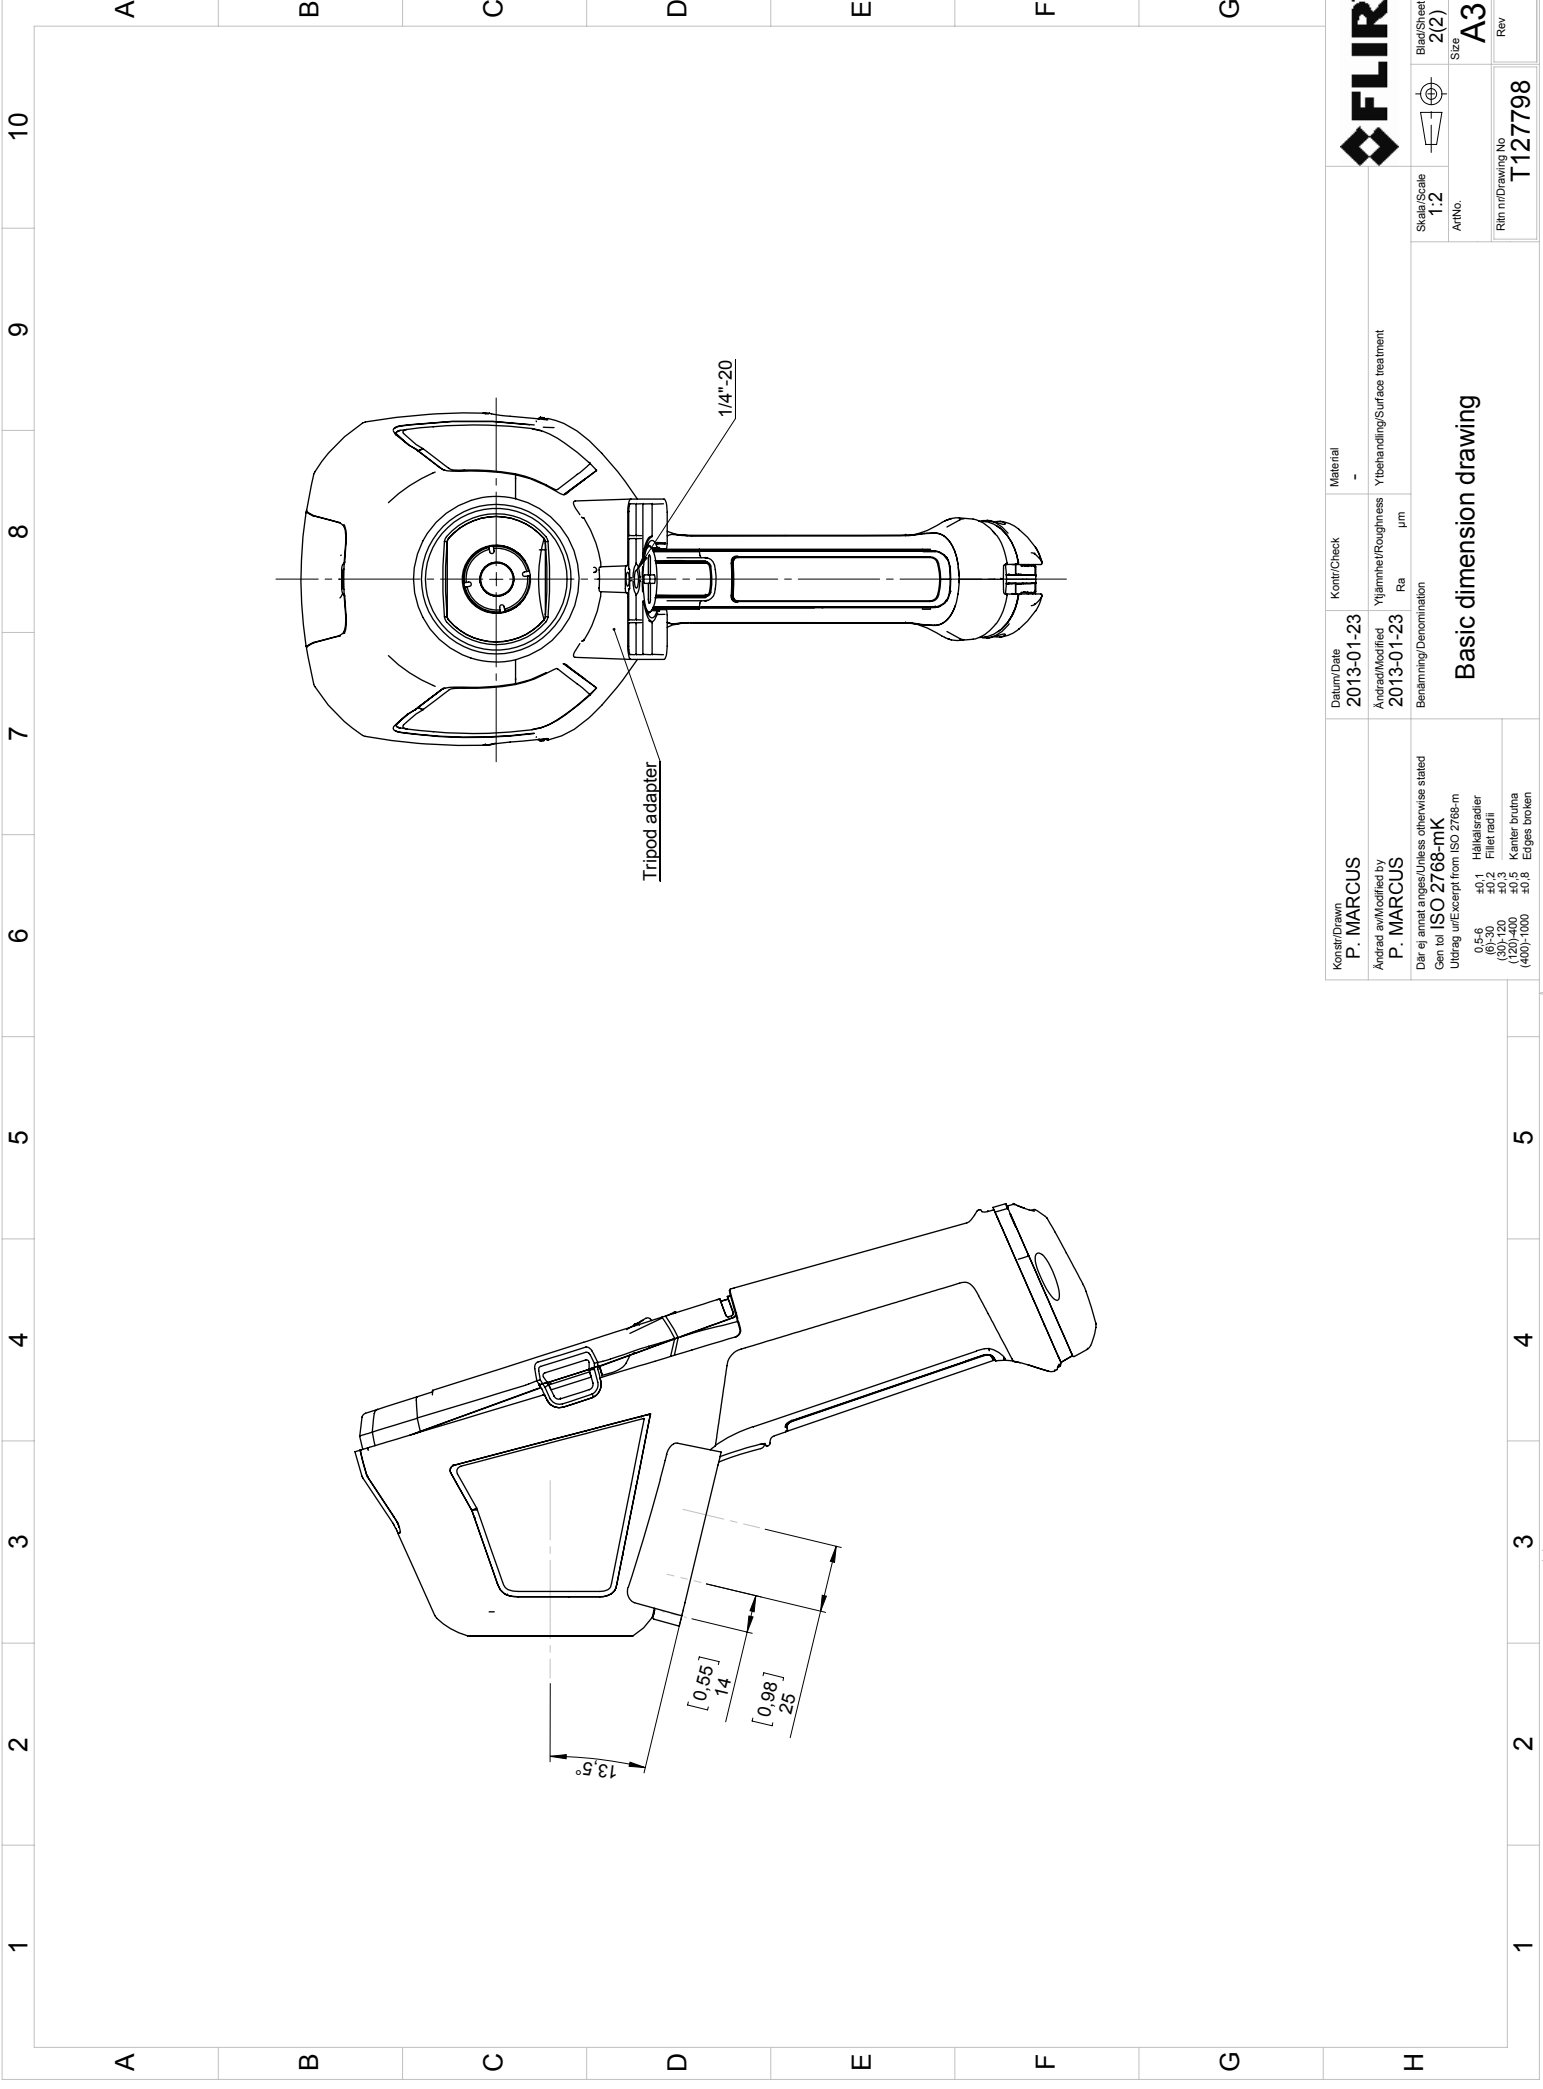

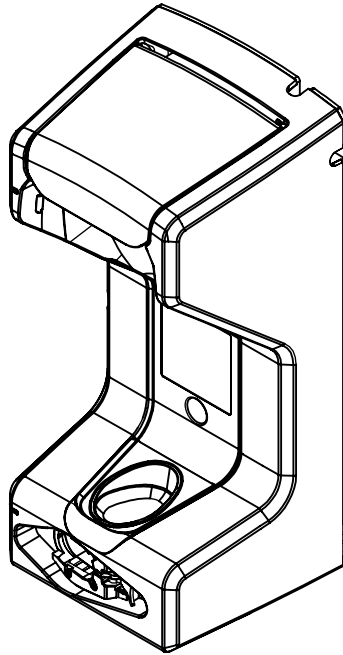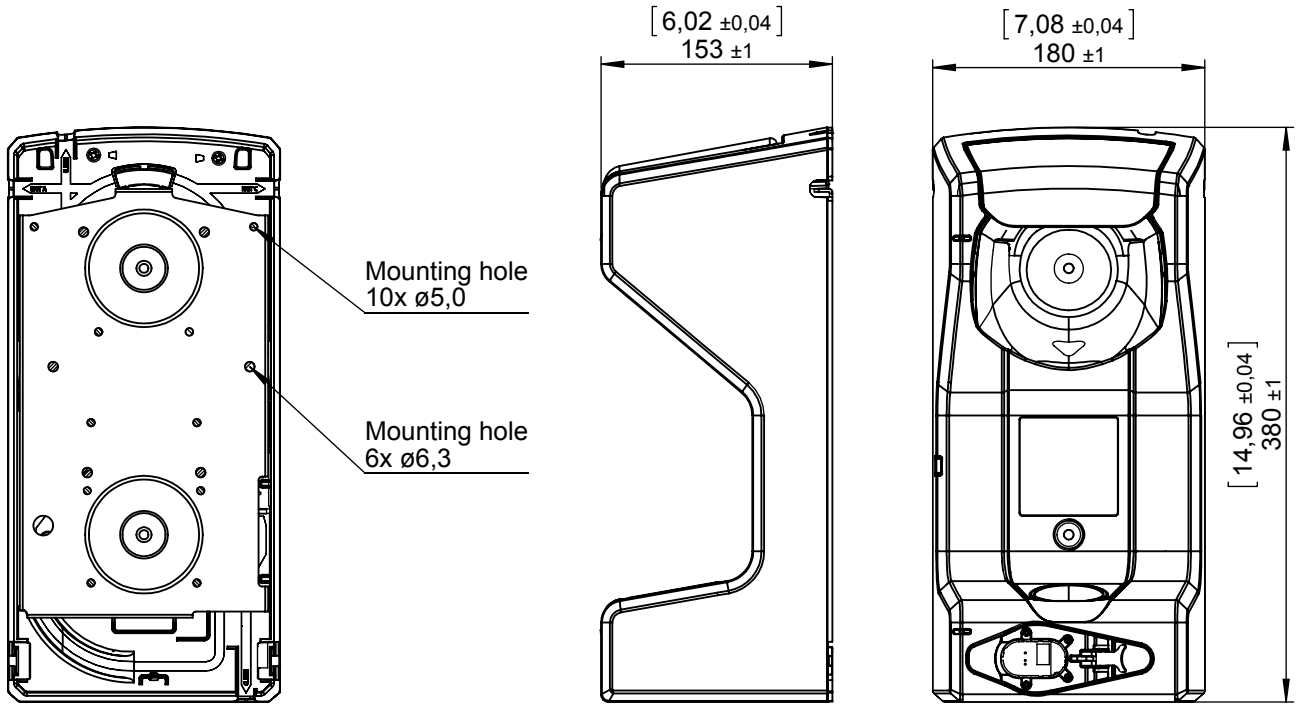

Konstr/Drawn P. MARCUS	Datum/Date 2013-04-08	Kontr/Check MABR	Material	
Ändrad av/Modified by P. MARCUS	Ändrad/Modified 2013-04-08	Ytjämnhet/Roughness Ra μm	Ytbehandling/Surface treatment	
Där ej annat anges/Unless otherwise stated Gen tol ISO 2768-mK Utdrag ur/Excerpt from ISO 2768-m	Benämning/Denomination Basic dimensions In-truck charger		Skala/Scale 1:5	Blad/Sheet 1(1)
0,5-6 $\pm 0,1$ Hålkälsradier (6)-30 $\pm 0,2$ Fillet radii (30)-120 $\pm 0,3$ (120)-400 $\pm 0,5$ Kanter brutna (400)-1000 $\pm 0,8$ Edges broken			Art.No.	Size A4
			Ritn nr/Drawing No T127865	Rev A

[See next page]



The World's Sixth Sense™

January 11, 2017 Täby, Sweden

AQ320212

CE Declaration of Conformity – EU Declaration of Conformity

Product: FLIR KXX series

Name and address of the manufacturer:

FLIR Systems AB

PO Box 7376

SE-187 15 Täby, Sweden

This declaration of conformity is issued under the sole responsibility of the manufacturer.

The object of the declaration: FLIR KXX series

The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

Directives:

Directive	2014/30/EU	Electromagnetic Compability
Directive	2014/35/EU	Low Voltage Directive (Power Supply)
Directive	2012/19/EU	Waste electrical and electric equipment

Standards:

Emission	EN 61000-6-3:2007+A1:2011	Electromagnetic Compability Generic standards – Emission
Immunity	EN 61000-6-2:2005	Electromagnetic Compability Generic standards – Immunity
Safety (Power Supply)	IEC 60950-1:2005+A1	Information technology equipment - Safety

FLIR Systems AB

Quality Assurance

Lea Dabiri

Quality Manager

Cleaning, decontamination and disinfection

17.1 Cleaning

17.1.1 Camera housing, cables, and other items

17.1.1.1 Liquids

Use one of these liquids:

- Warm water
- A weak detergent solution


17.1.1.2 Equipment

A soft cloth

17.1.1.3 Procedure

Follow this procedure:

1. Soak the cloth in the liquid.
2. Twist the cloth to remove excess liquid.
3. Clean the part with the cloth.

	CAUTION
Do not apply solvents or similar liquids to the camera, the cables, or other items. This can cause damage.	

17.1.2 Infrared lens


17.1.2.1 Liquids

Use one of these liquids:

- A commercial lens cleaning liquid with more than 30% isopropyl alcohol.
- 96% ethyl alcohol (C₂H₅OH).

17.1.2.2 Equipment


Cotton wool


	CAUTION
If you use a lens cleaning cloth it must be dry. Do not use a lens cleaning cloth with the liquids that are given in section 17.1.2.1 above. These liquids can cause material on the lens cleaning cloth to become loose. This material can have an unwanted effect on the surface of the lens.	

17.1.2.3 Procedure

Follow this procedure:

1. Soak the cotton wool in the liquid.
2. Twist the cotton wool to remove excess liquid.
3. Clean the lens one time only and discard the cotton wool.

	WARNING
Make sure that you read all applicable MSDS (Material Safety Data Sheets) and warning labels on containers before you use a liquid: the liquids can be dangerous.	

	CAUTION
<ul style="list-style-type: none"> • Be careful when you clean the infrared lens. The lens has a delicate anti-reflective coating. • Do not clean the infrared lens too vigorously. This can damage the anti-reflective coating. 	

17.2 Decontamination and disinfection

- The camera must be thoroughly cleaned, decontaminated and disinfected before shipping to our service department. No hazardous residues are allowed on cameras. Such residues include—but are not limited to—chemical fire-extinguishing compounds, radioactivity, biohazardous materials, and residues from chemical fires.
- FLIR Systems reserves the right to charge the full cost for the decontamination and disinfection of contaminated cameras that are shipped to our service department.

Maintenance, inspection, and service

The following maintenance and inspection procedures apply.

18.1 Maintenance

After each use:

1. Clean the camera according to section 17.1 *Cleaning*, page 70.
2. Charge the battery according to section 12.3 *Charging the battery*, page 26.

18.2 Inspection

After each use:

1. Verify the function and integrity of the latch that secures the battery.



CAUTION

Make sure that you do not use a torque value that is more than 80 Ncm on the Torx T20 screw. Damage to the camera can occur if you do not obey this.

2. Inspect the lens for scratches.
3. Inspect the screen for scratches.
4. Inspect the camera body for damage.
5. Verify the function of all buttons and triggers.
6. Inspect the attachment point for the lanyard strap/neck strap, and the attachment point for the retractable lanyard.

18.3 Service

For contact details to our service departments, use the following link:

<http://support.flir.com/service>

The following storage conditions apply.

Storage temperature range	-40°C to +85°C (-40°F to +185°F)
Storage humidity	IEC 60068-2-30/24 h 95% relative humidity +25°C to +40°C (+77°F to +104°F) / 2 cycles

FLIR Systems was established in 1978 to pioneer the development of high-performance infrared imaging systems, and is the world leader in the design, manufacture, and marketing of thermal imaging systems for a wide variety of commercial, industrial, and government applications. Today, FLIR Systems embraces five major companies with outstanding achievements in infrared technology since 1958—the Swedish AGEMA Infrared Systems (formerly AGA Infrared Systems), the three United States companies In-digo Systems, FSI, and Inframetrics, and the French company Cedic.

Since 2007, FLIR Systems has acquired several companies with world-leading expertise in sensor technologies:

- Extech Instruments (2007)
- Ifara Tecnologías (2008)
- Salvador Imaging (2009)
- OmniTech Partners (2009)
- Directed Perception (2009)
- Raymarine (2010)
- ICx Technologies (2010)
- TackTick Marine Digital Instruments (2011)
- Aerius Photonics (2011)
- Lorex Technology (2012)
- Traficon (2012)
- MARSS (2013)
- DigitalOptics micro-optics business (2013)
- DVTEL (2015)
- Point Grey Research (2016)
- Prox Dynamics (2016)

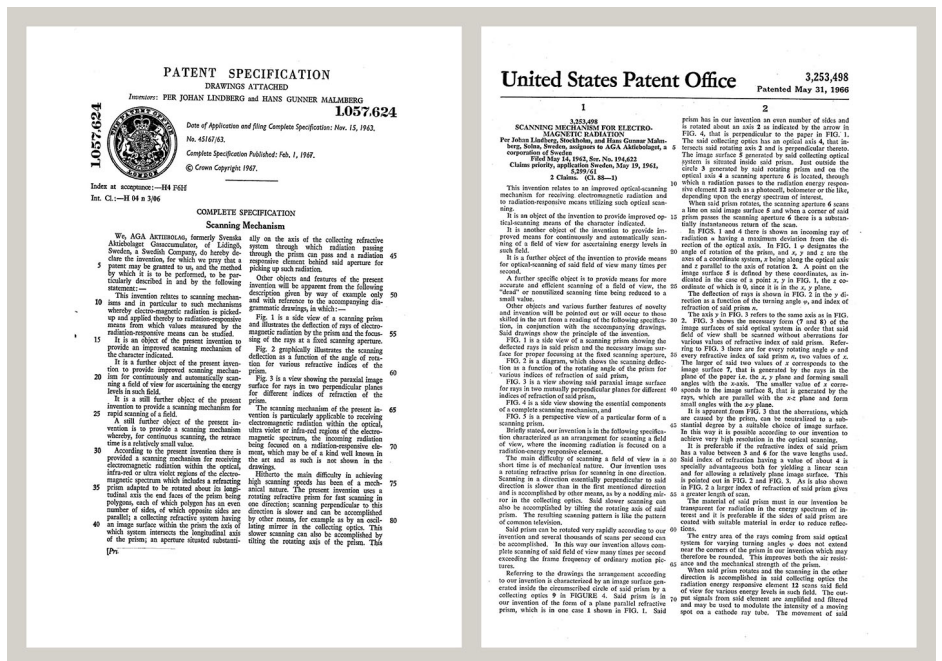


Figure 20.1 Patent documents from the early 1960s

FLIR Systems has three manufacturing plants in the United States (Portland, OR, Boston, MA, Santa Barbara, CA) and one in Sweden (Stockholm). Since 2007 there is also a manufacturing plant in Tallinn, Estonia. Direct sales offices in Belgium, Brazil, China, France, Germany, Great Britain, Hong Kong, Italy, Japan, Korea, Sweden, and the USA—together with a worldwide network of agents and distributors—support our international customer base.

FLIR Systems is at the forefront of innovation in the infrared camera industry. We anticipate market demand by constantly improving our existing cameras and developing new ones. The company has set milestones in product design and development such as the introduction of the first battery-operated portable camera for industrial inspections, and the first uncooled infrared camera, to mention just two innovations.



Figure 20.2 1969: Thermovision Model 661. The camera weighed approximately 25 kg (55 lb.), the oscilloscope 20 kg (44 lb.), and the tripod 15 kg (33 lb.). The operator also needed a 220 VAC generator set, and a 10 L (2.6 US gallon) jar with liquid nitrogen. To the left of the oscilloscope the Polaroid attachment (6 kg/13 lb.) can be seen.



Figure 20.3 2015: FLIR One, an accessory to iPhone and Android mobile phones. Weight: 90 g (3.2 oz.).

FLIR Systems manufactures all vital mechanical and electronic components of the camera systems itself. From detector design and manufacturing, to lenses and system electronics, to final testing and calibration, all production steps are carried out and supervised by our own engineers. The in-depth expertise of these infrared specialists ensures the accuracy and reliability of all vital components that are assembled into your infrared camera.

20.1 More than just an infrared camera

At FLIR Systems we recognize that our job is to go beyond just producing the best infrared camera systems. We are committed to enabling all users of our infrared camera systems to work more productively by providing them with the most powerful camera–software combination. Especially tailored software for predictive maintenance, R & D, and process monitoring is developed in-house. Most software is available in a wide variety of languages.

We support all our infrared cameras with a wide variety of accessories to adapt your equipment to the most demanding infrared applications.

20.2 Sharing our knowledge

Although our cameras are designed to be very user-friendly, there is a lot more to thermography than just knowing how to handle a camera. Therefore, FLIR Systems has founded the Infrared Training Center (ITC), a separate business unit, that provides certified training courses. Attending one of the ITC courses will give you a truly hands-on learning experience.

The staff of the ITC are also there to provide you with any application support you may need in putting infrared theory into practice.

20.3 Supporting our customers

FLIR Systems operates a worldwide service network to keep your camera running at all times. If you discover a problem with your camera, local service centers have all the equipment and expertise to solve it within the shortest possible time. Therefore, there is no need to send your camera to the other side of the world or to talk to someone who does not speak your language.

Before the year 1800, the existence of the infrared portion of the electromagnetic spectrum wasn't even suspected. The original significance of the infrared spectrum, or simply 'the infrared' as it is often called, as a form of heat radiation is perhaps less obvious today than it was at the time of its discovery by Herschel in 1800.

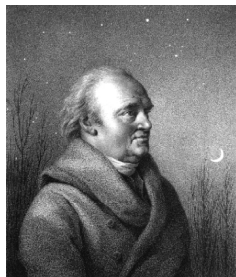


Figure 21.1 Sir William Herschel (1738–1822)

The discovery was made accidentally during the search for a new optical material. Sir William Herschel – Royal Astronomer to King George III of England, and already famous for his discovery of the planet Uranus – was searching for an optical filter material to reduce the brightness of the sun's image in telescopes during solar observations. While testing different samples of colored glass which gave similar reductions in brightness he was intrigued to find that some of the samples passed very little of the sun's heat, while others passed so much heat that he risked eye damage after only a few seconds' observation.

Herschel was soon convinced of the necessity of setting up a systematic experiment, with the objective of finding a single material that would give the desired reduction in brightness as well as the maximum reduction in heat. He began the experiment by actually repeating Newton's prism experiment, but looking for the heating effect rather than the visual distribution of intensity in the spectrum. He first blackened the bulb of a sensitive mercury-in-glass thermometer with ink, and with this as his radiation detector he proceeded to test the heating effect of the various colors of the spectrum formed on the top of a table by passing sunlight through a glass prism. Other thermometers, placed outside the sun's rays, served as controls.

As the blackened thermometer was moved slowly along the colors of the spectrum, the temperature readings showed a steady increase from the violet end to the red end. This was not entirely unexpected, since the Italian researcher, Landriani, in a similar experiment in 1777 had observed much the same effect. It was Herschel, however, who was the first to recognize that there must be a point where the heating effect reaches a maximum, and that measurements confined to the visible portion of the spectrum failed to locate this point.



Figure 21.2 Marsilio Landriani (1746–1815)

Moving the thermometer into the dark region beyond the red end of the spectrum, Herschel confirmed that the heating continued to increase. The maximum point, when he found it, lay well beyond the red end – in what is known today as the 'infrared wavelengths'.

When Herschel revealed his discovery, he referred to this new portion of the electromagnetic spectrum as the 'thermometrical spectrum'. The radiation itself he sometimes referred to as 'dark heat', or simply 'the invisible rays'. Ironically, and contrary to popular opinion, it wasn't Herschel who originated the term 'infrared'. The word only began to appear in print around 75 years later, and it is still unclear who should receive credit as the originator.

Herschel's use of glass in the prism of his original experiment led to some early controversies with his contemporaries about the actual existence of the infrared wavelengths. Different investigators, in attempting to confirm his work, used various types of glass indiscriminately, having different transparencies in the infrared. Through his later experiments, Herschel was aware of the limited transparency of glass to the newly-discovered thermal radiation, and he was forced to conclude that optics for the infrared would probably be doomed to the use of reflective elements exclusively (i.e. plane and curved mirrors). Fortunately, this proved to be true only until 1830, when the Italian investigator, Melloni, made his great discovery that naturally occurring rock salt (NaCl) – which was available in large enough natural crystals to be made into lenses and prisms – is remarkably transparent to the infrared. The result was that rock salt became the principal infrared optical material, and remained so for the next hundred years, until the art of synthetic crystal growing was mastered in the 1930's.



Figure 21.3 Macedonio Melloni (1798–1854)

Thermometers, as radiation detectors, remained unchallenged until 1829, the year Nobili invented the thermocouple. (Herschel's own thermometer could be read to $0.2\text{ }^{\circ}\text{C}$ ($0.036\text{ }^{\circ}\text{F}$), and later models were able to be read to $0.05\text{ }^{\circ}\text{C}$ ($0.09\text{ }^{\circ}\text{F}$)). Then a breakthrough occurred; Melloni connected a number of thermocouples in series to form the first thermopile. The new device was at least 40 times as sensitive as the best thermometer of the day for detecting heat radiation – capable of detecting the heat from a person standing three meters away.

The first so-called 'heat-picture' became possible in 1840, the result of work by Sir John Herschel, son of the discoverer of the infrared and a famous astronomer in his own right. Based upon the differential evaporation of a thin film of oil when exposed to a heat pattern focused upon it, the thermal image could be seen by reflected light where the interference effects of the oil film made the image visible to the eye. Sir John also managed to obtain a primitive record of the thermal image on paper, which he called a 'thermograph'.



Figure 21.4 Samuel P. Langley (1834–1906)

The improvement of infrared-detector sensitivity progressed slowly. Another major breakthrough, made by Langley in 1880, was the invention of the bolometer. This consisted of a thin blackened strip of platinum connected in one arm of a Wheatstone bridge circuit upon which the infrared radiation was focused and to which a sensitive galvanometer responded. This instrument is said to have been able to detect the heat from a cow at a distance of 400 meters.

An English scientist, Sir James Dewar, first introduced the use of liquefied gases as cooling agents (such as liquid nitrogen with a temperature of $-196\text{ }^{\circ}\text{C}$ ($-320.8\text{ }^{\circ}\text{F}$)) in low temperature research. In 1892 he invented a unique vacuum insulating container in which it is possible to store liquefied gases for entire days. The common 'thermos bottle', used for storing hot and cold drinks, is based upon his invention.

Between the years 1900 and 1920, the inventors of the world 'discovered' the infrared. Many patents were issued for devices to detect personnel, artillery, aircraft, ships – and even icebergs. The first operating systems, in the modern sense, began to be developed during the 1914–18 war, when both sides had research programs devoted to the military exploitation of the infrared. These programs included experimental systems for enemy intrusion/detection, remote temperature sensing, secure communications, and 'flying torpedo' guidance. An infrared search system tested during this period was able to detect an approaching airplane at a distance of 1.5 km (0.94 miles), or a person more than 300 meters (984 ft.) away.

The most sensitive systems up to this time were all based upon variations of the bolometer idea, but the period between the two wars saw the development of two revolutionary new infrared detectors: the image converter and the photon detector. At first, the image converter received the greatest attention by the military, because it enabled an observer for the first time in history to literally 'see in the dark'. However, the sensitivity of the image converter was limited to the near infrared wavelengths, and the most interesting military targets (i.e. enemy soldiers) had to be illuminated by infrared search beams. Since this involved the risk of giving away the observer's position to a similarly-equipped enemy observer, it is understandable that military interest in the image converter eventually faded.

The tactical military disadvantages of so-called 'active' (i.e. search beam-equipped) thermal imaging systems provided impetus following the 1939–45 war for extensive secret military infrared-research programs into the possibilities of developing 'passive' (no search beam) systems around the extremely sensitive photon detector. During this period, military secrecy regulations completely prevented disclosure of the status of infrared-imaging technology. This secrecy only began to be lifted in the middle of the 1950's, and from that time adequate thermal-imaging devices finally began to be available to civilian science and industry.

A note on the technical production of this publication

This publication was produced using XML — the eXtensible Markup Language. For more information about XML, please visit <http://www.w3.org/XML/>

A note on the typeface used in this publication

This publication was typeset using Linotype Helvetica™ World. Helvetica™ was designed by Max Miedinger (1910–1980)

LOEF (List Of Effective Files)

T501016.xml; en-US; BA; 41926; 2017-04-06
T505471.xml; en-US; 9229; 2013-10-03
T505846.xml; en-US; 39792; 2017-01-30
T505013.xml; en-US; 39689; 2017-01-25
T505691.xml; en-US; 39865; 2017-01-31
T506046.xml; en-US; 39792; 2017-01-30
T505509.xml; en-US; 39792; 2017-01-30
T505510.xml; en-US; 41131; 2017-03-13
T505937.xml; en-US; 39792; 2017-01-30
T505511.xml; en-US; 39792; 2017-01-30
T505512.xml; en-US; 39792; 2017-01-30
T505514.xml; en-US; 39792; 2017-01-30
T505516.xml; en-US; 39792; 2017-01-30
T505790.xml; en-US; 39791; 2017-01-30
T505980.xml; en-US; 39792; 2017-01-30
T505990.xml; en-US; 39792; 2017-01-30
T505007.xml; en-US; 39512; 2017-01-18
T505005.xml; en-US; 39512; 2017-01-18



Website
<http://www.flir.com>

Customer support
<http://support.flir.com>

Copyright
© 2017, FLIR Systems, Inc. All rights reserved worldwide.

Disclaimer
Specifications subject to change without further notice. Models and accessories subject to regional market considerations. License procedures may apply. Products described herein may be subject to US Export Regulations. Please refer to exportquestions@flir.com with any questions.

Publ. No.: T559946
Release: BA
Commit: 41926
Head: 41970
Language: en-US
Modified: 2017-04-06
Formatted: 2017-04-06