

---

## **PX50 FM STEREO TRANSMITTER**





## AGENCY CERTIFICATIONS AND USER INFORMATION

**FCC ID: PF3PX50**  
**Grantee Code: PF3**  
**Equipment Product Code PX50**

This unit complies with Part 73 and 74 of the FCC Certification/ Verification Standards for Licensed Broadcast Station Transmitters. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

---

**IC:4318A-PX50**

This unit complies with BETS-6 Technical Standards for Licensed FM Broadcast Station Transmitters (Canada)

---

**WARNING: Changes or modifications not expressly approved by Ramsey Electronics, LLC could void the user's authority to operate the equipment**

---

MODEL: PX50  
DESCRIPTION: Commercial FM Stereo Transmitter



**RAMSEY ELECTRONICS, LLC**  
590 Fishers Station Drive, Victor, NY 14564, (585) 924-4560  
[www.ramseyelectronics.com](http://www.ramseyelectronics.com)

## TABLE OF CONTENTS

<b>1.00 Introduction</b> .....	<b>5</b>
• 1.01 Checking the Contents.....	5
<b>2.00 Features</b> .....	<b>6</b>
• 2.01 Continuous Monitoring.....	6
• 2.02 Use It Anywhere In The World.....	7
• 2.03 Cool Running.....	7
• 2.04 Variable RF Power Output.....	7
• 2.05 Easy Installation.....	7
• 2.06 Rock Solid Performance.....	7
<b>3.03 PX50 Overview</b> .....	<b>8</b>
• 3.01 Front Panel.....	8
• 3.02 Rear Panel.....	8
• 3.03 Internal Layout.....	9
<b>4.00 Installation and Initial Setup</b> .....	<b>10</b>
• 4.01 Licensed Operation.....	10
• 4.02 Unlicensed Operation.....	10
• 4.03 Rack Mount Installation.....	10
• 4.04 Primary Power.....	10
• 4.05 Secondary DC Power.....	11
• 4.06 Audio Inputs.....	11
• 4.07 MPX Input.....	11
• 4.08 Pilot Output.....	11
• 4.09 Antenna.....	11
<b>5.00 Using the PX50 Front Panel Interface</b> .....	<b>12</b>
• 5.01 Navigation Control and Display.....	12
• 5.02 General Display.....	12
• 5.03 Audio Display.....	12
• 5.04 VSWR Display.....	12
• 5.05 Temperature Display.....	13
• 5.06 Set Volume.....	13
• 5.07 Set Modulation.....	13
• 5.08 Set Audio Modulation Limiting (AML).....	14
• 5.09 Set Frequency.....	14
• 5.10 Set RF Output Power.....	15
• 5.11 Set Stereo Mode.....	15



- 5.12 Set Station ID..... 15
- 5.13 Set Auto Power..... 15
- 5.14 Set Power Fault..... 16
- 5.15 Set Power Fault Timer..... 16
- 5.16 Set Test Timer..... 16
- 5.17 Set Control Lock ..... 17
- 5.18 Quiet Mode..... 17
- 5.18 Super User Mode ..... 17

**6.00 Appendix ..... 18**

- 6.01 Appendix A: US Frequency Assignments..... 18
- 6.02 Appendix B: Troubleshooting..... 19
- 6.03 Appendix C: Operating Temperature Characteristics..... 21

**7.00 Specifications ..... 22**

**8.00 Warranty ..... 23**

## **1.00 INTRODUCTION**

The PX50 has been carefully inspected and packed by Ramsey Electronics, LLC for shipping. Upon receipt please check the carton and look for any visible damage and notify the carrier immediately.

### **1.01 Checking the Contents**

The PX50 FM Stereo Transmitter package includes the following:

- 1 PX50 FM Stereo Transmitter
- 2 110VAC EIA Power Cord
- 3 12VDC Connector Assembly
- 4 Operator's Manual

Please check your package and contact Ramsey Electronics Technical Support if any items are missing.

Ramsey Electronics, LLC  
Technical Support  
590 Fishers Station Drive  
Victor, NY 14564 U.S.A  
(585) 924-4560  
(585) 924-4886 Fax  
TechSupport@ramseymail.com



## 2.00 PX50 FEATURES

The PX50 is state of the art 50 watt FM stereo transmitter designed for commercial FM, LPFM and international use over the frequency range of 87.5 MHz to 108.1 MHz. The RF output level is continuously variable from 1 watt to 50 watts. The transmitter is housed in a compact 2 rack-unit enclosure for easy installation.

Full front panel control and monitoring is provided by an easy to use navigation switch matrix with intuitive 2 line 20 character vacuum fluorescent displays. These controls and displays are provided for the following:

- Frequency
- Left/Right audio levels
- Left/Right peak-hold meters
- PLL lock
- RF power output
- VSWR
- Amplifier temperature
- Exciter temperature
- Audio modulation
- Audio modulation limiting (AML)
- Stereo mode
- Auto VSWR protection
- Auto power leveling
- Auto temperature protection
- Power reduction on error
- Power restoration timer
- Test timer
- Station identity
- Control lock

### 2.01 Continuous Monitoring

The PX50 constantly monitors all of the critical circuits within the transmitter and makes subtle adjustments to various circuit parameters depending upon frequency, temperature, power, audio level, and deviation - in short, it's like having a station engineer constantly monitoring and adjusting on-the-fly!

Automatic VSWR protection automatically reduces power output until the VSWR problem is cleared. Likewise, if the power amplifier temperature exceeds 70° C, the transmitter will reduce power output until it cools down below 60° C. You can set automatic Power Reduction On Error (VSWR & Temperature errors) to 85%, 75%, 50%, 25% or full disable of the set power. Full power is restored when the error is cleared. You can also set the Power Restoration Timer for the error testing time to match your specific site environment. If the error is cleared within this time, the transmitter is restored to full power for unattended operation! Your station stays on the air, and needless trips to

your tower site are eliminated!

### **2.02 Use It Anywhere In The World**

We made the primary input power universal for virtually any location worldwide. Give it anything from 85-264VAC between 47-63Hz, or 120-370VDC and you're all set. It doesn't get much easier than that! You can also run the PX50 primary power from 12-14VDC. You can even provide 12-14VDC from a battery (or vehicle) and have automatic backup in case of a power failure! Your listeners will never miss a beat! Using it out of the country with different frequency plans? No problem, with the 100kHz spacing, you are good to go with the PX50!

### **2.03 Cool Runing**

A super quiet and high CFM fan is mounted inside the PX50 providing direct forced air cooling to the oversized PA heatsink. Outside air is drawn in through the dual dust filtered front panel air inputs, which is routed through the power supply to the PA. Forced air exhausts through the notched rear panel. The result is an extremely quiet high efficiency cooling system that keeps your transmitter up and running even in the harshest environments.

### **2.04 Variable RF Output Power**

Need to throttle back your power to meet your ERP license limitations? Or want to use the PX50 as a stand alone exciter? No problem. The PX50 RF output power is completely adustable from front panel digital controls, from 1W to full 50W power in 1W increments!

### **2.05 Easy Installation**

Installation of the PX50 is a breeze. A standard Type-N connection is provided for RF Output. Balanced (XLR) left and right audio inputs are provided to properly interface with any audio source you have. In addition, BNC SCA/Digital/RDS inputs are provided along with a quick disconnect connector for a 12 VDC standby/back-up power input.


In short, connect your audio sources and antenna, power it up, set frequency and power level via the front panel navigation switch matrix, and you're on the air! It doesn't get any simpler! All of this in a compact 3.5" standard 2 rack unit case that runs a cool and quiet continuous duty!

### **2.06 Great Sounding Rock Solid Performance**

An 8 times oversampled stereo generator with true analog filters throughout assures a clean, refreshing sound image while the RF transmitter chain employs generously rated components for headache-free, long life. The result? You stay on the air while competitive transmitters would shut down!



### 3.00 PX50 OVERVIEW

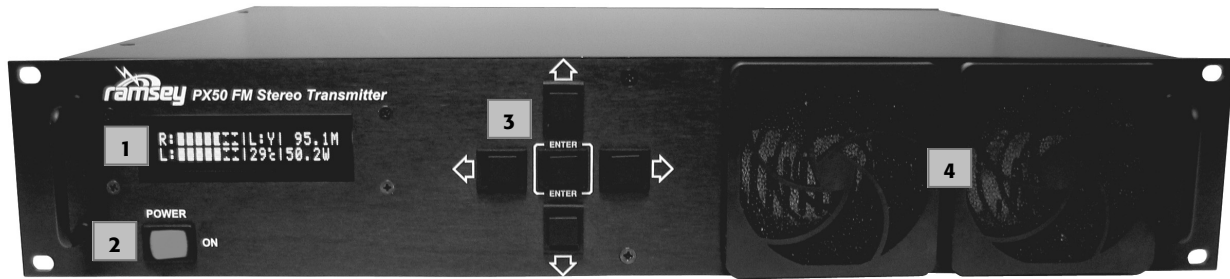

#### 3.01 Front Panel

1. 2-line vacuum fluorescent display
2. Power on/off switch
3. 5-way navigation switch matrix
4. Filtered forced air input, do not block air flow




#### 3.02 Rear Panel

1. Forced air exhaust port, do not block air flow
2. RF output, 50 ohm
3. Audio input left, 600 ohm balanced
4. Audio input right, 600 ohm balanced
5. MPX input, for SCA subcarriers or RDS data
6. Pilot output, 19 kHz
7. 12-14VDC secondary power input
8. Primary AC fuse
9. Secondary DC fuse
10. Primary AC power input, 85-264VAC, 47-63 Hz



### 3.03 Internal Layout

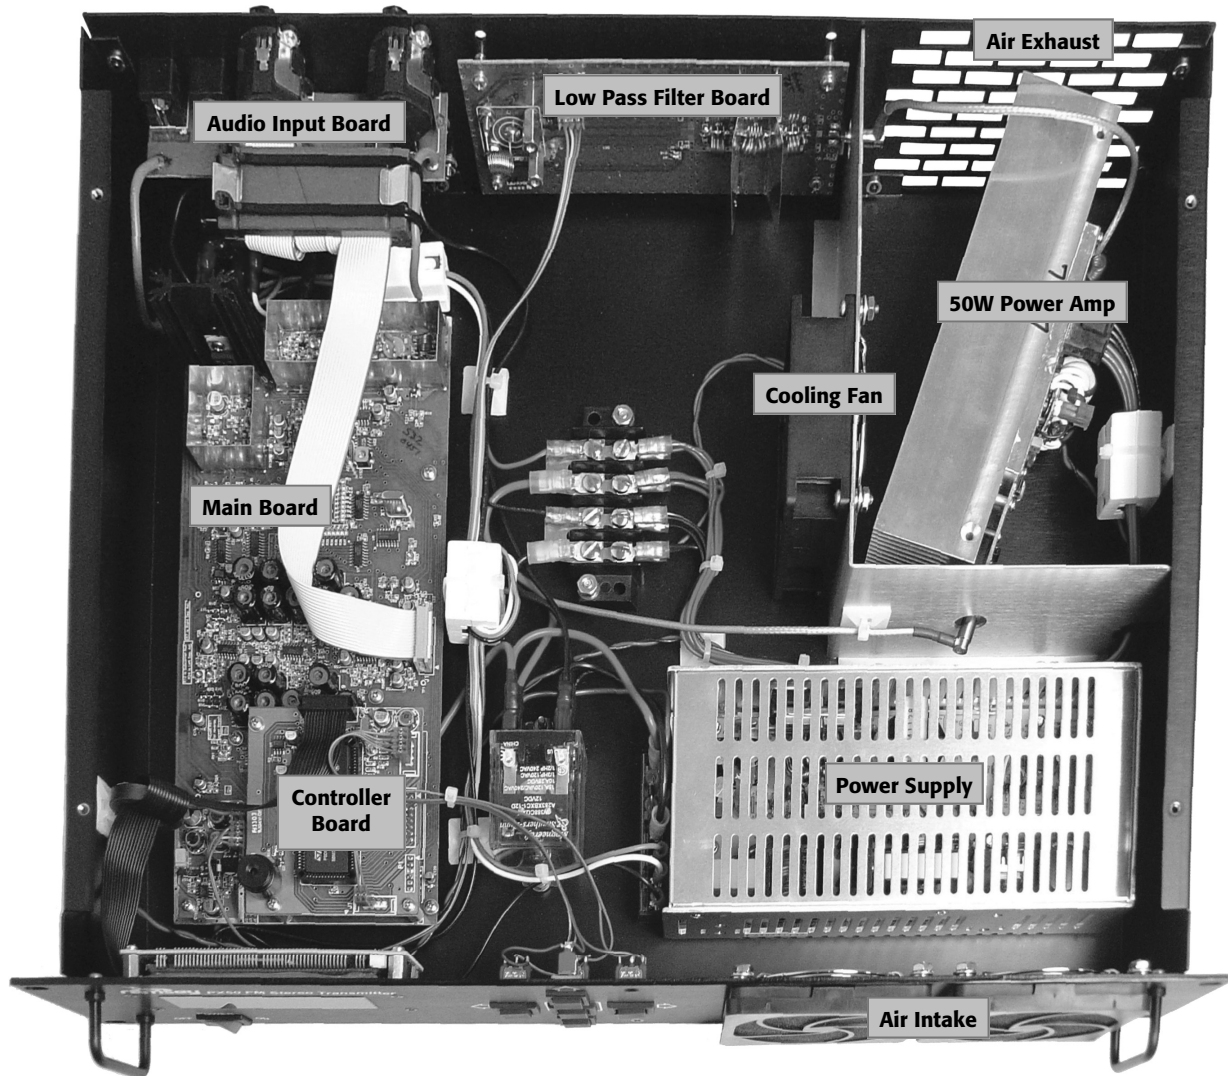

*Your Notes:*

---

---

---

---

---

---

---

---

---

---



## **4.00 INSTALLATION AND INITIAL SETUP**

### **4.01 Licensed Operation**

NOTE: The user of this transmitter is responsible for complying with all FCC rules & regulations within the US, or any regulations of their respective governing body outside the US.

Within the US, your FCC license will specify your broadcast frequency, antenna height, and Effective Radiated Power (ERP) limitation. It is your responsibility to assure the transmitter is operating within your specific license parameters. If you hold a license authorization outside the US it is your responsibility to assure the transmitter is operating within the specific terms of that authorization.

### **4.02 Unlicensed Operation**

For use in unregulated remote areas it is important to select a frequency that is not in use anywhere within the maximum operating range of the transmitter. Care must be taken to monitor the FM band from your transmitter location using a suitable antenna at the highest elevation possible. You should choose a frequency that is clear from any on-channel and co-channel reception.

In choosing an operating frequency, remember to follow the frequency spacing plan of the Country in which you are operating. Most "digital tuners" are designed for that spacing, cannot tune between them.

US frequency spacing is 200 kHz. European frequency spacing is 100 kHz. US frequency assignments are shown in Appendix A in this manual.

### **4.03 Rack Mount Installation**

The PX50 is one standard rack unit (1.75") and is designed to be installed in a standard 19" equipment rack or rack mount enclosure. Care should be taken to allow adequate ventilation to assure proper cooling of the transmitter. As with all rack mount installations, if possible leave an open rack unit above and below the unit to facilitate cooling and to provide back support to the PX50.


### **4.04 Primary Power**

Primary power is connected via the standard EIA rear panel power connector. While provided with a standard 120VAC/60Hz plug, the input can accept an input from 85-264VAC between 47-63Hz, or 120-370VDC. No adjustments are necessary inside the transmitter providing the input voltage falls within these parameters.

#### 4.05 Secondary DC Power

The PX50 is also equipped for 12V DC power operation. This can be used for primary power in the field, or backup power to your primary AC source. If you are using 12 VDC to power the unit, you do not need to make any adjustments to the settings on the power supply. A 4-pin power connector is provided, and it should be connected as follows:

Rear Panel 12 VDC Connector (Male)

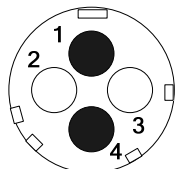


- 1 = +12 VDC (Red)
- 2 = No Connection
- 3 = No Connection
- 4 = Ground (Black)

#### 4.06 Audio Inputs

The PX50 has standard XLR balanced 0V<sub>u</sub> @ +4dBu (1.23VRMS) line level audio inputs for left and right channels. You cannot plug a microphone into line level audio inputs. You would typically connect the line level program output of your studio, mixer, or source to the inputs of the PX1.

Follow standard XLR pinout as follows:

- 1-Ground
- 2-White (+)
- 3-Black (-)



#### 4.07 MPX Input

If you will be broadcasting a sub carrier, your SCA encoder is connected here. If you provide RDS encoded data, it is also connected to the MPX input. This is a standard BNC input. This input has a 100 ohm input impedance.

#### 4.08 Pilot Output

This connection provides a 19 KHz pilot for synchronizing your external subcarrier input. This is a standard BNC output.

#### 4.09 Antenna

Connect your antenna system here. Connection is via a Type-N 50 ohm connector.



## 5.00 USING THE PX50 FRONT PANEL INTERFACE

### 5.01 Navigation Control and Display


The PX50 has 17 menus that either display settings, enable the user to adjust settings, or both. The first 4 menus are display menus only, and the remaining menus allow adjustments to be made to the various controls and settings.

The five navigation/adjustment control keys are located on the front panel of the PX50 and allow user control and display of all necessary settings. The Up/Down arrow keys are used to navigate from one menu to the next. The Left/Right arrow keys are used to adjust specific settings in the adjustment menus. The Enter key is used to either toggle a specific mode on/off, or to “enter” into a field within a menu to manually edit and set a numeric value. With this edit entry mode, the Left/Right arrow keys select which digit is to be adjusted, and the Up/Down arrow keys increment or decrement that specific digit. The Enter key is then pressed to “set” that numeric value and go back to the previous menu.

NOTE: When you make changes to the adjustment screens, the changes are immediately saved to the EEPROM of the microcontroller **when you scroll to the next screen**. If you do not scroll to the next screen, the PX50 assumes you are simply testing this change and will not save it during a power cycle. Again, the Up/Down arrow keys are used to change to the next/previous menu screens. Be sure to go to the next screen after your changes to assure that they have been saved to memory. If the PX50 is turned off before navigating to the next screen, all changes made to that menu screen will be lost.


### 5.02 General Display

The PX50 defaults to this screen upon power up. It displays frequency in MHz, left and right audio levels, the PLL lock status (Y = locked, N = unlocked), Power amp temperature in degrees Celsius, and the measured RF power output in Watts.



### 5.03 Audio Display

This displays the left and right peak hold meters for modulation level setting. The OdBu level is corresponds to the first 13 solid “bars” of meter, and the remaining 5 solid bars correspond to higher than 0 dBu. Try not to exceed this level since it represents close to 100% modulation.



### 5.04 VSWR (Voltage Standing Wave Ratio) Display

This screen displays the measured forward power, reverse power, and VSWR of your antenna - amplifier match. Ideally, VSWR should be 1.25 or less (1.0 is a perfect match). A higher VSWR indicates a poor antenna match. This results in reduced transmission range, higher operating temperature in the power amplifier stage, and could shorten the expected life of some components.



The PX50 has an automatic VSWR fault detection capability that operates as follows. For Power settings greater than 15 Watts, the maximum VSWR that will be allowed before a fault is triggered is 2.0. For Power settings greater than 10 Watts but less than or equal to 15 Watts, the VSWR fault trigger point is 5.0. For Power settings equal to or less than 10 Watts, the PX 50 will allow any VSWR and not trigger to a fault condition. These conditions were designed based on the absolute amount of reflected power that the power amp can handle before damage may occur. This also allows an antenna to be tuned or matched with a power setting of 10 Watts or less, and the fault condition can not be triggered. Once the tuning or matching has been performed, the power can be increased to a higher desired operating point.

Once a VSWR fault has been triggered, the PX50 operates based on the settings from menu 13 (Power Fault), and menu 14 (Power Fault Timer). These menus determine what power level to return to after a fault, and what time, if any, to wait before returning to the specified power level.

### 5.05 Temperature Display

This allows you to monitor the running temperature of both amplifier stages. The driver amp is the 0-4W exciter on the main board, and the power amp is the 0-50W power amp. If either stage reaches a temperature of 70 degrees Celsius, a Temperature fault will be triggered, and the amplifier will automatically power down to 0 Watts to cool for a while. Power will resume once the temperature falls below 60 degrees Celsius. The power level that the PX50 will return to is set in menu 13 (Power Fault).



If you experience overheating, it may mean that your ventilation fan is not running, the vents are blocked, or the filters are clogged. Check regularly to be sure the vents are not blocked or clogged.

### 5.06 Set Volume Display

The first of the adjustment displays. If controls are not locked (as indicated by a dim display) then you can adjust the audio levels in this menu. To change the levels, use the Left and Right arrow keys to increase or decrease the volume setting. Step size is in 0.5dB increments. The adjustable range is -40 dBu to +10dBu. This will affect the overall gain of the input amplifiers and will display left and right level meters as well as the summed audio value for both left and right signals. Note that anything over the 13th solid bar is over 0dBu.



### 5.07 Set Modulation Display

This displays the signal levels that are being sent to the VCO of the transmitter. This includes the pilot, L+R audio, and any other signals added in. The two marks on the display indicate where the 100% modulation setting is. During editing mode use the Left and Right cursor buttons to adjust the audio levels to keep the bargraph from just touching the 100% markers. Over modulation causes breakup on a listener's receiver, and interference with adjacent channels. Press the up arrow once to



see the current audio level setting.

For your convenience there is also an automatic level adjustment. If you press the Enter key for 5 beeps on this display, the PX50 will sample the audio for a period of time and look at all of the peaks. Then it will adjust the audio levels for you to prevent over-modulation.

### 5.08 Set Modulation Limiting (AML)

This allows you to turn the "AML" (Automatic Modulation Limiting) feature on and off. The purpose of the AML is to prevent the modulation from reaching levels higher than the desired modulation level, but without having a sudden change in volume levels that may be undesirable to the listener. The Enter key is used to toggle the AML feature on and off. With AML turned on, the PX50 will constantly monitor the modulation level at the VCO, comparing it to the modulation threshold setting. The default threshold setting is 100% which represents  $\pm 75$  kHz. When turned on, the AML menu shows the modulation threshold setting, the user volume setting (set in either menu 5 or 6), and the actual volume level that the AML has automatically adjusted to.



```
AML: On Set: 0.0dB
M: 100% Fix: 0.0dB
```

For each time the modulation exceeds the threshold setting, the audio volume level will be automatically lowered a small amount. Once the modulation reaches the threshold setting it will stay near that level. After 10 seconds of not exceeding the threshold value, the audio levels will be imperceptibly brought back up at a slow rate until the PX50 is back at the original volume setting.

You may override the default threshold setting of 100% modulation ( $\pm 75$  kHz) by using the Right and Left arrow keys. If you want aggressive protection from over-modulating, lower the threshold value to under 100%. If you want to exceed the 100% modulation so that the AML is rarely active, raise the value to over 100%.

By default the AML mode should be left on at 100%. In fact the AML will never affect your gain settings unless your levels go over 100% modulation. If you have a properly adjusted compressor and/or limiter in front of the PX50, the AML will never activate. However, leaving it on provides a safety net to prevent interference with other stations.

### 5.09 Set Frequency Display

This menu is used to program the operating frequency of your radio station. There are two ways to adjust the frequency. You can simply use the Left/Right arrow keys to adjust the frequency lower/higher by increments of 100 kHz. Or, you can enter the frequency exactly with the editing mode (this may save time). To do this, first press the Enter key. Then, use the Left/Right arrow keys to choose which digit to adjust. Then, use the Up/Down arrow keys to change that particular digit. Then go to each digit and change as necessary. No decimal point is necessary upon entering the frequency. To set the frequency once it has been entered in, press the Enter key again. This display will also show you the state of the VCO and PLL. The PLL volt display shows the voltage currently used to lock the PLL. The higher the frequency, the



```
Adj Freq: 108.1MHz
Lock: Yes VCO: 11.0V
```

higher this voltage is. If this display reaches 12V or 0V, the PLL will not lock.

If the Locked indicator says it is not locked, no RF power is generated. This prevents interfering with other stations while adjusting the PX50's frequency. Power is automatically set to 0 Watts while adjusting, and then brought back up to the power setting slowly once the frequency is set.

### 5.10 Set RF Output Power Display

This menu is used to adjust the PX50's RF output power within the 0-50W range, in 1 W step sizes.

```
Set: 50W      cal
Act: 50W
```

Note that your Effective Radiated Power (ERP) is a function of your transmitter—antenna—feed line combination. The power display is calibrated based on the measured forward and reflected power at the RF output connector. Use the Left/Right arrow keys to adjust the power setting. They can either be pressed once to change by 1 Watt steps, or they can be held down to change the power setting at a faster rate. The amplifier will track and lock to that power setting as shown on the second line of the display. The PX50 will periodically compare this power setting with the measured output power, and make adjustments to maintain power over a variety of conditions such as reduction in supply voltage, temperature changes, or antenna changes.

### 5.11 Set Stereo Mode Display

This menu selects either stereo or mono broadcast modes. In mono mode the stereo modulator is completely shut down and the carrier is removed.

```
Adjust mode:
Mode: Stereo
```

This allows you to transmit a bit further with better sound. Most users will never use this mode other than for troubleshooting purposes. Controls must be in an unlocked condition to allow you to change this setting. Use the left and right keys to toggle this value.

### 5.12 Set Station ID Display

Use the right arrow key or Enter to begin editing the fields and the navigation keys to cycle positions and characters. All characters will be in upper case.

```
Station ID:
→RAMSEY
```

A maximum of 6 characters may be used. You can use all of the keys to adjust these values. This is simply designed to let you identify your unit in the event that you have more than one in a building.

### 5.13 Set Auto Power

This menu contains the two power Auto modes, which can be on or off. The top line indicates whether the auto power leveling is on or off. This

```
[+]Auto Power: On
[→]Pwr Protect: On
```

is the feature that maintains the set power level by periodically checking the output level. If disabled, power adjustments will not be made. Toggle this by using the Left Arrow Key. Default = ON.



The second line indicates the state of the reflected power (VSWR) protection. Default = ON. Use the Right Arrow Key to toggle. When you change the mode to off, a warning will display on how this mode could potentially damage your transmitter. Press the Enter key to accept this choice, any other key to leave it on.

If you are broadcasting at high RF levels and the reflected power becomes high, it can cause permanent damage to the transmitter. It is recommended you leave this ON at all times other than for testing purposes.

#### 5.14 Set Power Fault

This Menu allows you to set the power level the PX50 will restore to after a power fault condition has occurred. There are two ways that a power fault can be triggered; from either a VSWR fault (menu 3), or Temperature fault (menu 4). Use the right and left arrow keys to change the setting to one of the following choices: 7/8 (88%), 3/4 (75%), 1/2 (50%), 1/4 (25%), or no power (0%). The power will then be restored to the specified percentage of the original power setting.

```
Upon Power Fault  
restore to: 1/2 Pwr
```

#### 5.15 Set Power Fault Timer

This menu allows you to select a time for the PX50 to wait before it returns to the power level specified in menu 13 (Power Fault). This timer would only be applied after a VSWR fault. The other possible fault condition is a Temperature fault, in which the PX50 will return to the specified power level set in menu 13 only after the temperature drops below 60 degrees C, regardless of how long it takes. Use the right and left arrow keys to select a time from the following options: 0min, 1min, 5min, 10min, 30min, 60 min, 2hrs, 6hrs, 12hrs, or 24hrs.

```
After error, restore  
Pwr in: 5Min
```

#### 5.16 Set Test Timer

This allows you to choose a running time for the PX50 for testing purposes. By default, the timer is disabled (0min setting). To activate, change the setting to a time other than 0min with the Left/Right arrow keys, and then navigate to a different menu with either the Up or Down arrow keys. The possible timer settings are: 0min(timer disabled), 1min, 5min, 10min, 30min, 60 min, 2hrs, 6hrs, 12hrs, or 24hrs.

```
[←]Test Timer: 0Min  
[→]Set Defaults
```

Once activated and set to a timer setting, the PX50 will broadcast with all of its other current settings for the selected time, and then the RF output power will be set to 0 Watts. This allows you to "range test" the PX50 by driving away from the transmitter, and not having to return to power down the unit yourself.

Reset Defaults. This allows you to reset all of the settings back to default so all values will be the same as when the unit was shipped to you. Press the right arrow key twice to perform this.







## 6.01 APPENDIX A: FREQUENCY ASSIGNMENTS

### FM Broadcast Frequency Plan, US

Within the US, the FCC has allocated 100 channels within the FM Broadcast Band. Each channel is allocated 200 kHz of bandwidth.

Designator	Frequency MHz	Designator	Frequency MHz	Designator	Frequency MHz
200	87.9	234	94.7	268	101.5
201	88.1	235	94.9	269	101.7
202	88.3	236	95.1	270	101.9
203	88.5	237	95.3	271	102.1
204	88.7	238	95.5	272	102.3
205	88.9	239	95.7	273	102.5
206	89.1	240	95.9	274	102.7
207	89.3	241	96.1	275	102.9
208	89.5	242	96.3	276	103.1
209	89.7	243	96.5	277	103.3
210	89.9	244	96.7	278	103.5
211	90.1	245	96.9	279	103.7
212	90.3	246	97.1	280	103.9
213	90.5	247	97.3	281	104.1
214	90.7	248	97.5	282	104.3
215	90.9	249	97.7	283	104.5
216	91.1	250	97.9	284	104.7
217	91.3	251	98.1	285	104.9
218	91.5	252	98.3	286	105.1
219	91.7	253	98.5	287	105.3
220	91.9	254	98.7	288	105.5
221	92.1	255	98.9	289	105.7
222	92.3	256	99.1	290	105.9
223	92.5	257	99.3	291	106.1
224	92.7	258	99.5	292	106.3
225	92.9	259	99.7	293	106.5
226	93.1	260	99.9	294	106.7
227	93.3	261	100.1	295	106.9
228	93.5	262	100.3	296	107.1
229	93.7	263	100.5	297	107.3
230	93.9	264	100.7	298	107.5
231	94.1	265	100.9	299	107.7
232	94.3	266	101.1	300	107.9
233	94.5	267	101.3		

## 6.02 APPENDIX B: TROUBLESHOOTING

**PROBLEM: Nothing happens at all when I turn it on.**

**SOLUTION:** If you are operating your transmitter on primary AC power, verify that you are providing AC power to the power input connector. If so, check the primary AC fuse. If you are operating your transmitter on DC power, verify you are providing DC power to the DC input connector. If so, check the DC power fuse. If fuses are open, replace. If fuses blow again, contact Ramsey Technical Support.

**PROBLEM: Everything seems to work, but I have no RF output power.**

**SOLUTION:** The PX50 has an intelligent integrity checker built in to protect the transmitter. Antenna VSWR, frequency lock, and temperature is continually monitored. If they fall beyond a set range, the transmitter is disabled for protection. Verify PLL display says LOCKED. Verify your antenna system VSWR is acceptable. Also check the operating temperature of the transmitter. If it is above 60° C, check front air filters and check for proper air flow.

**PROBLEM: PLL will not lock.**

**SOLUTION:** At the extreme ends of the frequency band, the PLL may not lock if the power supply is low, for example running from batteries below normal operating voltage. If operating on DC, verify correct voltage. If the PLL still does not lock, contact Ramsey Technical Support.

**PROBLEM: One audio channel is dead.**

**SOLUTION:** Check your audio input at the rear XLR connectors. It is easy to verify presence of audio by swapping Left/Right and see if the problem follows the cables or the transmitter. If the opposite channel is dead, there is no audio on one audio input cable. If the same channel is dead, contact Ramsey Technical Support.

**PROBLEM: Distorted audio**

**SOLUTION:** Usual cause is overdriving audio levels into the transmitter. Verify and reduce levels as needed in the Audio Setup Screen. You can also use the Auto Adjust feature in the Modulation Adjust Screen by pressing and holding the center button. This will automatically adjust your levels to standard FM standards. Once levels are set, you can also use the AML feature to constantly monitor audio levels and adjust them as needed to prevent over-deviation.

**PROBLEM: Temperature readings are abnormally high.**

**SOLUTION:** The PX50 features a highly efficient cooling system. Fresh air is drawn in through two air filter ducts on the front panel, is circulated throughout critical components, and exhausted out the rear panel. Check the front air filters, and clean or replace as needed. Check that rear exhaust air is not blocked. Make sure rack mounted installations do not have doors that prohibit fresh air input to the front panel.



## 6.03 APPENDIX C: OPERATING TEMPERATURE CHARACTERISTICS

The following table is provided for your reference for normal operating conditions of the PX50. Check the transmitter running temperature in the Temperature Display Screen, and use the chart below to verify your transmitter is operating within specification at your ambient temperature.

If your temperatures are significantly higher than those show, check for restricted airflow in the PX50 and clean or replace the air filters in the front panel air intake.

The key to a continuous duty, long running transmitter is keeping it cool. Make sure not to block the airflow to the transmitter, and to frequently check the air filters. The PX50 has an automatic over temperature shutdown at 70° C Running the PX50 hot will shorten its lifespan considerably, especially at temperatures over 60° C. Be sure to use this product in a well ventilated or air conditioned room, and DO NOT BLOCK THE AIR VENTS! The PX50 does have over-temperature protection, but it is meant to shut down only at extreme temperatures to prevent short-term damage. The normal shutoff temperature is 70° C.

Power Output (In Watts)	Power Amp Operating Temperature Above Ambient (In degrees Celsius)	Driver Amp Temperature Above Ambient (In degrees Celsius)
50W	9	14
40W	9	13
30W	9	12
20W	9	12
10W	7	11
1W	4	9
0 W (Off)	2	7



## PX50 SPECIFICATIONS

Frequency Range:	87.5 to 108.1 MHz
Primary Power Input:	85-264 VAC, 47-63 Hz; 120-370 VDC
Backup Power Input:	12-14 VDC
Broadcast Modes:	Stereo/Mono + SCA and Digital RDS Inputs.
Bandwidth:	±75 kHz when properly adjusted, auto adjust feature prevents overmodulation.
Separation:	Better than 50 dB (typical 60–70 dB)
Crosstalk:	Better than 50 dB.
Asynchronous:	Better than 60 dB.
THD:	Better than 0.3% with processing.
Audio Inputs:	Standard Balanced Inputs +4 dBu/1.228V rms/3.47 V p-p; -10 to +10 dBm range.
Audio Input Impedance:	22K Ohms
SCA and Digital Inputs:	BNC (50 Ohms)
RF Output:	50W Continuous into a 50 ohm load. Fully adjustable from 1 watt to full power.
Harmonic Suppression:	Better than -81 dBc
Display:	2 lines x 20 characters vacuum fluorescent display.
Controls:	5 navigation controls (Up, Down, Left, Right, Enter)
Cooling:	High CFM Fan, dual filtered front intake, rear exhaust.
Over-Power Protection:	Continuously checks for proper power output to within 5%.
VSWR Protection:	Continuous VSWR monitoring, controlled via Power Reduction On Error and Power Restoration Timer settings.
Over-Temperature Protection:	Auto over-temperature control, 70°C max. fixed, controlled via Power Reduction On Error and Power Restoration Timer settings.
Auto Power Reduction On Error:	Automatically reduces power output to 85%, 75%, 50%, 25% or full disable of set power level.
Auto Power Restoration Timer:	Sets the time interval for automatic error checking to clear reduced power modes and to restore full set power level.
Overmodulation Protection:	Auto control of audio modulation levels, on/off.
Audio Frequency Range:	20 Hz to 16 kHz ±1 dB. Steep "brick wall" 16 kHz low phase shift, low pass filter, down 68 dB @ 19 kHz and above.
Adjustments:	Audio input levels, Modulation Level, Power Level, Frequency (in 100 kHz steps), Stereo/Mono mode, Auto Adjust Modulation mode (On/Off)
Regulatory Approval:	Meets or exceeds FCC 47CFR Parts 15.107(b), 15.109(b); FCC CERTIFIED FCC 47CFR Parts 2, 73, and 74 (ID: PF3PX50)
Dimensions:	Standard 2-unit rack-mount case, 19" wide, 14.25" deep, 3.5" high. (Note: The end user is responsible for complying with all FCC rules & regulations within the US, or any regulations of their respective governing body)

## Certification

Ramsey Electronics, LLC certifies that this product meets its published specifications at the time of manufacture, and that the calibration measurements are traceable to the United States National Bureau of Standards.

## Warranty

Ramsey Electronics, LLC warrants this product against defects in materials and workmanship for a period of one year from the original manufacture date. Ramsey Electronics, Inc., at its option, will repair or replace this product at no cost to the original owner during the warranty period, provided the product is proved to be defective.

### Warranty Service

To obtain warranty service, please contact Ramsey Electronics, LLC technical support:

**RAMSEY ELECTRONICS, LLC**


Technical Support  
590 Fishers Station Drive  
Fishers, NY 14564  
585-924-4560  
techsupport@ramseymail.com

Tech Support will help you diagnose your problem and, if necessary, issue an RMA for the return of your PX50. Equipment cannot be returned without a proper RMA number.

With your return, please include specific descriptions of the problem encountered as well as detailed contact information including daytime telephone number, E-Mail address, and complete return shipping address information.

### Limitations

This warranty shall not apply to products that have been improperly cared for, abused, or used outside the operating specifications of the product. This warranty shall not apply to products repaired or altered by persons not authorized by Ramsey Electronics, Inc. This warranty is in lieu of all other warranties, expressed or implied, and is solely for the use of the original product purchaser.





**RAMSEY ELECTRONICS, LLC**  
590 Fishers Station Drive  
Victor, NY 14564  
(585) 924-4560  
[www.ramseytest.com](http://www.ramseytest.com)

PX50  
May 2006  
V2.1.4